

 


# Savings Sounds Bank™

## WARNING:

Use of coins with this product can present a choking hazard for children under 3 years.


Thank you for buying this Playskool® product!  
Includes 2 installed "AA" batteries.  
Phillips screwdriver needed to replace batteries.  
No coins are included with this product.

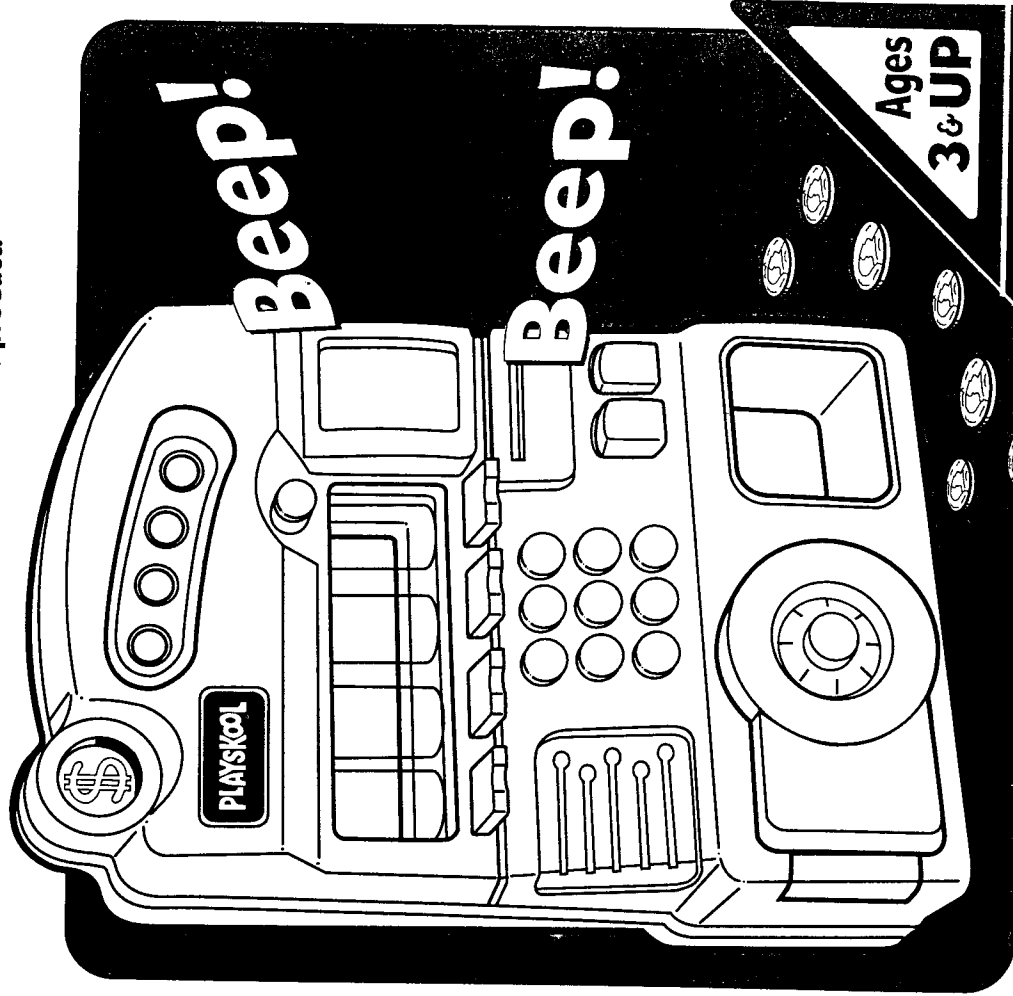

**FCC STATEMENT**  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this toy does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

© 1997 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.  
® denotes Reg. U.S. Pat. & TM Office.  
**MADE IN CHINA.**  
U.S. Patent Pending.

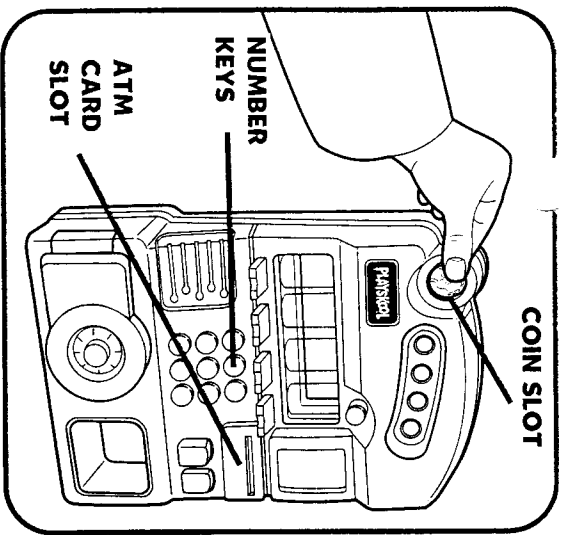

### TO DEPOSIT COINS:

1. The Playskool Savings Sounds Bank™ can hold pennies, nickels, dimes and quarters. To deposit coins, first slide the "ATM card" into its slot on right side of bank.
2. The teller's voice will ask you to "Enter secret code!" by pressing the number keys. The code can be as many or as few numbers as you wish.



3. Then, the teller will ask "Deposit or withdraw?" Press the "DEPOSIT" button, and then drop your coins into the coin slot at top of bank. The Savings Sounds Bank will automatically sort your coins into rows of pennies, nickels, dimes and quarters!

### TO WITHDRAW COINS:

1. To withdraw coins, press the card back into the slot, and the teller will once again ask you to enter your code, then ask "Deposit or withdraw?" Press the "WITHDRAW" button, then press the coin buttons to withdraw the amount of money you want. (For example, to withdraw 30¢, press the 25¢ button and the 5¢ button, and the quarter and nickel will drop down into the opening on bottom right of bank.)

### COIN SAFE:

1. When you press the coin buttons while in the "DEPOSIT" mode, the coins will drop down into the safe rather than coming through the withdrawal opening. To open or shut the safe, just turn the dial to lift or lock the latch. There is a tray inside the safe to make it easy to remove your coins!

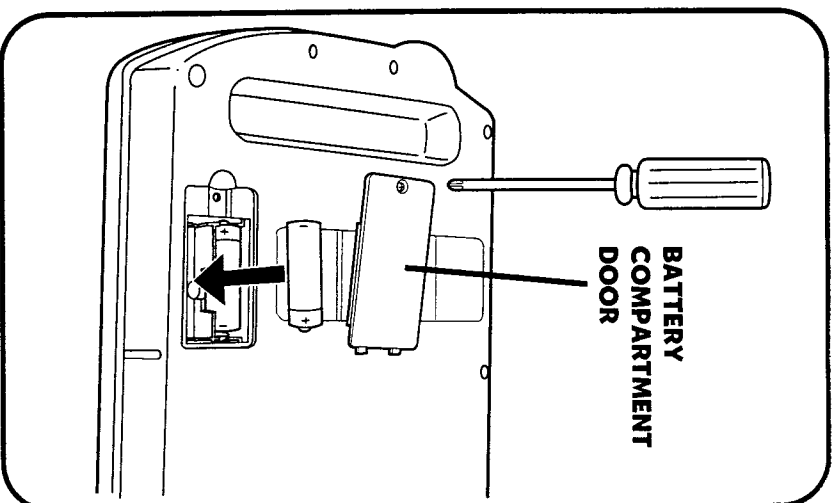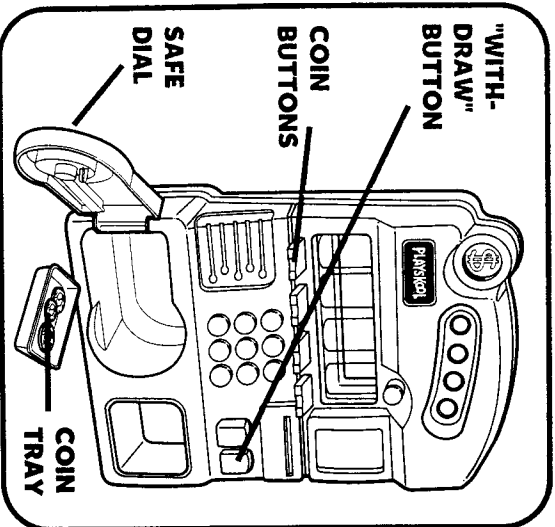

### WHEN BATTERIES NEED REPLACEMENT:

1. The Saving Sounds Bank comes equipped with 2 "AA" batteries. The battery compartment is located in back of the bank. When the original batteries are exhausted, use a Phillips screwdriver to loosen and remove the screw that secures the battery compartment door, and remove the door.

2. Insert 2 new "AA" (alkaline recommended) batteries into the compartment, following direction indicators inside compartment. Replace door and re-fasten with the screwdriver.

### CAUTION: TO AVOID BATTERY LEAKAGE:

1. Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instructions.
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable batteries.
3. Always remove exhausted or dead batteries from the product.