



Ages 2 & Up

Select-A-Station Stereo™

Thank you for purchasing the Select-A-Station Stereo™ from Playskool!
Phillips screwdriver (not included) needed to replace batteries.

HOW TO PLAY:

 
Choose from the 4 "radio stations" by turning the yellow knob to the desired station. The 4 "stations", from left to right, are Pop, Easy Listening, Classical and Country/Western. (Each station is labelled with an illustration.) Press the blue buttons to choose the songs:

POP

1. "Pop Goes the Weasel"
2. "Row Row Row Your Boat"
3. "Three Blind Mice"
4. "Are You Sleeping?"

EASY LISTENING

1. "Greensleeves"
2. Brahms' Lullaby ("The Cradle Song")
3. "Mary Had a Little Lamb"
4. "Twinkle Twinkle Little Star"


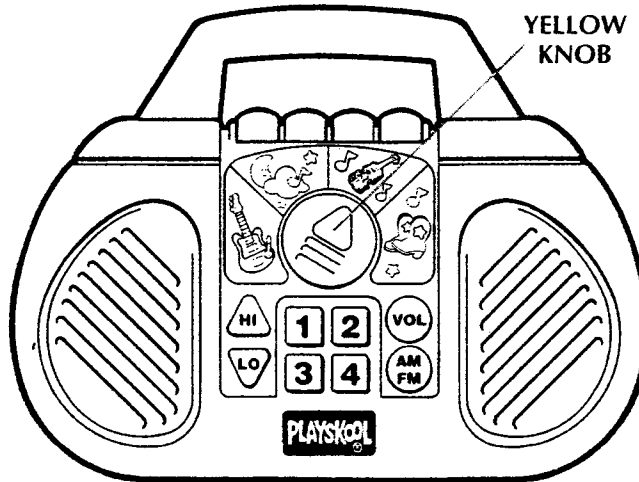


CLASSICAL

1. Eine Kleine Nachtmusik (Mozart)
2. "Für Elise" (Beethoven)
3. Beethoven's Fifth Symphony
4. "William Tell Overture"

COUNTRY/WESTERN

  1. "Home On the Range"
2. "Oh Susannah!"
3. "Turkey In the Straw"
4. "Old Mac Donald"

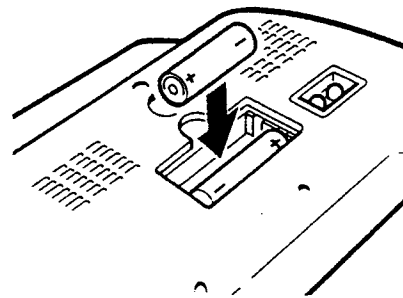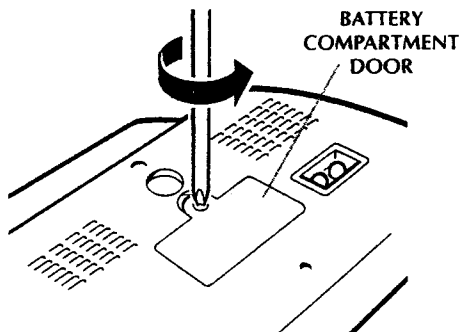

REPLACING THE BATTERIES:

The Select-A-Station Stereo comes equipped with 2 "AA" batteries. The battery compartment is located on the back of the stereo. When the batteries are exhausted, use a Phillips screwdriver to loosen (but not remove) the screw that secures the battery compartment door, and remove door.

Insert 2 "AA" batteries into the compartment, following direction indicators inside compartment. Replace door and refasten with the screwdriver.

CAUTION:
TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instructions.
2. Never mix old batteries with new batteries, or alkaline, standard (carbon zinc) or rechargeable batteries.
3. Always remove exhausted or dead batteries from product.
4. Remove batteries if product is stored for a long period of time.