



Busy®



# Rocking Seat

Dear Friends,

Thank you for purchasing this Sesame Street product. The Busy® Rocking Seat has 2 adjustable positions for babies from 6 months to 2 years, and lots of easy to reach play activities featuring smiling Sesame Street characters. Your child will have a rockin' good time with this fun-filled first rocking seat!



6 - 24  
mos.

I N F A N T

MAXIMUM WEIGHT: 30 LBS.

ADULT SUPERVISION REQUIRED. DO NOT LEAVE CHILD UNATTENDED WHEN PLAYING WITH THIS TOY. THIS TOY SHOULD NOT BE USED NEAR SWIMMING POOLS, ON OR NEAR HILLS, ROADWAYS, SLOPED DRIVEWAYS, ALLEYS OR STEPS. THIS TOY IS DESIGNED FOR ONLY ONE CHILD AT A TIME.



© 1994 Children's Television Workshop. Jim Henson's Sesame Street Muppet characters © 1994 Jim Henson Productions, Inc. Sesame Street and the Sesame Street sign are trademarks and service marks of the Children's Television Workshop. This product was developed by Playskool in cooperation with Children's Television Workshop, producers of SESAME STREET. Workshop revenues from this product will be used to help support CTW educational projects.

© 1994 Playskool, Inc., Pawtucket, RI 02862 USA, a subsidiary of Hasbro, Inc.

All Rights Reserved.

© denotes Reg. U.S. Pat. & TM Office.

FABRIC SEAT HARNESS AND SESAME STREET CHARACTERS MADE IN CHINA.

ALL OTHER PARTS MADE IN USA.



50514

P/N 43932401


4525

**ADULT ASSEMBLY REQUIRED**  
Phillips® screwdriver required for assembly  
(not included).


**INCLUDES:**

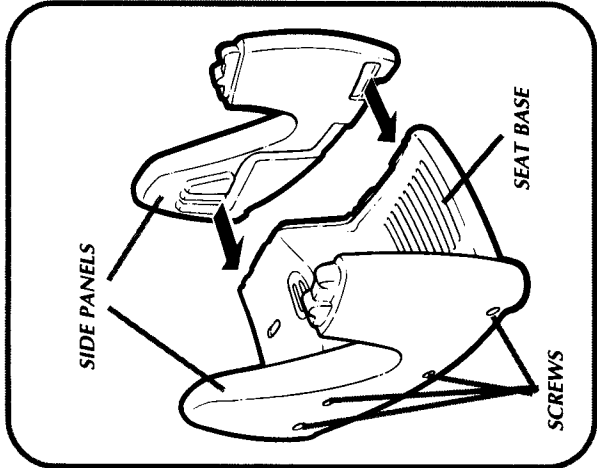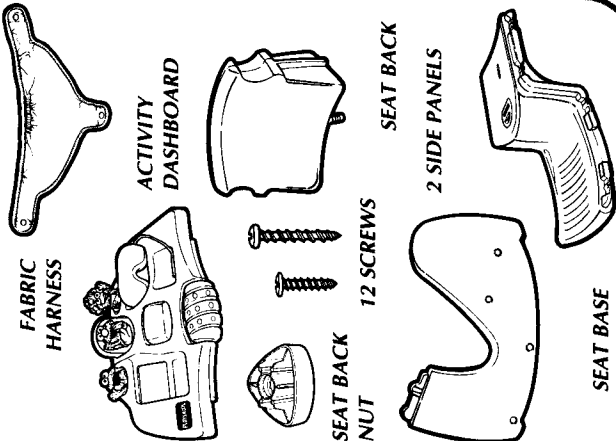


1. Assemble the side panels to the seat base. Use a Phillips® screwdriver and the large screws included to fasten the panels to the base. (Make sure that holes in side panel line up with holes in base before fastening; start with screw that lines up with seat and work your way down, left to right on panel shown and right to left on other side.)

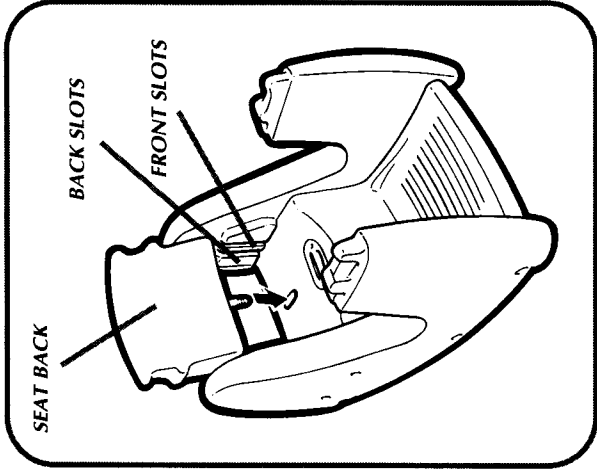


2. Add the seat back to the rocker assembly as shown. The side panels have 2 size settings to hold the seat back; depending on your child's age and size, you can fit the seat back into the front slots (infant setting) or the back slots (for slightly older children).

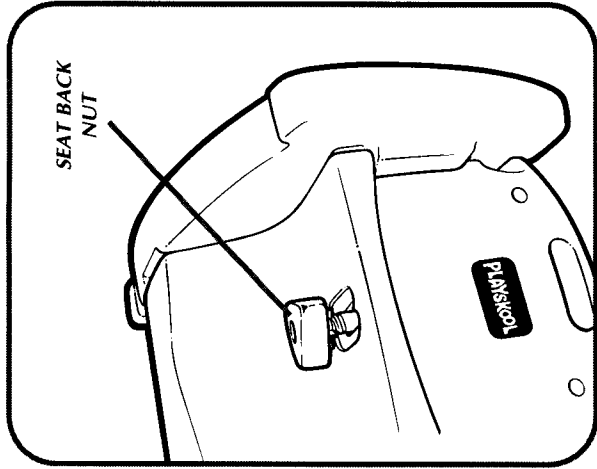


3. Turn the assembly upside down. Fasten the seat back with the nut as shown. Twist the nut tightly, all the way, to ensure that the seat back is securely in place.

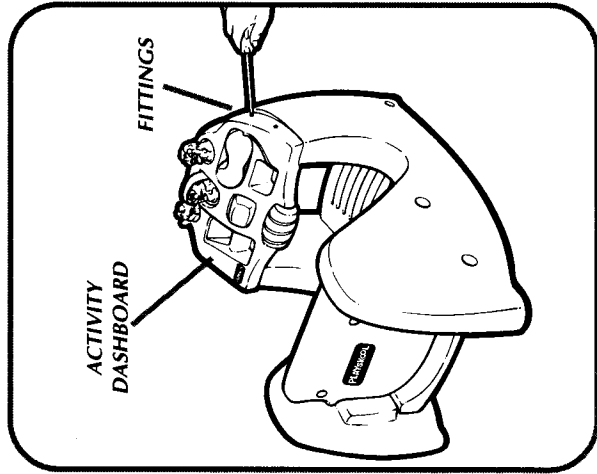


4. Fit the activity dashboard into its fittings on the front of the rocker assembly as shown. Use the small screws (2 on each side) to fasten the dashboard to the rocking seat.

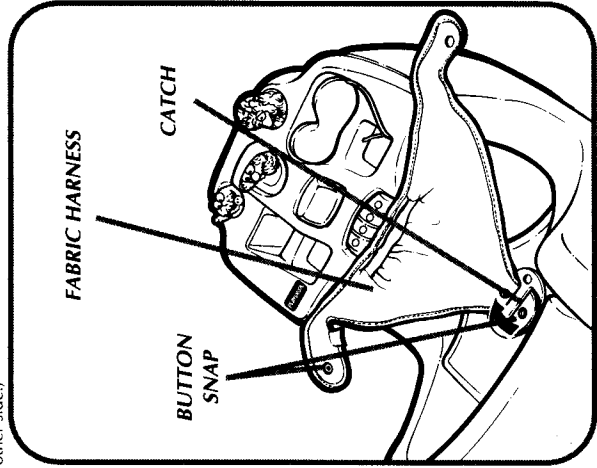

5. In the infant stage (until your child can sit up on his/her own), you will want to use the fabric harness to secure your baby in the seat. Slip the bottom of the harness through the front of the catch (which is molded into the seat), loop it up through the back, and snap the button snap together as shown.

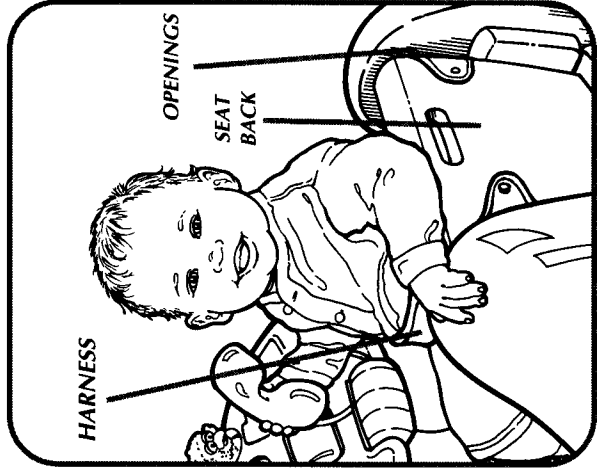

6. After placing your baby in the seat, pull the harness back and snap the 2 button snaps into their place in the back of seat. The seat back has special openings on each side to slip the harness through and around.

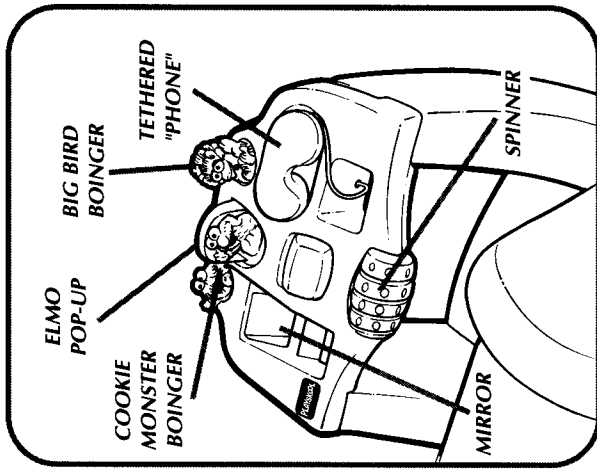

7. Your child is ready to rock! And as your baby rocks, the colorful Sesame Street characters and fun activities add to the play.