

Shakin' Jake™

Create delicious drinks with a shimmy and a shake!

 
Note to Parents:

Wash all parts thoroughly before use.

Remove parts from plastic bag and discard bag immediately.


Requires 2 "C" batteries (not included).

Drink ingredients not included.

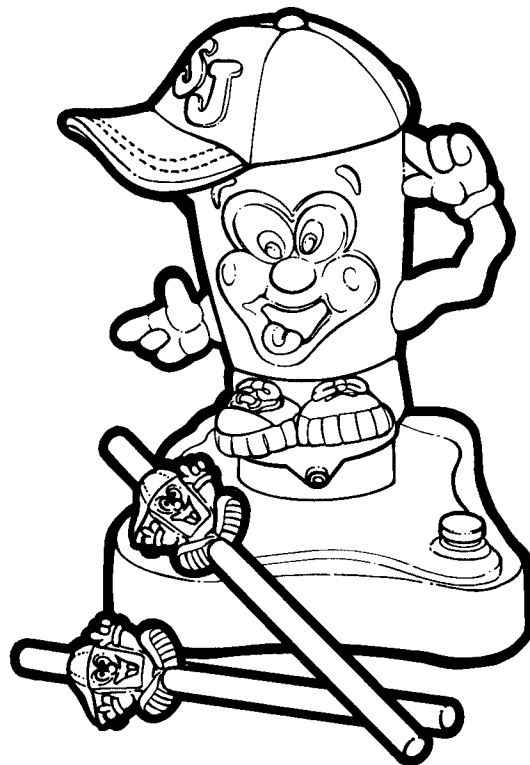


TO INSERT BATTERIES:

 1. Loosen screw in battery compartment door on bottom of base. Remove door.
2. Insert 2 fresh "C" batteries into compartment as shown.
3. Insert tabs on door into slots in compartment, and replace door. Tighten screw.

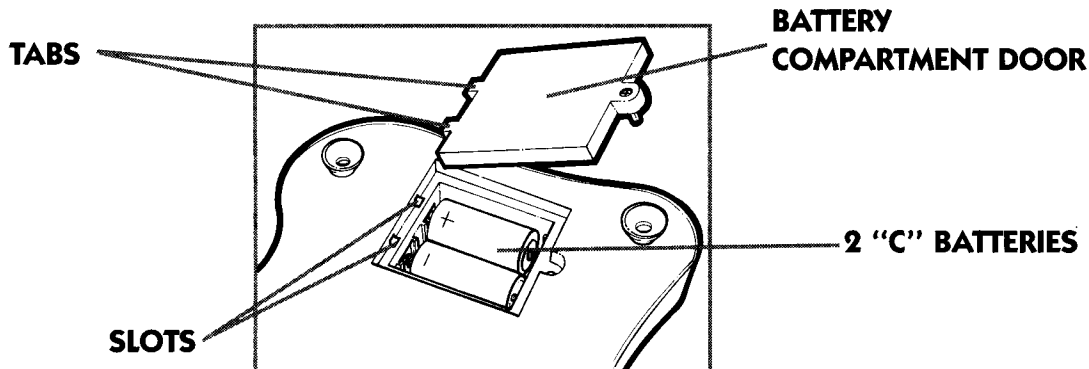



CAUTION: TO AVOID BATTERY LEAKAGE

 1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old batteries and new batteries.
3. Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
4. Always remove exhausted or dead batteries from the product.

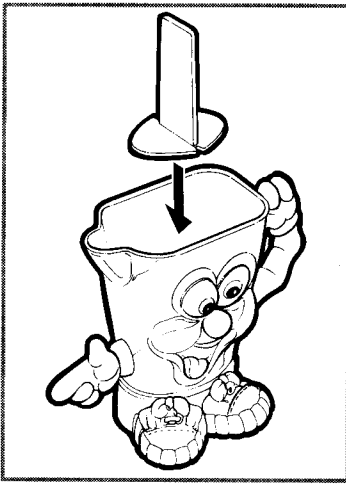

TO ATTACH PADDLE:

  
Align notches on paddle with tabs inside Shakin' Jake. Firmly press paddle all the way down to make sure it is securely attached.

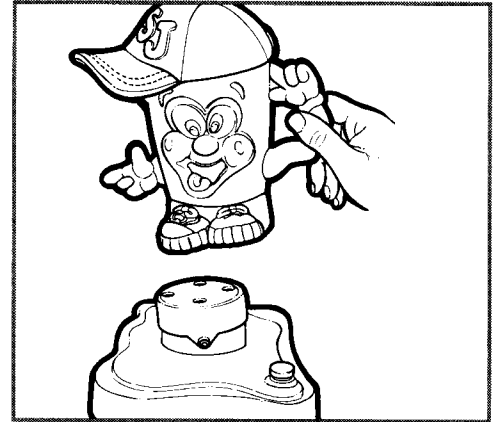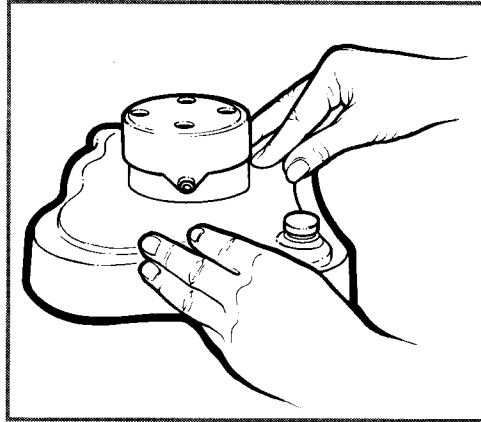


TO USE:

1. Place base on a flat, smooth surface, and firmly press it down to secure suction pads to surface.

 2. Slide Shakin' Jake™ onto base.

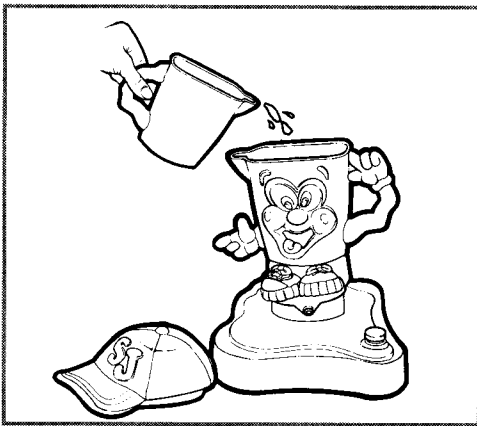

 3. Follow recipe directions. Make sure you put Shakin' Jake's cap on his head before starting him. To help prevent splashes and spills, do not fill him past the FILL line (marked on back of Shakin' Jake).

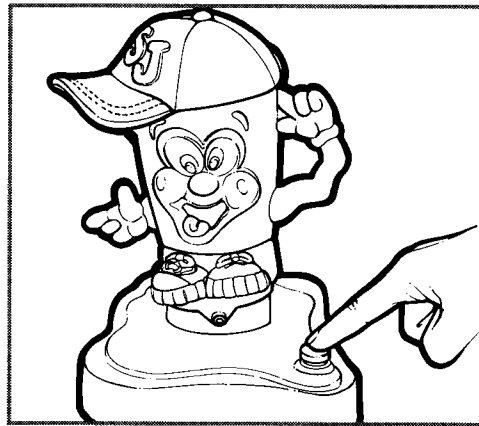

4. Press button on base to give Shakin' Jake a shake. He shakes as long as you press the button. Remove your finger from the button and he stops shaking.

TO CLEAN:

1. DO NOT IMMERSE BASE IN WATER! Wipe base with a damp cloth only.

2. Wash Shakin' Jake, paddle, cap and straws in warm water and mild dishwashing detergent, and rinse with clean water. Remove paddle when washing. Cap is made of 2 pieces; remove inside of cap from outside before washing the pieces; replace inside of cap after pieces are dry. Re-attach paddle after cleaning.