


PLAYSKOOL[®]

Shoppin' Sounds Cash Register™

Includes 2 "AA" batteries. When batteries need replacement, a Phillips screwdriver is required (not included).

REGISTER ACCESSORIES:

After removing the Shoppin' Sounds Cash Register from its package, remove the accessories, which are packaged to the left of the register:

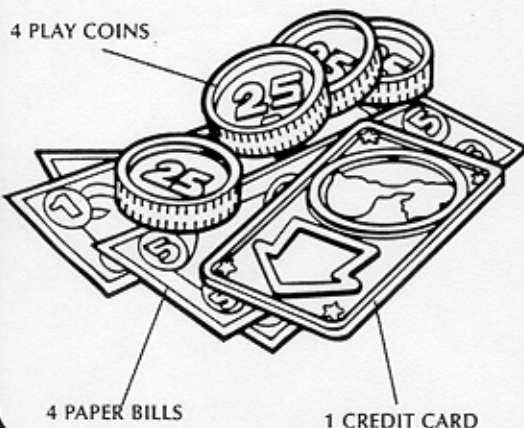

PLAY INSTRUCTIONS:


PRESS RIGHT BUTTON TO SEND COINS INTO REGISTER DRAWER!

PRESS LEFT BUTTON TO SEND COINS INTO THE CHANGE RETURN!


PRESS ANY KEY FOR FUN SOUNDS!

PRESS HERE TO OPEN THE CASH DRAWER!

THE CASH DRAWER HOLDS ALL ACCESSORIES!

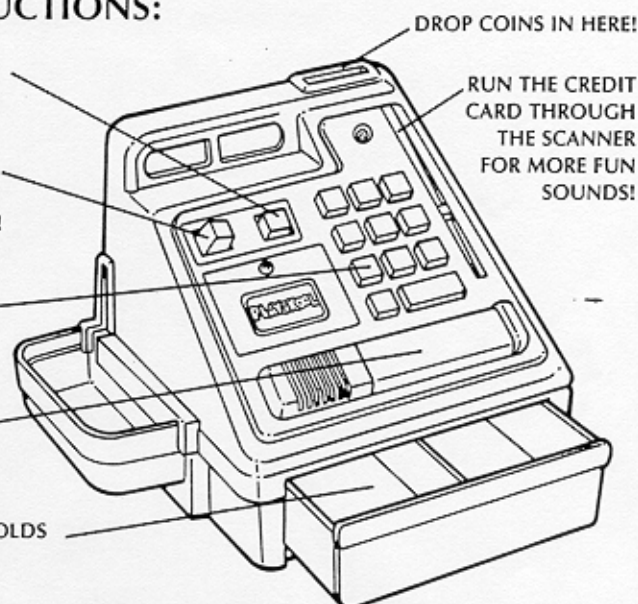

REPLACING THE BATTERIES:

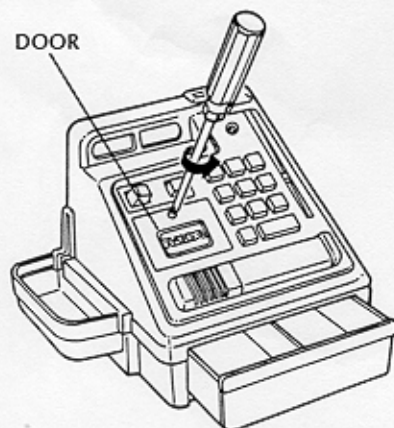

The Shoppin' Sounds Cash Register comes equipped with 2 "AA" batteries. The battery compartment is located on the front of the register, just below the toggle switch. When the batteries are exhausted, use a Phillips screwdriver to loosen the screw that secures the battery compartment door, and remove door.

Insert 2 "AA" batteries into the compartment, following direction indicators inside compartment. Replace door and re-fasten with the screwdriver.

BATTERY COMPARTMENT



CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instructions.
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Always remove exhausted or dead batteries from the product.
4. Remove batteries if product is stored for a long period of time.

FCC RULES FOR A CLASS B DIGITAL DEVICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

