

AGE 3+


2017

PLAYSKOOL®

SIT 'N SPLASH™

**Thank you for buying this
Playskool® brand product!**

**Includes base, post, wheel, and 2 screws (taped to top of
base). Phillips/crosshead screwdriver (not included)
required for assembly.**

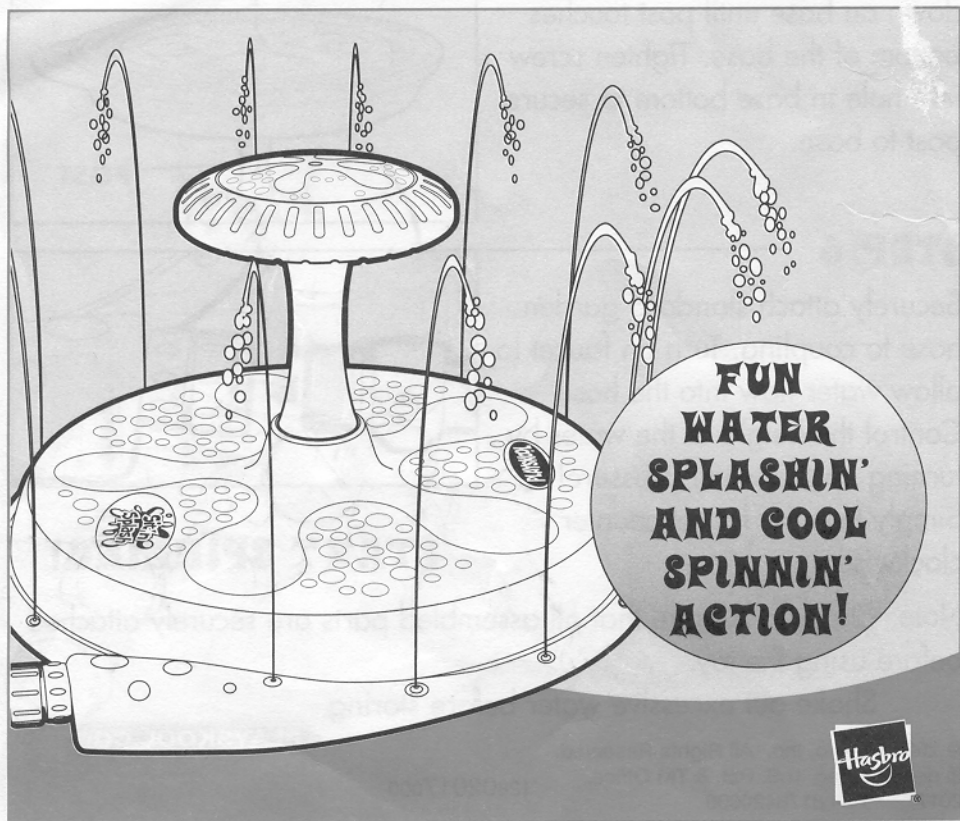

**FUN
WATER
SPLASHIN'
AND COOL
SPINNIN'
ACTION!**




ASSEMBLY

TOYS


STEP 1

Remove 2 screws taped to top of base. Insert wide end of post into top of base. Attach wheel to top of post. Fasten wheel to post with screw.

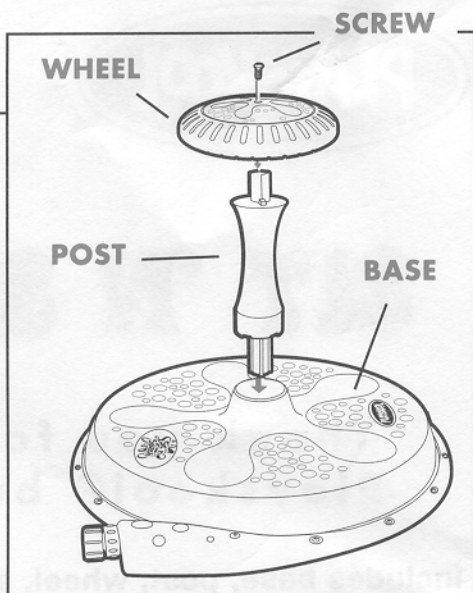


STEP 2

Flip base upside down, and push down on base until post touches bottom of the base. Tighten screw into hole in base bottom to secure post to base.

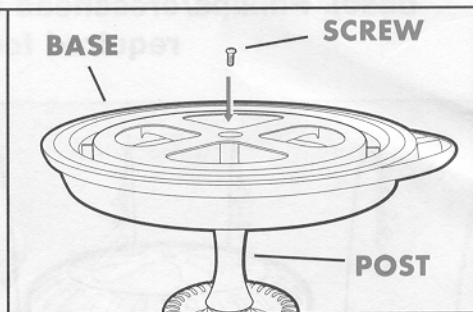

STEP 3

Securely attach standard garden hose to coupling. Turn on faucet to allow water flow into the hose. Control the height of the water by turning up the water pressure! Simply turn the faucet counter clockwise.

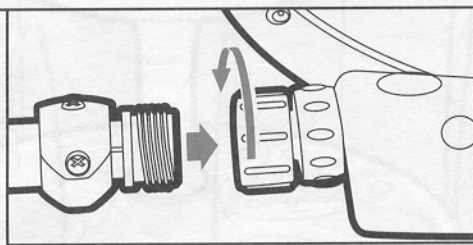

START SPINNING!

Note: Check to be sure that all assembled parts are securely attached before using the toy.

Note: Shake out excessive water before storing.

© 2002 Hasbro, Inc. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office.

2017 P/N 6178420000

12802017000

PLAYSKOOL.COM
FOR NEW PRODUCTS AND OFFERS

Questions? Call: 1-800-PLAYSKL