

FOR AGES 5 & UP
MODEL 09-234



SMART STICKS[®] TIME Instruction Manual



INTRODUCTION

Smart Sticks are hand held electronic learning aids for preschoolers. There are five fun titles to choose from and collect: Colors & Shapes, Numbers, Animals, Alphabet and Time. Each unit features fun, easy-to-play preschool games to reinforce basic concepts. Each Smart Stick has speech, sound effects and bright, colorful buttons to capture a young child's attention.

KEY FUNCTIONS

Mode Switch

- Slide the switch to select one of the 2 modes:
Mode 1 : Find
Mode 2 : Identify

Function Buttons

- Press these buttons to activate unit.

"GO" Button

- Press this button to turn ON the unit and to activate the selected time.

 
Alarm Clock Button

- Press this button to hear the alarm clock ring.

Clock

- There are 2 "hands" on the face of the clock:
The large yellow "hand" designates the minutes.
The small purple "hand" designates the hour.

NOTE: Please note that the IDENTIFY position also serves as the OFF position. When you are done playing with your Time Smart Stick, please move the mode switch to this position. The unit will automatically shut off after 3 minutes of non-use.

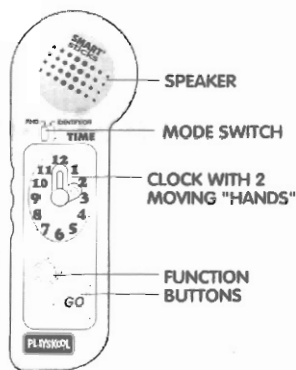

HOW TO PLAY

1. To activate your Smart Stick, press the GO button. A song will play before the game begins.
2. Your Smart Stick will begin play in the mode selected. If you wish to play a different mode, slide the MODE SWITCH to the other mode. You can change modes at any time during play.

The 2 modes are: Mode 1 : Find
Mode 2 : Identify

GAME PLAY

MODE 1 - FIND

- Slide the MODE SWITCH to the FIND position (left).
- An encouraging voice will ask your child to find a specific time on the clock.
- Your child enters the answer by moving the clock hands to the correct time and then pressing the GO button. The small hand is the "hour hand" and the large hand is the "minutes hand".
- If the incorrect time is entered, the unit will acknowledge the time entered and repeat the original question. If your child guesses incorrectly three times, the unit will automatically ask the child to find a different time.

NOTE: Do not set the hands between the numbers. The hands must be on top of the number.

MODE 2 - IDENTIFY

- Slide the MODE SWITCH to the IDENTIFY position (right).
- Move the clock hands to any position and press the GO button
- The unit will identify the time entered. Move the clock hands to another time and press the GO button again.

REPLACING THE BATTERIES

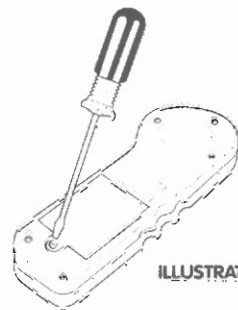 


ILLUSTRATION 1



ILLUSTRATION 2

NOTE: Battery installation should be done by an adult. Always install the batteries correctly according to the positive (+) and negative (-) signs on the batteries.

1. Open the battery compartment door on the back of the unit using a flat-head screwdriver or coin. (Illustration 1)
2. Insert 3 "AAA"/UM4/LR03 batteries. Be sure to match the "+" and "-" as shown. (Illustration 2)
3. Close the battery compartment door and replace screw using a flat-head screwdriver or coin.

CAUTION

To ensure proper function and avoid battery leakage:

- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity, and follow the toy and battery manufacturer's instruction.
- Exhausted or dead batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Remove the batteries if you won't be using the Smart Stick for a long period of time.

CAUTION : As with all small batteries, the batteries included with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.

TROUBLESHOOTING

1. If the unit does not work, please check that the batteries have been inserted correctly.
2. If the volume is too low, please install new batteries.

If you are still having trouble after checking all of these things, please call our toll-free number at 1-800-TIGER ED and a representative will be happy to help you.

CARE AND USE/MAINTENANCE

To protect **Smart Sticks Time** follow these instructions:

- Prevent spills of food and beverage on the unit.
- Do not submerge the product in water. If the product needs to be cleaned, wipe it gently with a barely damp, soft cloth.
- Do not throw or kick the product, and do not push sharp objects through the speaker opening.
- Do not put the Smart Stick in direct sunlight or near any source at heat.
- Designed for children 5 and up.

WARRANTY

Tiger Electronics, Ltd. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S. \$7.50. Payments must be by check or money order payable to Tiger Electronics, Ltd.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

 
All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Ltd. Repair Dept.
980 Woodlands Parkway
Vernon Hills, Illinois 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions of limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

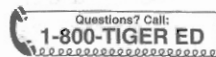

For more information about Tiger Electronics, our products and special promotions, please visit our Web Site at: www.tiger toys.com

© 1998 Hasbro, Inc. All rights reserved. PLAYSKOOL and the PLAYSKOOL logo are registered trademarks of Hasbro, Ltd. This product is distributed by Tiger Electronics, Ltd. under license from Hasbro, Inc.
©, TM, & © 1998 Tiger Electronics, Ltd. All rights reserved. 980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A.
PRINTED IN CHINA