

AGES 4+  
30001



# SNOOPY® SNO-CONE MACHINE

 
Adult supervision recommended for younger children.

Thank you for choosing this classic treat-maker! Please read and follow all instructions carefully for maximum use of the product.

Before first use, wash all parts thoroughly in warm water. **DO NOT WASH THE SNOOPY SNO-CONE MACHINE IN DISHWASHER OR IN HOT WATER.**

## Includes:

Sno-Cone Machine,  
Woodstock scoop,  
ice pusher,  
FLAVOR AID® soft  
drink mix, 6 paper  
cups, handle, handle  
cap, anti-skid pad  
sheet, label sheet and  
instructions.

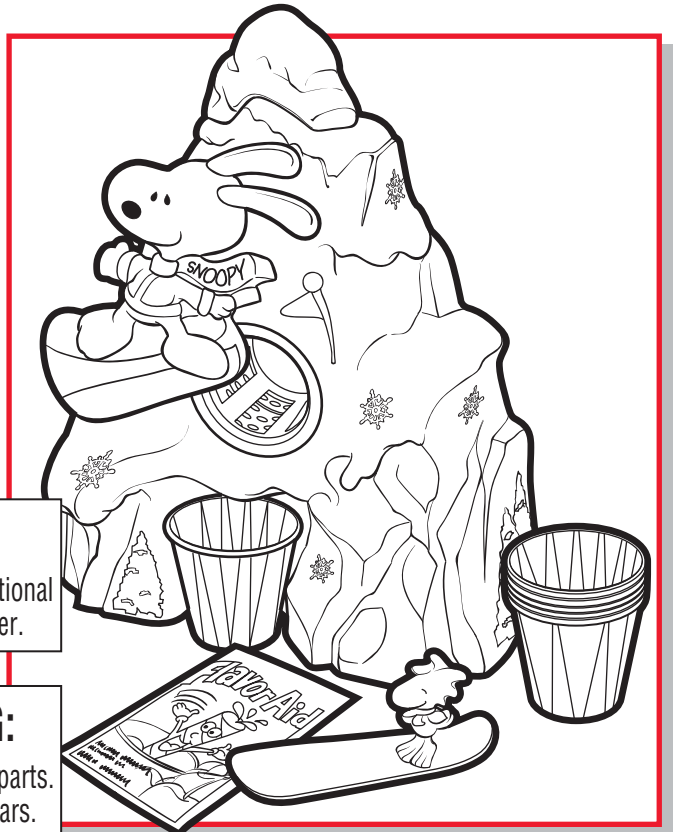

## CAUTION:

This product contains functional sharp edge on the ice shaver.



## WARNING:

CHOKING HAZARD - Small parts.  
Not for children under 3 years.

# TO ASSEMBLE

 
1. Fit handle into opening on back of machine so that notches on handle fit over tabs on barrel.

BARREL

TABS

NOTCHES

HANDLE

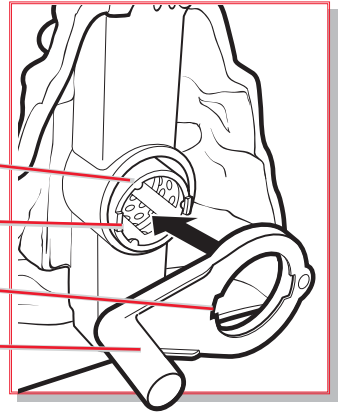


2. While holding front rim of barrel, fit notches on handle cap between tabs on barrel. Turn handle cap clockwise until it locks into place.

NOTCHES

BARREL


TABS

 HANDLE CAP

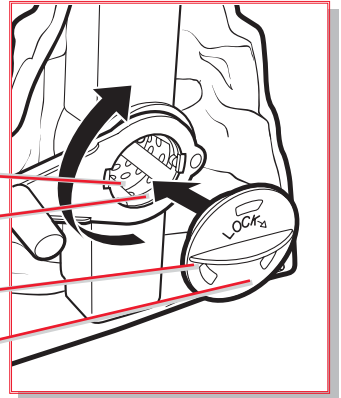


3. Peel and apply anti-skid pads to bottom corners of machine.

 4. Peel and apply labels as shown.

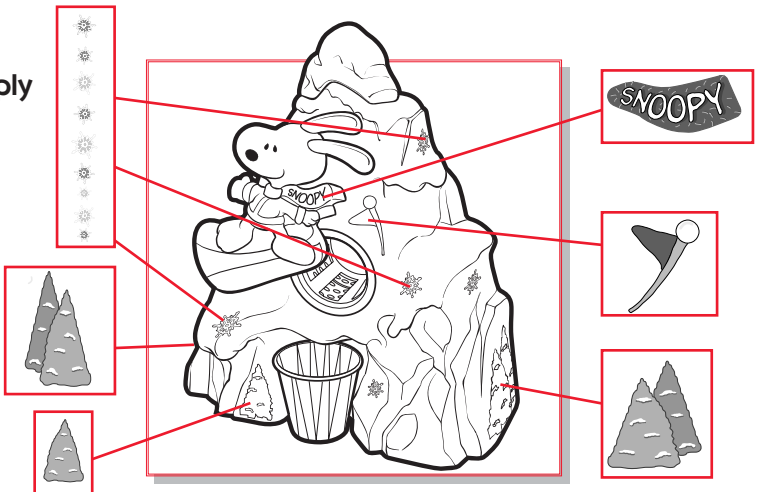


## TO MAKE FLAVORING

 Combine 1 cup of sugar (to taste), 1/2 cup of water and 1 packet of FLAVOR AID® flavoring syrup in a mixing bowl. Stir ingredients until sugar and flavoring are completely dissolved.

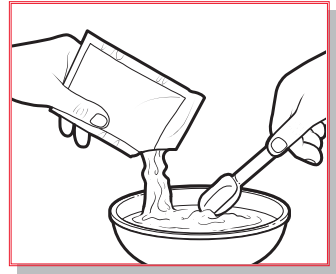

## TO MAKE SNO-CONES

 1. Drop ONE ice cube into the ice chute. Fit ice pusher into the top of the ice chute. (Be sure to use only 1 ice cube at a time.)
2. Turn handle clockwise about 6 times without applying any pressure on the ice pusher. Then, while still turning the handle, gently push down on the ice pusher and the ice shaving will begin. As you turn the handle Snoopy "rides" his snowboard!

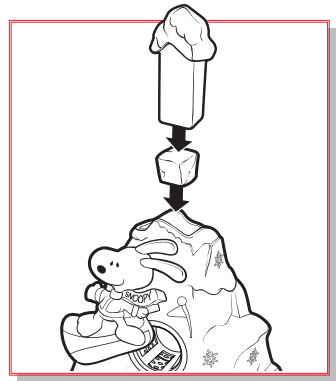

### IMPORTANT –

**PUSHING DOWN ON THE ICE PUSHER BEFORE TURNING THE HANDLE MAY CAUSE JAMMING AND DAMAGE TO THE BARREL.**

The shaver handle will turn easily or hard depending on the amount of pressure you apply to the ice pusher. With a little practice, you will learn to apply just the right amount of pressure.

Keep turning the handle clockwise until the ice cube is gone.

3. Once you have enough ice shavings to make a Sno-Cone, use the Woodstock scoop to shovel ice shavings into one of the paper cups.
4. Drip the FLAVOR AID flavoring over the ice shavings until saturated.



**NOW, YOU'RE READY TO ENJOY YOUR TREAT!**

## ADDITIONAL SUGGESTIONS

Additional packets of FLAVOR AID® flavoring can be purchased at food stores.

You can also fill an ice-cube tray with lemonade or fruit juice and freeze it. Then, place the cubes, one at a time, into the machine and shave the ice to make flavored snow.

## CLEANING INSTRUCTIONS

Rinse your Sno-Cone Machine with warm (not hot) water and wipe dry. If further cleaning is desired, remove the handle from the machine. After each use, shake out any water or ice particles left in the machine.

If you have any questions, comments, or need additional information concerning this product or its parts, please call our Hasbro Consumer Affairs hotline at 1-800-327-8264, Monday through Friday during business hours (Eastern Time).

PEANUTS © United Feature Syndicate, Inc.

FLAVOR AID® manufactured by the Jel Sert Company,  
West Chicago, Illinois 60186 U.S.A.

®\* and/or \*\*\* & © 2003 Hasbro. All Rights Reserved.

