

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.




AGES 2+  
6728

# Song Magic™ Guitar


**Thank you for choosing this Playskool® toy!**

**Includes 3 "AA" batteries. Phillips screwdriver (not included) required to replace batteries.**

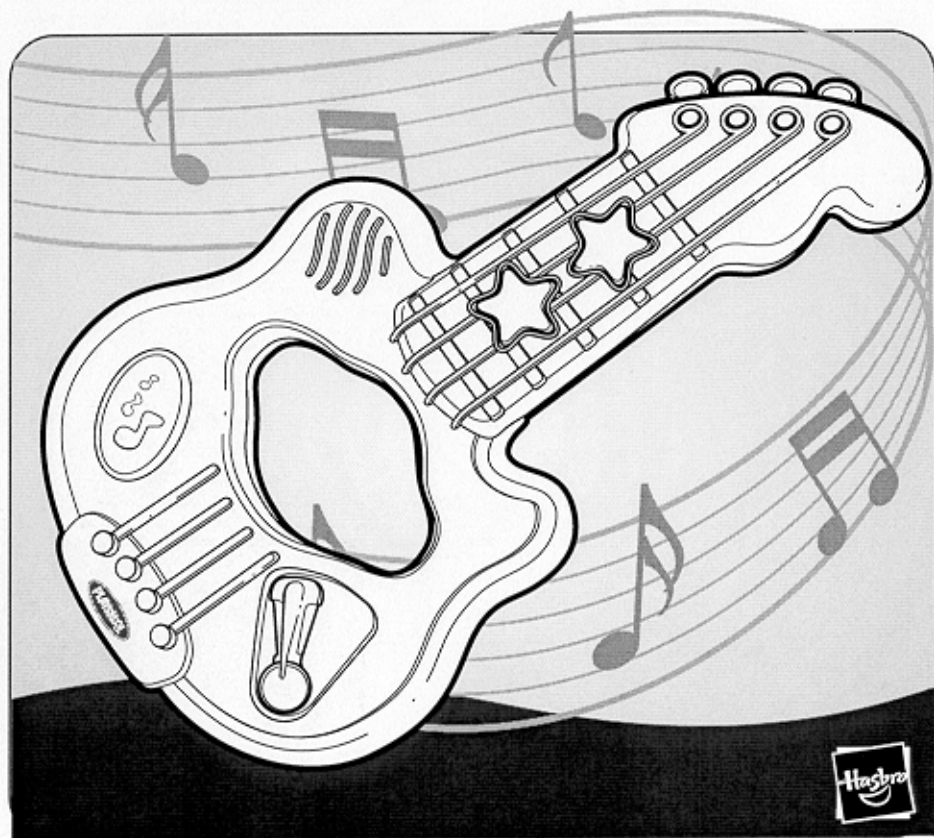

## TO PLAY THE GUITAR

1. Press the green oval button to start the music. To continue playing the song wave your hand in the center of the guitar!  
(Note: Be sure to wave hand in front of the light beam.)
2. To change songs at any time, press the oval button. There are 5 songs to choose from.
3. Push down the "whammy" bar to make fun sounds!

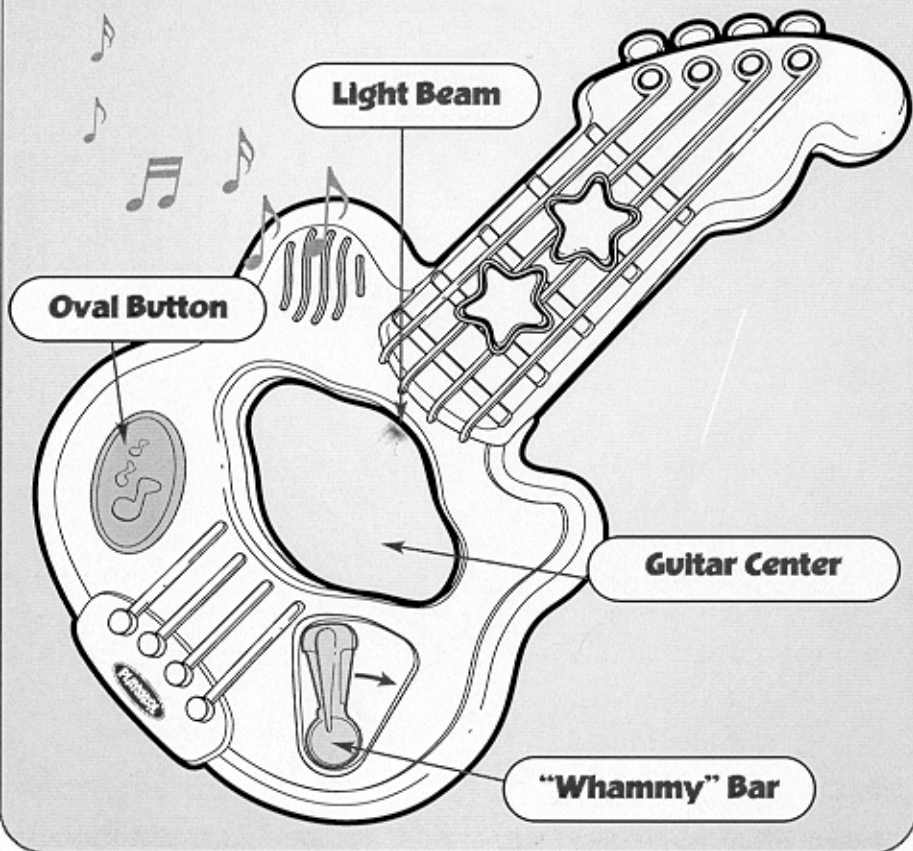

## Song List


- |   |  |
|---|--|
| ♪ <b>Mary Had a Little Lamb</b><br>(rock version) | ♪ <b>When the Saints Go</b><br><b>Marching In</b> (rock version) |
| ♪ <b>Pop Goes the Weasel</b><br>(rock version)    | ♪ <b>Original Blues Tune</b>                                     |
|   | ♪ <b>Original Pop Tune</b>                                       |

## AUTOMATIC SHUT-OFF FEATURE

The toy automatically shuts off after approximately 14 seconds of nonuse.

## TO INSTALL NEW BATTERIES

1. With Phillips screwdriver, loosen screw in battery compartment door. Remove door (screw remains attached to door).
2. Discard old batteries. Insert 3 fresh "AA" alkaline batteries into compartment as shown. Replace door and tighten screw.

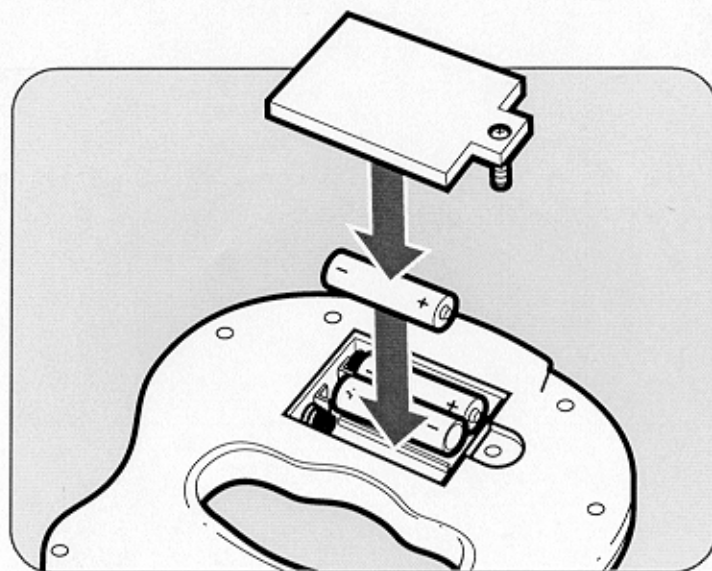

## ⚠ CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.