 




Sounds Around Driver®

Thank you for purchasing the Sounds Around Driver from Playskool!
If you have any questions or comments, please call us toll-free at 1-800-PLAYSKL.


Includes: Toy with batteries, attachment strap and instructions.
Phillips screwdriver needed for battery replacement.




REMOVE STRAP FROM PLASTIC BAG AND DISCARD BAG IMMEDIATELY.

CAUTION: When toy is used in crib, the crib sides should be raised and the crib mattress should be in one of the lower positions.

TO ATTACH TOY TO STROLLER:

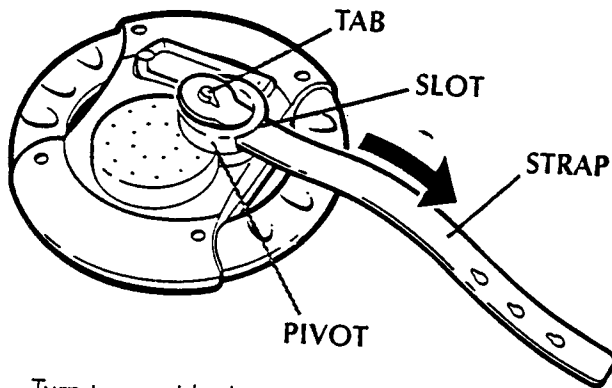


1. Turn toy upside down. With tab on strap facing up, slide strap through slot in pivot, from inside of pivot to outside, until round end of strap is in center of pivot.

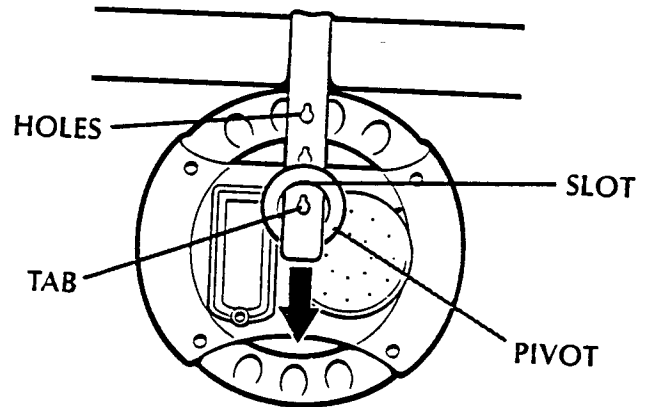


2. Hold toy against stroller bar, and loop strap around bar. Slide end of strap back through slot in pivot and press tab into one of the holes.
Note: The pivot allows the toy to spin 360°, so baby can turn the toy all the way around while playing.

TO REPLACE BATTERIES: Playskool has included batteries in this toy. When batteries are exhausted, replace them with 2 "AA" batteries (alkaline recommended) as follows:

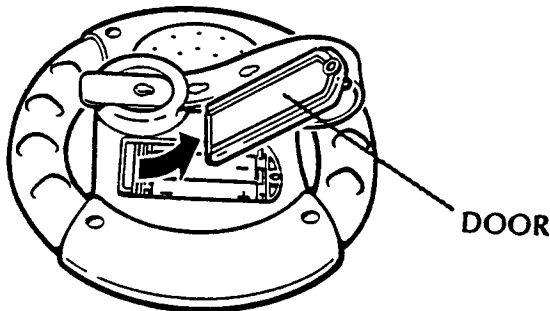

1. Using a Phillips screwdriver, loosen screw in battery compartment door on back of toy. (Screw will remain attached to door.) Remove door.

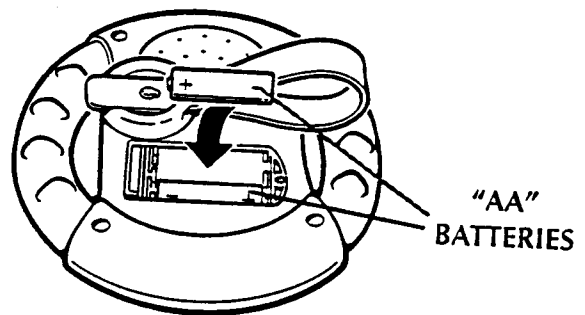

2. Remove exhausted batteries. Insert 2 fresh "AA" batteries as shown. Slide end of door under tab on compartment opening, and lower door into place. Tighten screw.

CAUTION: TO AVOID BATTERY LEAKAGE

1. Make sure the batteries are inserted correctly and always follow the toy and battery manufacturer's instructions.
2. Do not mix old batteries with new batteries.
3. Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.
4. Always remove exhausted or dead batteries from the product.

Product and colors r
© 1995 Hasbro, Inc., Pawtucket, RI r
All Right
® denotes Reg. U.S. P
MADE IN CHINA