


TIGER
ED.TM

For ages 8 & up
Model 9-055-3

DELUXE SPEAK & SPELL

SPORTS & LEISURE Expansion Cartridge

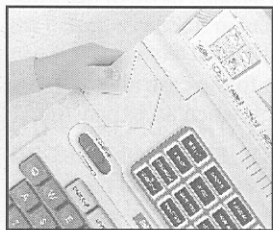

Instruction Manual

INTRODUCTION

The **SPORTS & LEISURE** expansion cartridge contains **300** new vocabulary words that relate to sport and leisure activities. This cartridge is for use with Deluxe Speak & Spell.

You can switch between the built-in activities in the main unit and the new vocabulary words in the cartridge (if one is installed) by pressing the **CARTRIDGE** key at any time.

PACKAGE CONTENTS

This package includes one program cartridge and an instruction manual.

CARTRIDGE PORT

The cartridge port is located to the left of the activity pad. The main unit is shipped with an empty cartridge already inserted into the cartridge port to protect the components inside the unit. Simply pull out this empty cartridge and insert your Sports & Leisure cartridge to begin playing.

Never leave the cartridge port empty. When you are finished playing with your Sports & Leisure cartridge, always insert the empty cartridge back into the unit so that the internal components of the unit are protected at all times.

NOTE: The dummy cartridge does not contain any data. It is strictly used for protection purposes.

CARTRIDGE FUNCTION KEY

The **CARTRIDGE** function key allows you to switch to the cartridge vocabulary in activities which have cartridge expansion when an expansion cartridge has been inserted into the unit.


The name of the cartridge will appear on the **LCD** screen when you press the **CARTRIDGE** key.

To use the vocabulary words in the cartridge, press the **CARTRIDGE** key. Press the **CARTRIDGE** key again to return to the vocabulary words in the main unit.

INSERTING A CARTRIDGE

To insert a cartridge, follow these steps:

1. Turn **OFF** the power on Deluxe Speak & Spell.
2. Make certain the unit cover (screen) is open. With the screen open, you will be able to see the keyboard and **LCD** screen.
3. Gently push the cartridge into the cartridge port. Make certain the cartridge fits snugly into place. (See diagram below.)

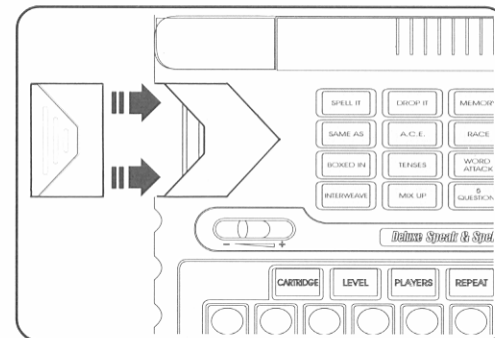

4. Turn **ON** the power on Deluxe Speak & Spell.

IMPORTANT NOTES:

1. You can only install one cartridge at a time.
2. Do not install a cartridge while the unit is turned on or during game play. Turn off the unit before inserting a cartridge.

HOW TO PLAY

1. After the introduction screen, you will be asked to choose an activity. Press the **CARTRIDGE** key to activate the cartridge vocabulary words. If you do not press the **CARTRIDGE** key before choosing an activity, you will access the main unit words in each activity rather than the cartridge words.
2. Press one of the **16** activity buttons to choose an activity.
3. Each activity will default to **Level 1**. You can change the level at any time by pressing the **LEVEL** key.
4. Each activity will default to the one-player mode. You can change the player mode at any time by pressing the **PLAYERS** key.
5. Press **OFF** to turn off the unit after you are finished playing. The unit will turn off automatically after about three minutes of inactivity.

REMOVING A CARTRIDGE


To remove a cartridge, follow these steps:

1. Turn **OFF** the power on Deluxe Speak & Spell.

IMPORTANT NOTE:

Never remove the cartridge while the unit is turned on or during game play. Always turn off the unit before removing the cartridge in order to prevent any damage to the main unit.

2. Gently pull out the cartridge from the cartridge port. Do not move the cartridge left or right when removing. Pull the cartridge straight out from the unit. (See diagram below.)

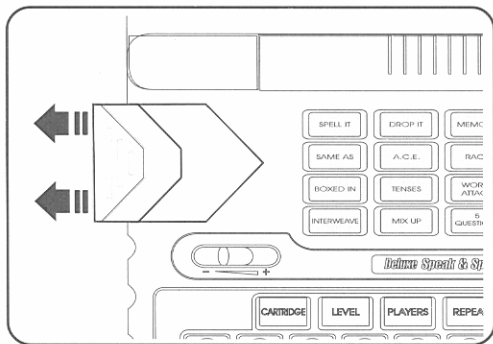

ACTIVITIES

Refer to the instruction manual included with the Deluxe Speak & Spell main unit for a complete description of each activity.

TROUBLESHOOTING

If you are having trouble with this cartridge, please call our toll-free number at 1-800-TIGER ED and a representative will be happy to help you.

90-DAY LIMITED WARRANTY

Tiger Electronics, Inc. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S.\$5.00. Payments must be by check or money order payable to Tiger Electronics, Inc.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Inc. Repair Dept.
980 Woodlands Parkway
Vernon Hills, Illinois 60061 U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.



© 1996, TM & © TIGER ELECTRONICS, INC.
980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A.

© 1996 TIGER ELECTRONICS (UK) LLC.
Belvedere House, Victoria Avenue, Harrogate,
North Yorkshire HG1 1EL, England.

ALL RIGHTS RESERVED

90553011WT-1
PRINTED IN HONG KONG