
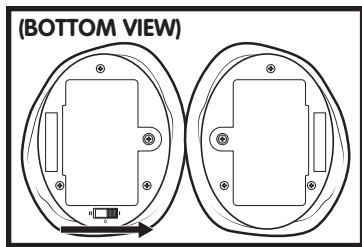


## Resetting SPIDER-MAN

If Spider-Man's arms rotate out of position, they may stop working.

To reset his arms:

1. Turn power switch to the Off position.
2. Gently rotate the non-functioning arm up until you feel it click back into position.

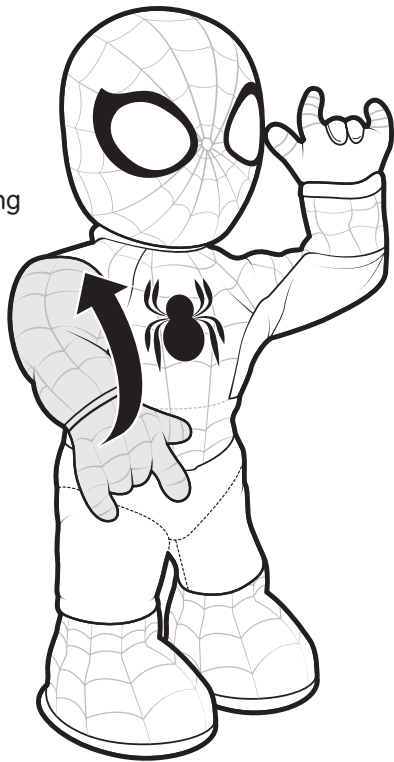

### REMEMBER:

The Power Switch is located on the bottom of Spider-Man's foot. It has three positions: II (Demo), 0 (Off), and I (Play). To Play with Itsy Bitsy Spider-Man, move the switch to the I position. Remember to turn Itsy Bitsy Spider-Man off when not playing with him.

**P/N: 6617720000**