

TRAVEL SPIROGRAPH Shake 'n Sketch

Age: 4 & UP



WARNING:

CHOKING HAZARD - Small parts.
Not for children under 3 years.

Easy-to-use magnetic drawing toy...in a take-along size.


Thank you for purchasing Travel Shake 'n Sketch™, the exciting magnetic drawing toy that lets you enjoy all kinds of drawing fun wherever you go! It even makes a fun sound every time you shake it around! For maximum enjoyment of this product, please read and follow the instructions carefully. If you have any questions, comments, or need additional information concerning this product or its parts, please call our Hasbro Consumer Service hotline at 1-800-327-8264, Monday through Friday, 8:00 AM to 5:00 PM Eastern Time.

Includes: Travel Shake 'n Sketch drawing board with attached magnetic pen, 2 Spirograph® gears, 1 gear template and 2 tracing stencils.


PARENTS PLEASE NOTE:

BE SURE YOUR CHILD SNAPS THE PEN INTO ITS SLOT BEFORE SHAKING THE TOY. THIS WILL PREVENT THE PEN FROM SWINGING FREELY AND COMING INTO CONTACT WITH YOUR CHILD AS THE TOY IS BEING SHAKEN. TO AVOID THIS POSSIBILITY, REMOVE THE CORD THAT HOLDS THE PEN. USE SCISSORS TO CUT THE CORD AT THE BASE OF THE TOY, THEN GRASP THE KNOT AT THE OTHER END OF THE CORD AND PULL THE CORD THROUGH THE PEN.

TRY IT OUT!

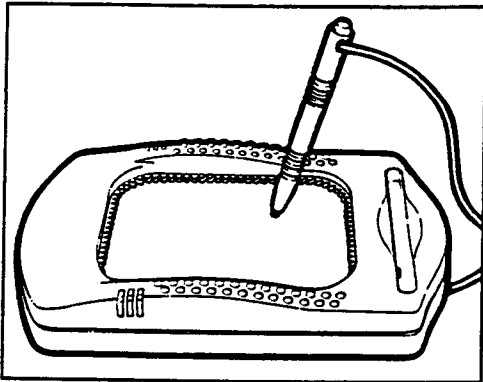

1. To prepare the screen for drawing, turn Shake 'n Sketch upside down and shake it back and forth and side to side several times. Then, remove pen from slot by pressing down on one end of the pen to make the other end pop up for easy grasping. Next, place the tip of the pen (either end) on the screen and start drawing!

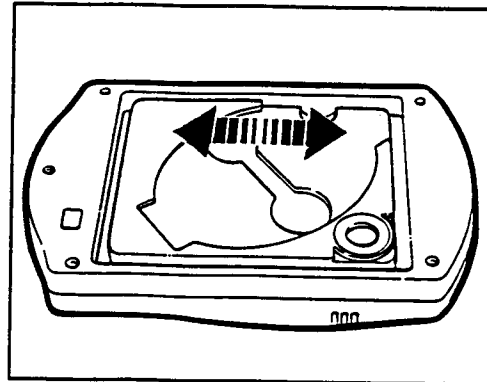


2. To erase the screen, turn and shake Shake 'n Sketch as you did on step 1.

Note: If you are unable to draw on the screen, or if the line is faint, turn over and shake Shake 'n Sketch again.

SHAKE 'N SKETCH™ OFFERS 3 WAYS TO DRAW!


1. FREEHAND

With Shake 'n Sketch, you can create your own drawings, write messages and make all kinds of sketches and scribbles!

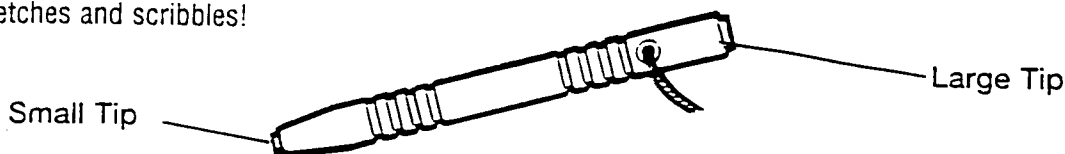

Use the smaller tip on one end of the pen to draw pictures with a fine line, then use the larger tip on the other end to fill in the drawing or make wide lines!


2. TRACING STENCIL

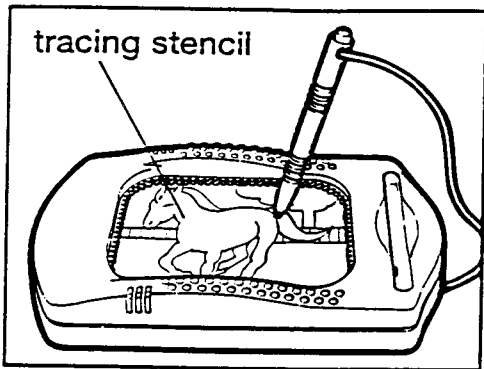

Place tracing stencil on the screen and use the magnetic pen to trace over the lines of the picture as shown. Remove the stencil and look at the drawing you've created on the screen!

For added variety, you can trace over all kinds of pictures, including illustrations from comic books, coloring books and more.

3. SPIROGRAPH DESIGNS

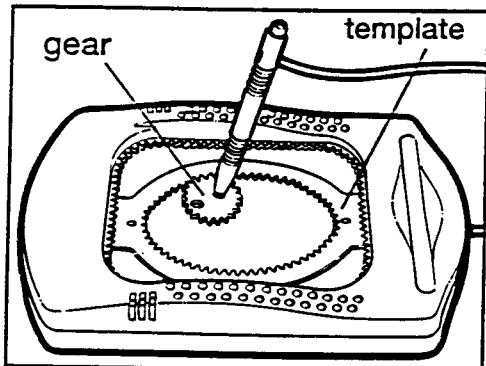


Fit the teeth on top and bottom of template into teeth on screen frame as shown. (This will help hold template in place as you draw). Place a gear inside the template so that teeth on gear and inside of template are engaged.


Put the smaller tip of the pen into one of the gear holes. While holding the template firmly in place, grasp pen and keep it in an upright position as you use it to carefully move the gear around the inside of the template. Always keep the teeth on the gear and template engaged as you draw.

Draw around the template until the line returns to the point where you started. You've just created an exciting Spirograph™ design! To frame your drawings with decorative Spirograph borders, use a gear to draw around the entire screen frame.

TO STORE ACCESSORIES

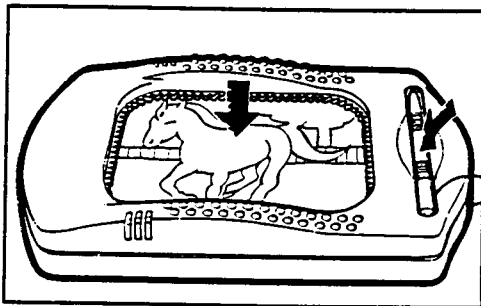

Snap the pen into the pen holder.
Slide the edges of the tracing stencil under the teeth on the screen frame.

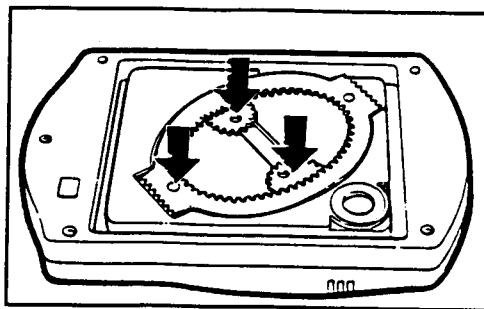

Fit the gears into the holes on bottom of Travel Shake 'n Sketch™. Place the template into recessed area as shown, with posts on Travel Shake 'n Sketch™ through holes in template.

WARNING:

- Contents may stain fabric. Remove from skin with soapy water.
- Do not place Travel Shake 'n Sketch™ near open flames, heaters, radiators, ovens and other heat sources.
- To prevent damage to the screen, do not use excessive force when drawing with pen. Do not use anything other than the magnetic pen when drawing on screen. Keep sharp objects away from screen.

CONFORMS TO ASTM-D-4236

Product and colors may vary.

©1995 Hasbro, Inc., Pawtucket, RI 02862 U.S.A. All Rights Reserved.

®denotes Reg. U.S. Pat. & TM Office. US Patent No. RE33363

ASSEMBLED IN CHINA FROM U.S. AND CHINESE COMPONENTS.

16501 P/N 46437700

Kenner