 
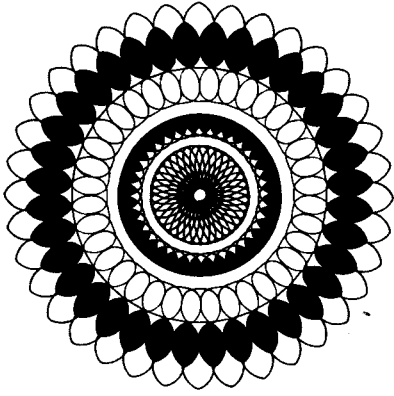 
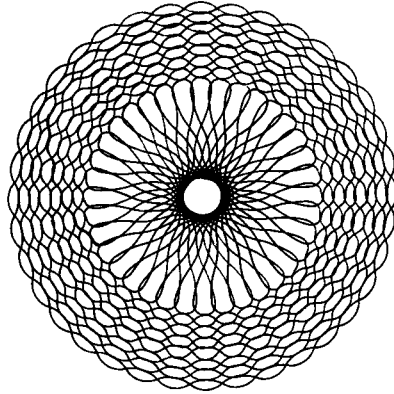 
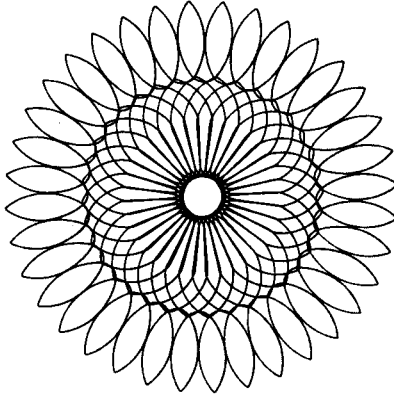 


15570

SPIROTOT™

FROM THE MAKERS OF SPIROGRAPH · PLUS™

DESIGN TOY

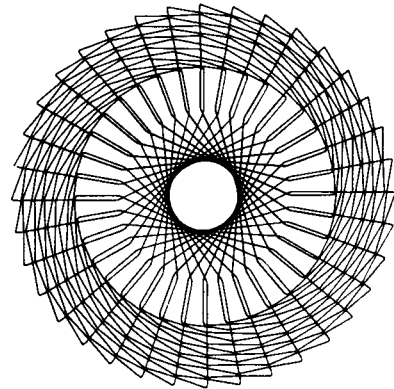

Kenner®

© Kenner 1988, a division of Tonka Corporation

 
343009030

WE REALLY DO CARE!


We make each toy with tender loving care. If there is a problem with your toy as you receive it, please let us know. Simply describe the problem and mail that description along with your name and address to:

KENNER PRODUCTS
Consumer Affairs Dept.
1014 Vine St.
Cincinnati, OH 45202


YOUR SPIROTOT® SET INCLUDES

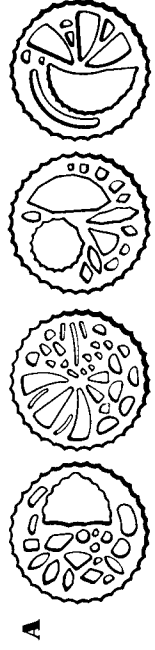


disc No.1 disc No.2 disc No.3 disc No.4

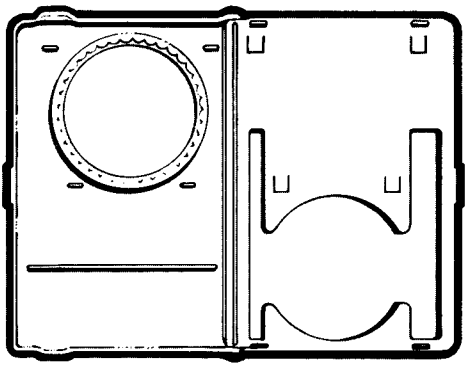 

D

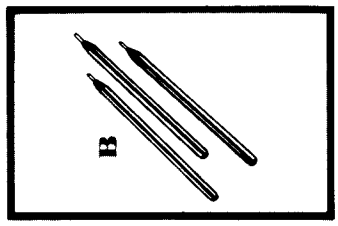 


C

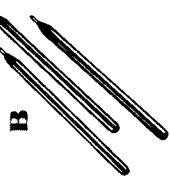 


B

 - A. Four design discs (1, 2, 3, 4).
- B. Three ball point pens.
- C. One paper pad.
- D. SPIROTOT® frame.
- The design discs are engineered to automatically rotate the pattern as you draw around with a pen.

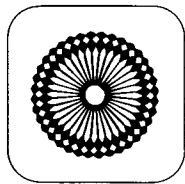


LET'S DRAW A DESIGN

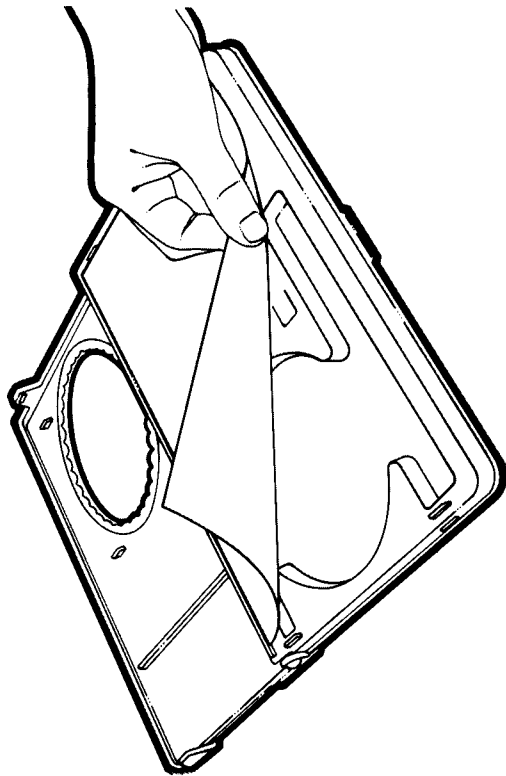 


- Open the frame and place a piece of paper on the frame. (For take-along fun, case holds up to 12 pages of SPIROTOP® paper. Additional paper also included.)

 1

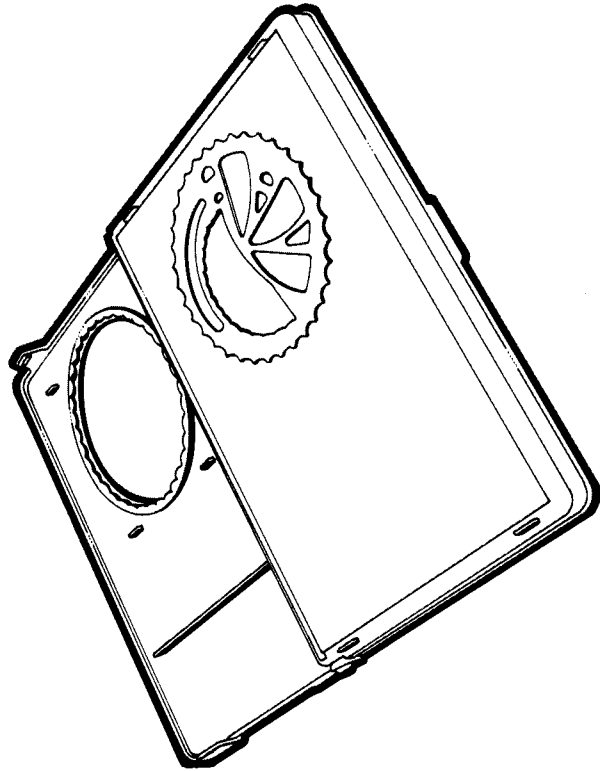


- Choose a design disc and place it on the paper so it appears through the circular window when the frame is closed.

 2

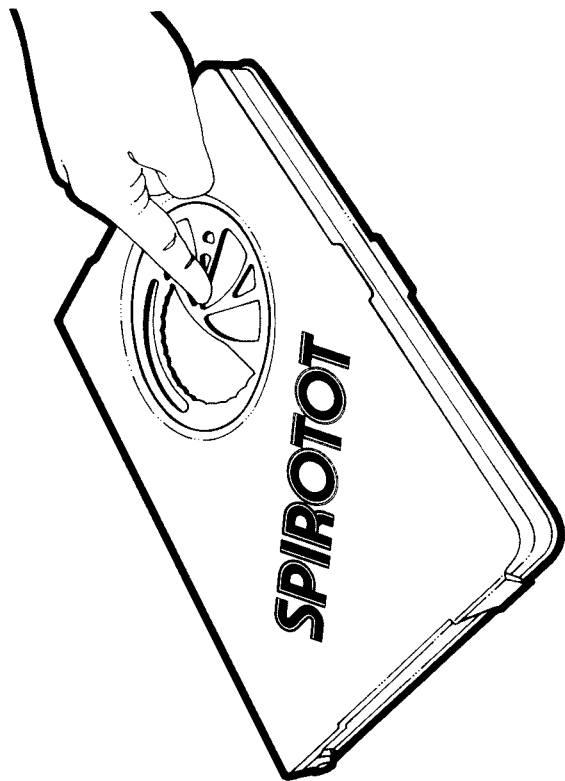


- Adjust the disc so it is free to move in the circular window.

 3

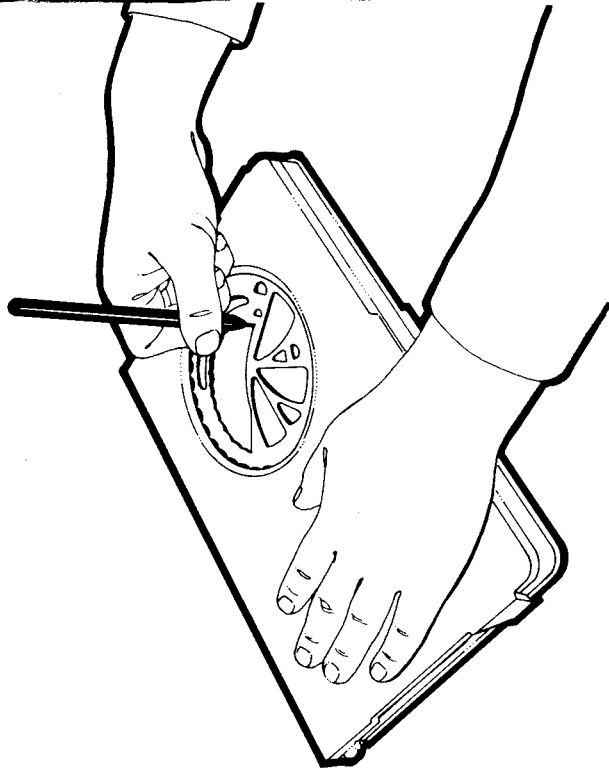


- Place a pen at the edge of the pattern you wish to make and start to draw.
- Hold the pen vertically to the edge of the pattern as you follow the outline of the pattern with the pen.

 4

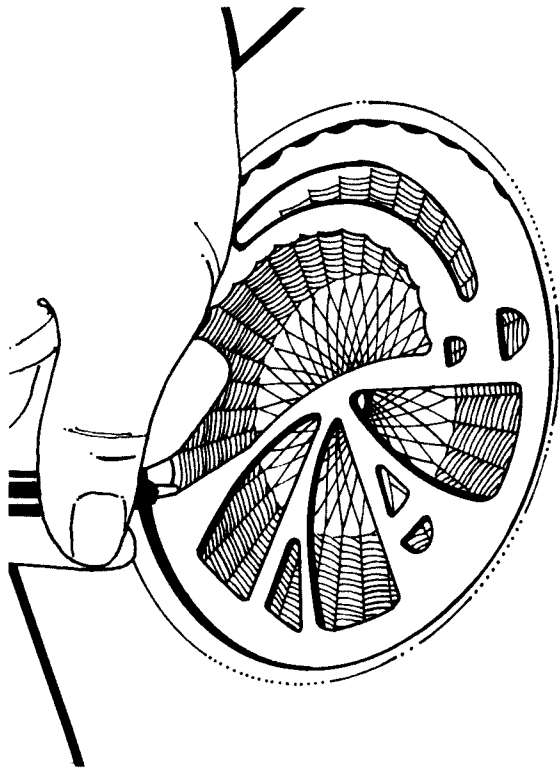

- Continue to draw until the line meets where you started.
- To complete the design, draw the pattern thirty-six times.

 
5

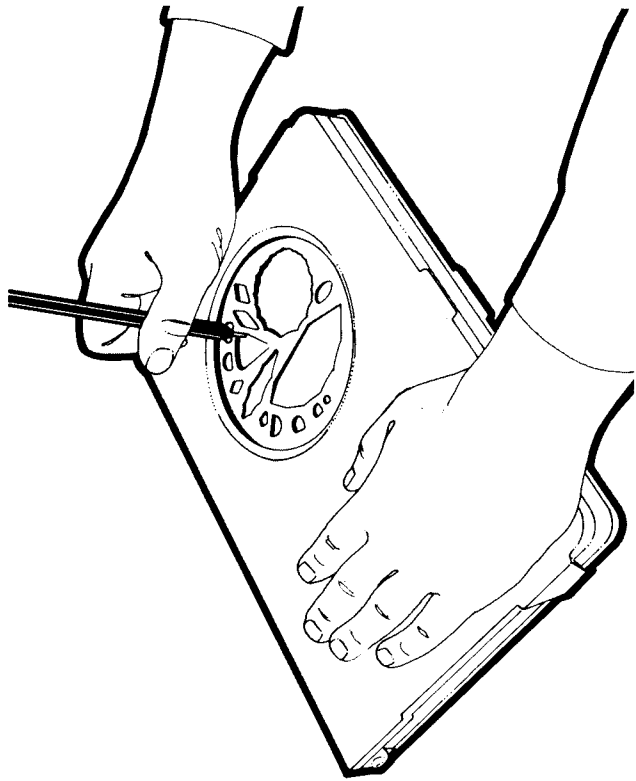

- To make a more complex design, choose another design in the disc and draw again.
- You may want to choose another color pen to make your design more colorful.

6


 
DESIGNS DRAWN WITH DESIGN DISCS

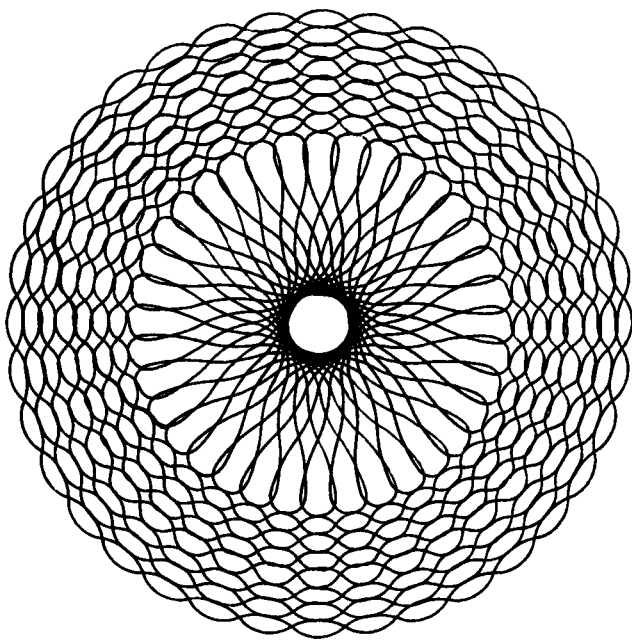


● Use design disc No. 1.



  ● To make the above design use the patterns indicated.

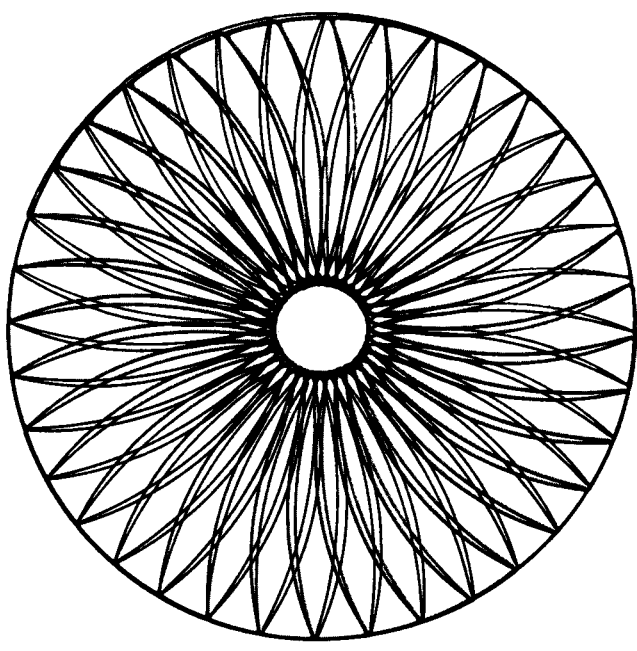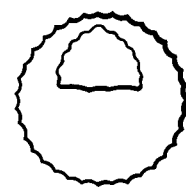


● Use design disc No. 2.

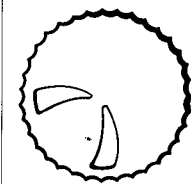 

● To make the above design use the patterns indicated.

 
hundreds of designs can be created with your SPIROTOT.® Here are just a few samples.

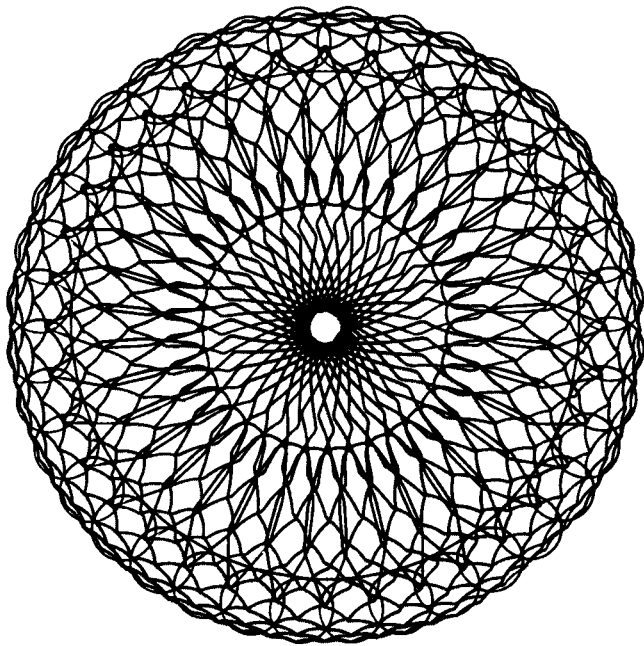

● Use design disc No. 3.




 
● To make the above design use the patterns indicated.

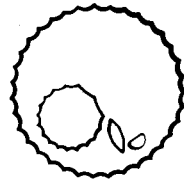

● Use design disc No. 4.




  ● To make the above design use the patterns indicated.

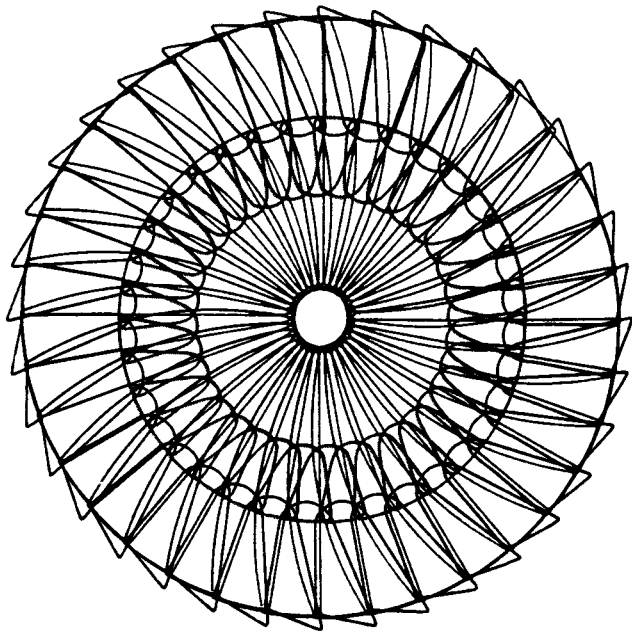
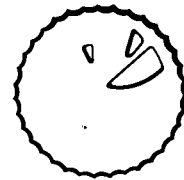





 
- Use design disc No. 1.
- To make the design at left use the patterns indicated.

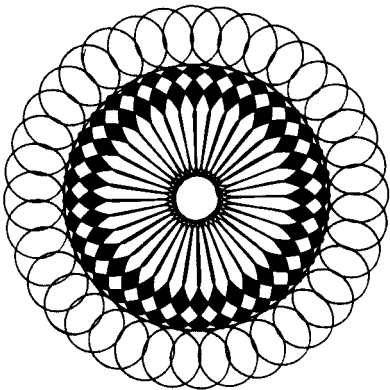

  - Use design disc No. 2.
- To make the design at left use the patterns indicated.

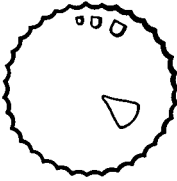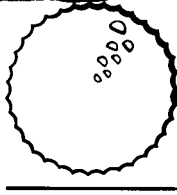

  - Use design disc No. 3.
- To make the design at left use the patterns indicated.

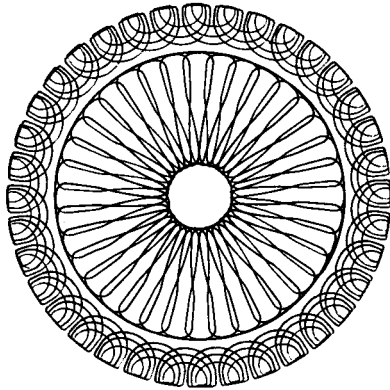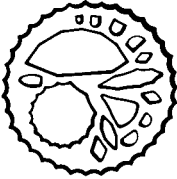

- Use design disc No. 4.
- To make the design at left use the patterns indicated.

