


STAR WARS SKYWALKER

AGES 4+

87128/87123 Asst.

X3 BATTERIES REQUIRED
Alkaline batteries recommended. Phillips/cross head
screwdriver (not included) needed to insert batteries.
NOT INCLUDED

TO EXTEND BLADE:
Press down and pull back button to extend lightsaber.

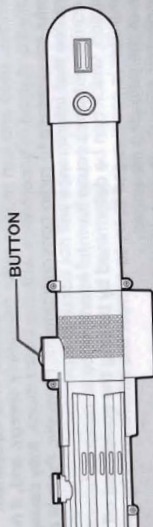

TO RESET BLADE:
Push lightsaber blade back into handle until
it locks into place.



Product and colors may vary.
© 2006 Lucasfilm Ltd. & © or TM where indicated.
All rights reserved. ® and/or TM* & © 2006 Hasbro.
TM & © denote U.S. trademarks. U.S. Patent Pending



starwars.com


P/N 6602670000

STAR WARS



Product and colors may vary.
© 2006 Lucasfilm Ltd. & © or TM where indicated
All rights reserved. ® and/or TM* & © 2006 Has
TM & © denote U.S. Trademarks.
U.S. Patent Pending

CAUTION:
To activate Lightsaber, point
AWAY from persons or animals.

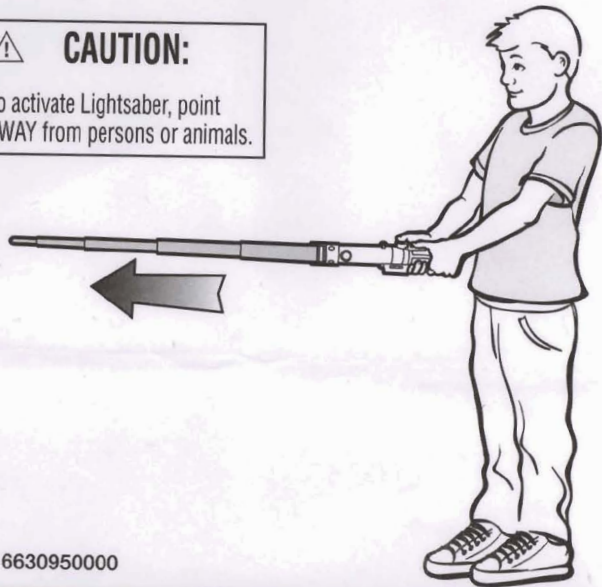

P/N 6630950000