




# INSTRUCTIONS

## 1 TO OPERATE:

1. Switch the ON/OFF VOLUME control ON by turning dial clockwise.
2. To transmit, press the PUSH TO TALK button and speak into the microphone at the end of the headset. Speak in a normal voice.
3. To receive, release the PUSH TO TALK button, and listen to the sender's message in the built-in speaker in the earpiece of the headset.
4. Transmit a Rebel phrase with one of 3 SOUND EFFECTS BUTTONS (SFX) by pressing the PUSH TO TALK button and the SFX button simultaneously.
5. Your voice and sound effects will transmit up to 1,500 feet in areas with clear reception.
6. The walkie talkie can attach to your belt for ease and portability.

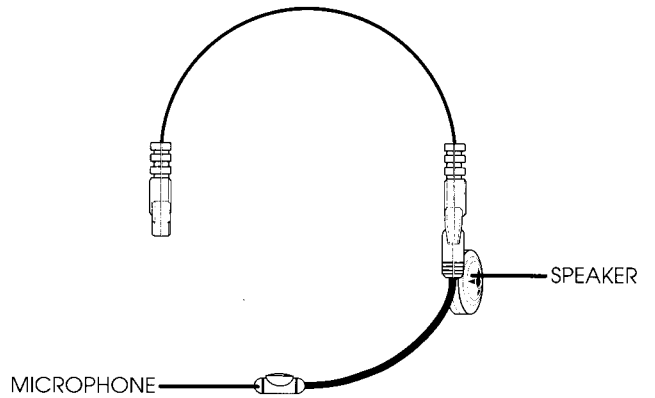

## 3 CAUTION:

This device complies with Part 15 of the FCC Rules.


Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.
3. If your walkie talkie does not operate properly try a new set of batteries since your batteries may be defective or have low voltage even though they appear to be new.
4. After use always return the ON/OFF control switch to the OFF position.
5. Do not touch antenna with your fingers or hand. It will cause weak transmission. Your walkie talkie set has been fully adjusted prior to shipment from the factory. Do not touch the internal parts other than replacing the battery.
6. Manufacturer recommends alkaline batteries for maximum performance. To prevent damage, do not expose the set to rain or moisture.

## 4 BATTERIES INSTALLATION:


1. Turn the ON/OFF DIAL to the OFF position.
2. To open the BATTERY COVER, slide the BATTERY COVER in a downward motion to release the door.
3. To install 9 volt or "6LR61" battery observe the battery polarity by matching the snap on the connector with the proper snap terminals on the battery. Use care not to bend the connector terminals. Push the battery connector firmly on the battery. Reinstall the BATTERY COVER.

Installation of batteries should be done by adult. Do not mix new & old batteries. Do not mix alkaline, or standard(carbon-zinc) or rechargeable(nickel-cadmium) batteries.

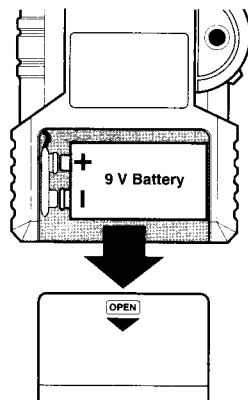

## 2 USING THE HEADSET:

1. Adjust the size to fit your head by pulling out or pushing in each side of the plastic band.
2. Position the built-in speaker over one ear, and make sure the opposite side sits on top of your other ear.
3. Adjust the flexible microphone so it is approximately 1" from your mouth.

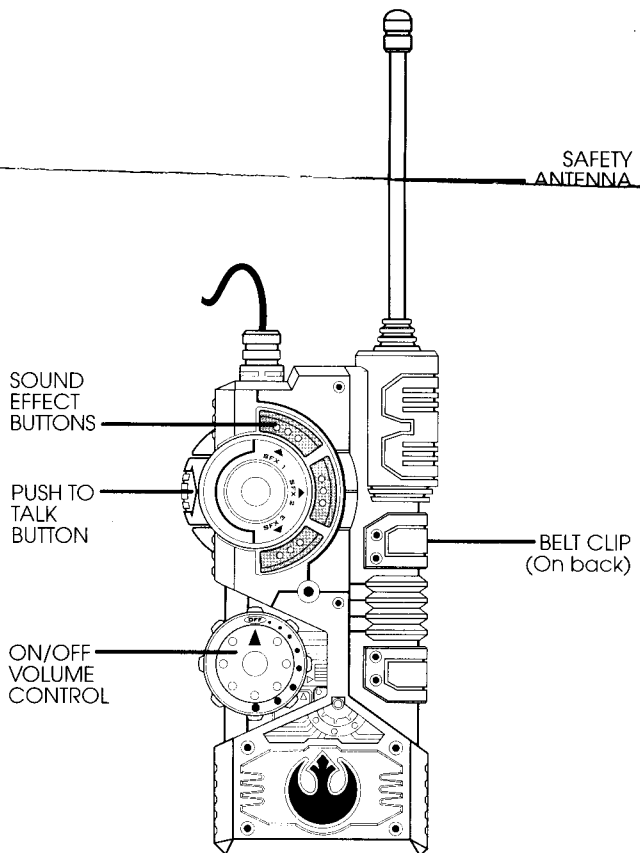

### TO ENSURE PROPER FUNCTION :

- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Battery installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged ( if removable ).
- Rechargeable batteries are only to be charged under adult supervision ( if removable ).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

### 5 90-DAY LIMITED WARRANTY

Tiger Electronics, Inc. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to ~~either the dealer or to Tiger.~~

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S.\$22.00. Payments must be by check or money order payable to Tiger Electronics, Inc.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Inc. Repair Dept.  
980 Woodlands Parkway  
Vernon Hills, Illinois 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

**For more information about Tiger Electronics, our products and special promotions, please visit our web site at [www.tigertoys.com](http://www.tigertoys.com).**

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.