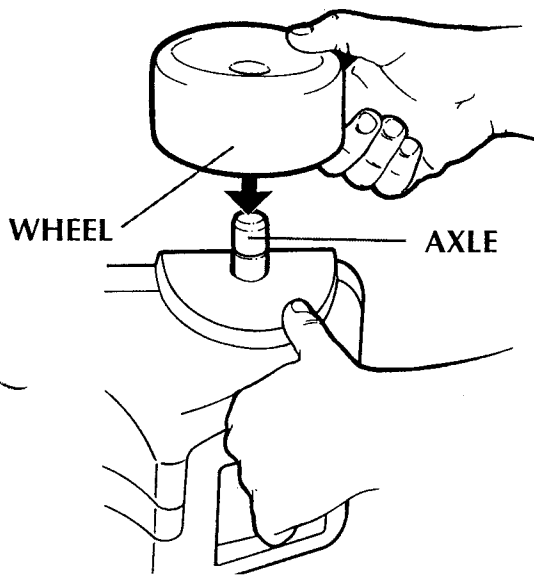


PLAYSKOOL**Steady Steps®**Ages: 9 mos. & Up
50004**Busy Band Walker™**

ADULT ASSEMBLY REQUIRED. TOOL NEEDED: PHILLIPS SCREWDRIVER (NOT INCLUDED).
CAUTION: THIS PRODUCT CONTAINS SMALL PARTS WHICH ARE NECESSARY FOR ASSEMBLY. PRIOR TO AND DURING ASSEMBLY OF THIS PRODUCT, KEEP SMALL PARTS OUT OF CHILDREN'S REACH. SMALL PARTS POSE A CHOKE HAZARD TO CHILDREN UNDER 3 YEARS.
CAUTION: DO NOT LEAVE CHILD UNATTENDED. NOT TO BE USED AS A RIDE-ON TOY.

Thank you for purchasing this toy. If you have any questions about this product, please call our toll-free number: 1-800-PLAYSKOOL.


Includes: walker, drumstick, triangle, square, cylinder, 2 screws and instructions.

TO ASSEMBLE:

1. Attach the wheels to the 4 axles on the frame. Lie toy on its side, and push wheel onto end of axle until it snaps firmly into position. To prevent a pinch hazard, always keep fingers clear of area between wheel and axle. The wheel should spin freely on axle. If wheel does not spin freely, re-exert pressure and push wheel as far down onto axle as it will go. Repeat process for remaining 3 wheels.

Note:
This is a one-time assembly. Once attached, do not remove wheels, as they cannot be re-attached.

Product and colors may vary.
 © 1995, 1996 Hasbro, Inc., Pawtucket, RI 02862 USA.
 All Rights Reserved.
 ® denotes Reg. U.S. Pat. & TM Office
MADE IN THE USA.
 U.S. Patent Pending
 P/N 46677801

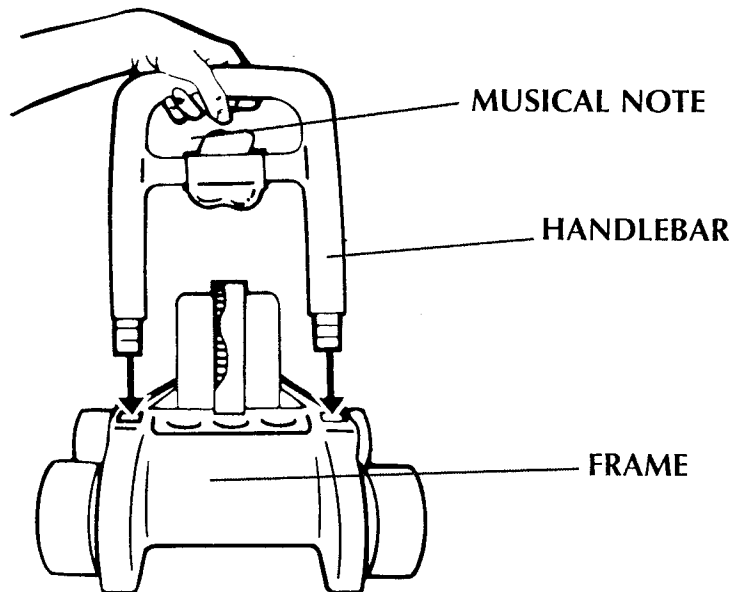

2. Turn musical note on handlebar until it is upright. With front of musical note facing front of toy, snap handlebar onto frame as shown.

Note:
This is also a one-time assembly, and is not designed to be disassembled and re-attached.

3. Turn toy upside down. Insert a screw into each hole on ends of handlebar.

