 





# Owners Manual

MODEL NO. 60311 (27 MHz)  
60312 (49 MHz)

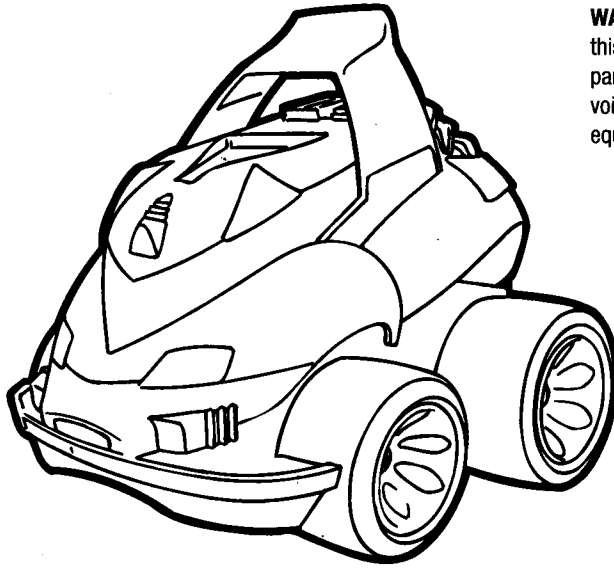

### AGES 8 AND UP

 **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

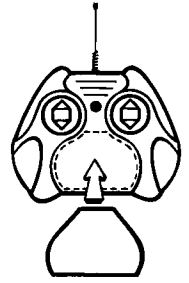

**LABEL APPLICATION:**  
Apply label to front of transmitter as shown.

## Kenner

 
© 1995 TONKA CORPORATION,  
a subsidiary of Hasbro, Inc.,  
Pawtucket, Rhode Island 02862.  
All Rights Reserved.

### SAFETY PRECAUTIONS

This vehicle is not recommended for children under the age of 8 years. Please read all of the instructions before operating this vehicle. Always follow general safety rules while operating vehicle: avoid hitting pets, furniture or people. Do not pick up vehicle while it is in motion. Keep hands, hair and clothing away from this vehicle when the power switch is turned to the "ON" position. Remove battery pack when vehicle is stored. **Avoid tire contact on painted or varnished surfaces.** Recommend outdoor play with this vehicle.

## BATTERY REQUIREMENTS / INSTALLATION FOR VEHICLE


To operate your vehicle, you will need a 6 Volt Rechargeable NiCd Battery Pack (sold separately). Follow manufacturer's charging instructions on the rechargeable battery pack. **PLEASE NOTE:** The battery pack will become hot during use, so care should be taken whenever you handle it.

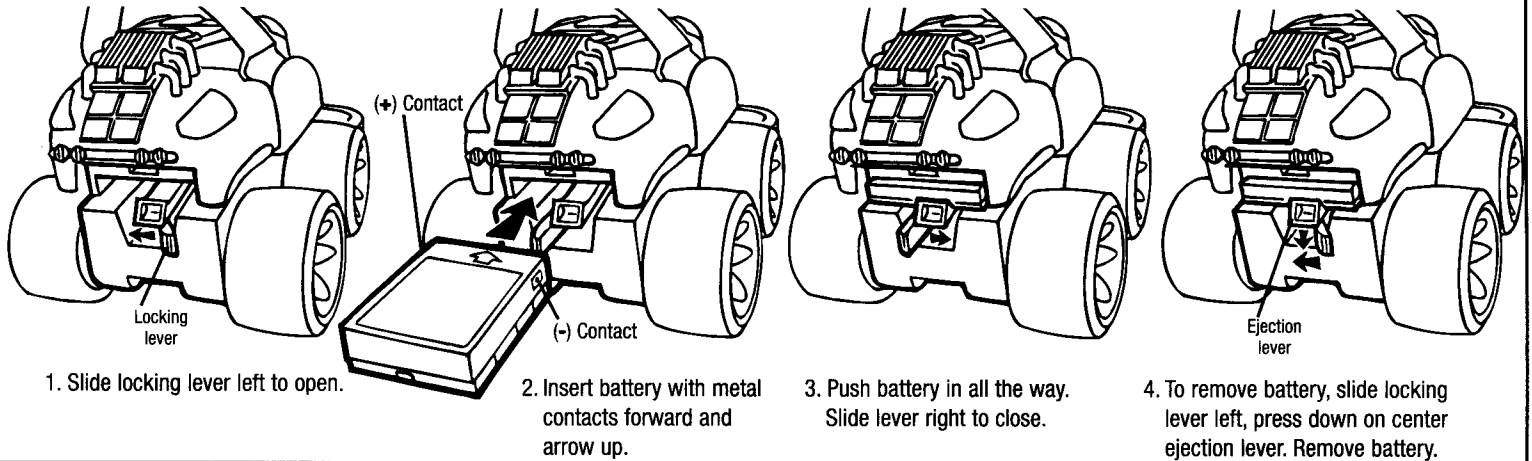

### BATTERY NOTE:

Kenner does not manufacture battery packs. When you have purchased one, please follow the manufacturer's instructions for use. Depending upon the type you choose, you should expect that the **initial charge might require 4 hours and last 8-10 minutes** in the intense operation of your Stunt Boss 360™ vehicle. Each time you charge the battery, you should get longer performance as you "break in" your battery, until you enjoy operation that is up to twice as long as that of the initial charge.
 
## BATTERY REQUIREMENTS / INSTALLATION FOR TRANSMITTER

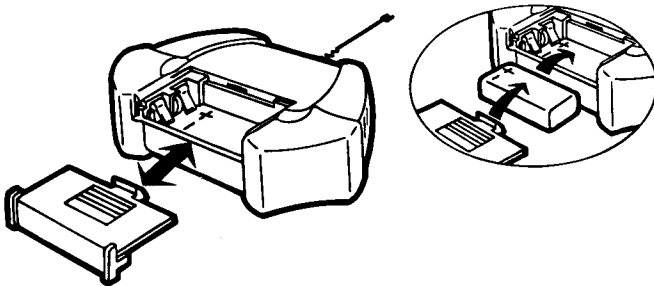

To operate your transmitter you will need a 9 Volt Alkaline Battery (sold separately). Remove battery cover as shown and install a new 9 Volt Alkaline Battery. Replace the cover. Press either pad and the red LED light will come on. This will show you that the battery is good and the transmitter is operating.


**PLEASE NOTE:** Vehicle power switch must be in the ON position to receive commands from the transmitter.

## PROPER OPERATION AND STORAGE OF YOUR VEHICLE

 - Best operation** of vehicle is OUT-OF-DOORS to avoid furniture damage and minimize noise level.
- Always** operate your vehicle within a range of 75 feet from you.
- Always** operate your vehicle on dry surfaces away from cars and other full-size vehicles.
- Always** store your vehicle in a cool, dry place and off of painted or varnished surfaces.
- Avoid** water or damp locations which may damage the vehicle's electronics. (If your vehicle ACCIDENTALLY gets wet and stops running, let it dry overnight before trying to run it again.)
- Avoid** operating around CB radios, baby monitors, cordless phones, electrical appliances, electric baseboard heaters, high voltage electrical wires and large, steel-reinforced concrete buildings all of which may cause interference.
- Avoid** running your vehicle and another vehicle on the same frequency. If you want to race another vehicle, use a 27 MHz Stunt Boss 360™ vehicle against a 49 MHz Stunt Boss 360™ vehicle.

# DIRECTION CONTROLS

Press pad(s) as indicated by solid arrows. Vehicle will move in direction as indicated by outlined arrow.

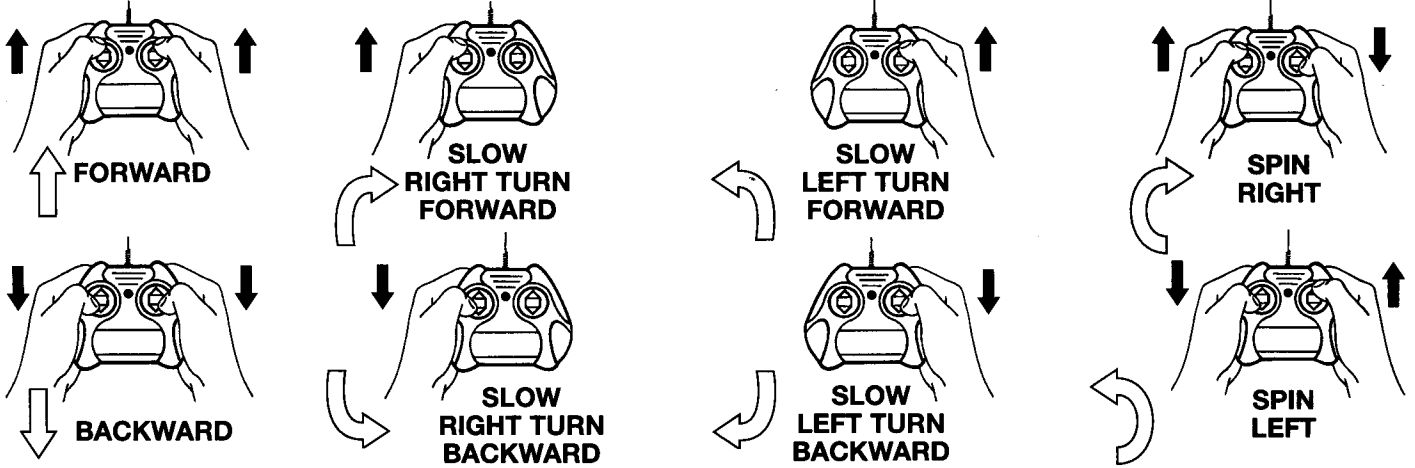

# GUIDE FOR TROUBLESHOOTING - Check the points below if you are experiencing difficulty. Sometimes an apparent malfunction is the result of a simple cause and effect as shown below.

 
SYMPTOM	PROBABLE CAUSE	CORRECTION
Vehicle runs slowly or will not run.	<ul style="list-style-type: none"> <li>• Vehicle switch not ON.</li> <li>• Weak or uncharged 6 volt vehicle battery.</li> <li>• Weak 9 volt controller battery.</li> <li>• 6 volt battery installed incorrectly.</li> </ul>	<ul style="list-style-type: none"> <li>• Check vehicle switch.</li> <li>• Charge battery or replace.</li> <li>• Replace with fresh alkaline battery.</li> <li>• Review instructions. Be sure metal contacts are inserted first and the correct battery side is up. Turn upside down if unsure.</li> </ul>
Red light on controller doesn't light when either pad is pressed.	<ul style="list-style-type: none"> <li>• Controller battery weak or not connected.</li> </ul>	<ul style="list-style-type: none"> <li>• Check connections and replace battery if required.</li> </ul>
Erratic operation or only short range possible.	<ul style="list-style-type: none"> <li>• Radio interference likely.</li> </ul>	<ul style="list-style-type: none"> <li>• Change location (see point 6, PROPER OPERATION SECTION).</li> </ul>
Short vehicle battery life.	<ul style="list-style-type: none"> <li>• Initial charge will give 8 to 10 minutes of operation.</li> </ul>	<ul style="list-style-type: none"> <li>• Recharge vehicle battery. Once completely drained the battery will have longer life with each recharging. About 12 minutes of life is typical with this type of radio controlled vehicle.</li> </ul>
Vehicle doesn't work after going through water or snow.	<ul style="list-style-type: none"> <li>• Water in the electronics area.</li> </ul>	<ul style="list-style-type: none"> <li>• Vehicle will take several hours to dry. Allow to dry overnight before trying again.</li> </ul>

# TRICKS AND STUNTS

Here are some of the exciting tricks and stunts you can do. The following tricks and stunts take practice and skill. You can even combine stunts. Attempt simple skill level tricks or combinations before going on to more advanced tricks. Remember you will need to practice to achieve these stunts. For best result use fully charged battery.


## SIMPLE SKILL LEVEL:

### BARREL ROLL

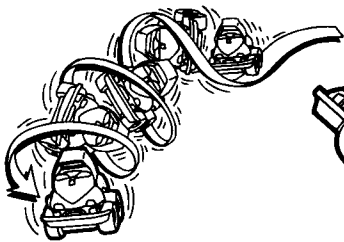


1. Full speed forward, briefly (one second) hit control pads to spin right or left.

### FRONT WHEELIE

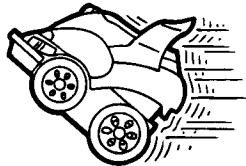 

2. From stopped position, press both control pads quickly forward.

### COUNTER THRUST WHEELIE

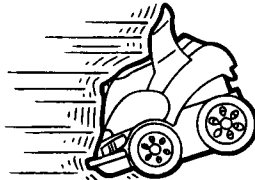 


3. From stopped position, press both control pads quickly backward.

### 360° SPIN



 4. Press both control pads in opposite directions.


### VERTICAL FORCE WHEELIE

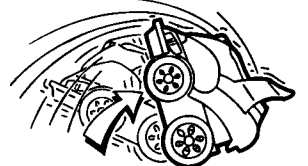

5. Move vehicle backward about one foot, then press control pads quickly forward. Then stop. Vehicle sits up.


## MODERATE SKILL LEVEL:
 
### JAMMIN' 360° BACK FLIP

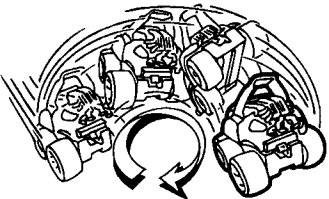


6. While moving full speed backward, quickly press pads forward to make vehicle flip over backward.

### SLAMMIN' 360° SOMERSAULT

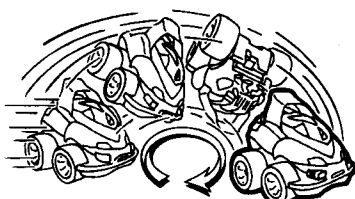 


7. While moving full speed forward, quickly press pads backward to make vehicle flip over forward.

### ROCKIN' RECOVERY

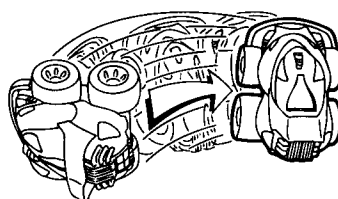 

8. With vehicle on it's side, press pad to make wheels touching ground move vehicle backward, quickly reverse pad directions.

### FRONT ROLLOVER

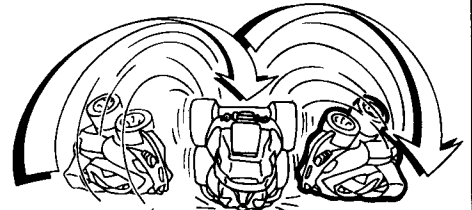 

9. With vehicle on it's side, press pad to make wheels touching ground move vehicle forward, quickly reverse pad directions. Vehicle will roll over to other side.

## EXPERT SKILL LEVEL:

### 1-WHEEL POWER V-SPIN

10. From the Vertical Force Wheelie position (#5 above), press both control pads in opposite directions until vehicle spins on one wheel. Once vehicle is spinning, hold only the forward pad to maintain spin. Note: Stunt performs best on hard, smooth surface.

