

AIR PRESSURE **SUPER
SOAKER™**

CONSTANT PRESSURE
SYSTEM

CPS 2000

NOZZLE

FILL
GAUGE

FILL
CAP

HAND
PUMP

TRIGGER

HIGH
PRESSURE
RESERVOIR

SUPER SOAKER™ SPECIFICATIONS

SIZE: 33-3/8"

WATER CAPACITY: 107 fl. oz.

WEIGHT EMPTY: 3 lb. 6 oz.

PUMP STROKE: 5-7/8"

WEIGHT FILLED: 10 lbs. 2oz.

PRESSURE: 45 p.s.i.

AIR PRESSURE **SUPER
SOAKER™**

CONSTANT PRESSURE
SYSTEM

CPS 2000




Pat. Pend. © 1996 LARAMI LIMITED. A Subsidiary of Hasbro Inc. All Rights Reserved. Mount Laurel N.J. 08054. Made in China.
FOR COMMENTS OR QUESTIONS CALL 1800-669-TOYS

LARAMI

1. Unscrew fill cap at the top of the water reservoir.
2. Fill reservoir bottle full using clean, clear tap water only. Screw cap back into position. Do not screw too tightly.
3. Pressurize CPS 2000 using hand pump 25-30 times or until Fill Gauge indicates full. Stop pumping when Fill Gauge indicates full.
4. Trigger can be pulled and held back for one huge blast-or pull and release trigger rapidly for more shots.
5. Re-pump after each shot to keep pressurization chamber full.

DO'S AND DON'TS

- 1 Do not shoot at anyone's face or eyes.
- 2 Do not leave Super Soaker™ pressurized when not in use. Pull trigger till all pressure is released. Remove water from reservoir.
- 3 Fill your Super Soaker™ with clean, clear tap water only. Use of other water or liquids may be harmful or damage the Super Soaker™.

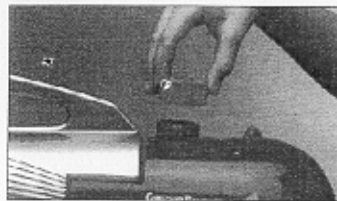

1. Unscrew fill cap.



2. Fill water reservoir with clean, clear tap water. Replace fill cap.



3. Pump to pressurize.



4. Pull trigger to shoot. Repump after each shot.

TROUBLESHOOTING CHART

CPS 2000

CPS 2000	Bottle out of water	CPS 2000 not pressurized	This is normal	Air mixed with water
	Refill bottle till full	Pump 25 to 30 pumps	Sounds are valves operating	Refill reservoir
1. CPS 2000 does not shoot.	●	●		
2. CPS 2000 does not shoot far.		●		●
3. CPS 2000 makes noise when pumping.			●	