

CPS 3000 SPECIFICATION CHART

Size: 28 1/4" x 11 3/4"	Backpack Water Capacity: 2 Gallons
Soaker Weight Empty: 4 lbs.	Backpack Weight Full: 17 lbs. 11 oz.
Pressure: 22 p.s.i.	Pump Stroke: 7"

CONSTANT PRESSURE **SUPER
SOAKER**

Pull Cap

Fill Gauge

Nozzles

Shoulder Strap

Hand Pump

Water
Reservoir
Backpack

Trigger

CONSTANT PRESSURE
SYSTEM


CPS 3000

LARAMI

© 1997 Larami Limited, A Subsidiary of Hasbro, Inc.
Mt. Laurel, NJ 08054. Made in China. Conforms
with 15 CFRs 1150-3. For questions or comments call
1-800-669-TOYS.



1. Pull out fill cap at top of backpack.

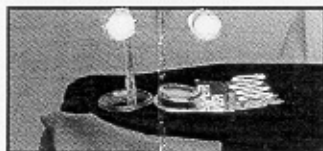

2. Fill reservoir backpack using clean, clear water only. Plug cap firmly back into position.



3. Attach hose to gun.

4. Use hand pump to pressurize Super Soaker™ 10 to 26 pumps or until Fill Gauge indicates Full. Stop pumping when Gauge indicates Full.



5. Trigger can be pulled and held back for one huge blast - or pull and release trigger rapidly for more shots.

TROUBLESHOOTING CHART

CPS 3000	Bottle out of water	CPS 3000 not pressurized	This is normal	Air is mixed with water
	Refill bottle until full	Pump 10 to 26 times	Sounds are valves operating	Refill reservoir
1. CPS 3000 does not shoot.	●	●		
2. CPS 3000 does not shoot far.		●		●
3. CPS 3000 makes noise while pumping.			●	

IMPORTANT!

For optimum performance, pump 3 to 4 times after each shot.

Make sure nozzle is indexed correctly or CPS will not fire.

DO'S AND DON'TS

1 Do not shoot at any-one's face or eyes.

2 Do not leave Super Soaker® pressurized when not in use. Pull trigger until all pressure is released. Remove water from reservoir.

3 Fill your Super Soaker® with clean, clear tap water only. Use of other water or liquids may be harmful or damage the Super Soaker®.