## SUPERCHARGER 400 SPECIFICATIONS

 SIZE: 16¹/4" X 8 ¹/2"
 WATER CAPACITY: 24 ¹/4 0Z.

 WEIGHT EMPTY: 20 0Z.
 WEIGHT FILLED: 44 ¹/4 0Z.

 PRESSURE: 35 PSI
 PUMP STROKE: 6 ³/4"

## • AIR PRESSURE SUPER

NOZZLE

WATER RESERVOIR

SUPER CHARGER

HAND PUMP

TRIGGER

 
SUPER CHARGER.

LATAN


ASTAIL CHAR

©1998 LARAMI LIMITED. A subsidiary of Hosbro, Inc. Mt. Laurel, NJ 08054. Made in China. Conforms with 15 CFRS 1150-3. For questions or comments call: 1-800-669-TOYS.


## TO OPERATE USING CHARGER:



  Attach fast-fill charger to your garden hose. Turn on water AFTER you attach charger. For better results, pump 5 times before charging from hose charger.



  Press nozzle into charger. Relief Valve will release water when Super Soaker<sup>®</sup> is full.



 Pull the trigger to release a powerful stream of water.
 Or pull and release trigger rapidly for more shots.

## TO OPERATE USING ANY WATER SOURCE:

- Unscrew bottle. Fill water tank 2/3 full with clean, clear tap water. Replace bottle.
- 2. Pump hand pump 16 to 20 times to build up pressure.
- For maximum performance, pump a few times after each shot.

TROUBLESHOOTING CHART						
SUPER	Bottle out of water	Super Soaker® not pressurized	Bottle not screwed all the way in	This is normal	Intake screen on pick up tube is clogged	0-ring inside bottle is missing
CHARGER™ 400	Refill bottle 2/3 full	Pump 16-20 times	Screw bottle until snug. Don't overtighten.	Sounds are valves operating	Clean screen	Do not lose O-ring
Super Soaker® does not shoot.	•	•	•			•
2. Super Soaker® does not shoot far.		•	•		•	•
3. Super Soaker® makes noise while pumping.				•		
3. Super Soaker® leaks around bottle neck.			•			•



Do not insert any objects other than nozzle into charger.