

SUPERCHARGER 500 SPECIFICATIONS

SIZE: 18 1/4" X 9"	WATER CAPACITY: 42 OZ.
WEIGHT EMPTY: 36 OZ.	WEIGHT FILLED: 5 LBS.
PRESSURE: 26 PSI	PUMP STROKE: 6"

RESERVE
TANK CAP

WATER RESERVOIR

NOZZLE

HAND PUMP

PRESSURE CHAMBER

TRIGGER




AIR PRESSURE **SUPER
SOAKER.**

SUPER CHARGER™
500

©1998 LARAMI LIMITED, A subsidiary of Hasbro, Inc.
Mt. Laurel, NJ 08054. Made in China. Conforms with 15 CFRS 1150-3.
For questions or comments call: 1-800-669-TOYS.

LARAMI


TO OPERATE USING CHARGER:

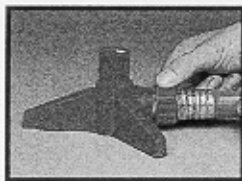

1. Attach fast-fill charger to your garden hose. Turn on water AFTER you attach charger. For better results, pump 5 times before charging from hose charger.



2. Press nozzle into charger. Reserve Tank Cap will release water when Super Soaker® is full.

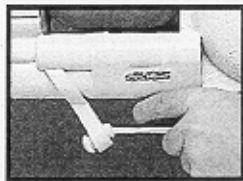

3. Pull the trigger to release a powerful stream of water. Or pull and release trigger rapidly for more shots.

TO OPERATE USING ANY WATER SOURCE:

1. Unscrew cap. Fill water tank with clean, clear tap water. Replace cap.
2. Pump hand pump 12 to 15 times to build up pressure.
3. For maximum performance, pump a few times after each shot.

TROUBLESHOOTING CHART

SUPER CHARGER™ 500	Reservoir Bottle out of water	Super Soaker® not pressurized	This is normal	Intake screen on pick up tube is clogged	Reserve Tank cap is loose
	Refill bottle	Pump 12-15 times	Sounds are valves operating	Clean screen	Tighten cap
1. Super Soaker® does not shoot.	●	●			●
2. Super Soaker® does not shoot far.		●		●	●
3. Super Soaker® makes noise while pumping.			●		
4. Super Soaker® leaks around cap neck.					●

DO'S AND DON'TS

- 1 Do not shoot at any-one's face or eyes.
- 2 Do not leave Super Soaker® pressurized when not in use. Pull trigger until all pressure is released. Remove water from reservoir.
- 3 Fill your Super Soaker® with clean, clear tap water only. Use of other water or liquids may be harmful or damage the Super Soaker®.
- 4 Do not insert any objects other than nozzle into charger.