

## XP-110 SPECIFICATION CHART

Size: 21 3/4" x 9 3/4"

Water Capacity: 38 oz.

Weight Empty: 33 oz.

Weight Filled: 71 oz.

Pressure: 40 p.s.i.

Pump Stroke: 6 3/4"

AIR PRESSURE **SUPER  
SOAKER**

**See-Through  
Water Tank**

**Twist-Off  
Cap  
Trigger**

**Nozzle  
Hand Pump**


**XTRA  
POWER  
XP 110**

© 1997 Larami Limited, A Subsidiary of Hasbro, Inc. Mt.  
Laurel, NJ 08054. Made in China. Conforms with 15 CFR  
1150-3. For questions or comments call 1-800-669-TOYS.


**LARAMI**



**1.** Twist off easy-fill, tethered cap.

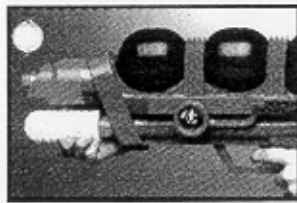

**3.** Use hand pump to pressurize Super Soaker™ 11 to 13 pumps. The Super Soaker™ will perform well when the Power Gauge is in the WHITE ZONE.

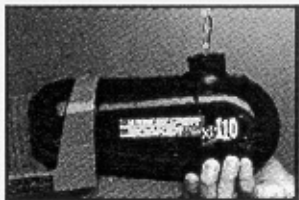

**2.** Fill reservoir bottle approximately 2/3 full with clean, clear tap water. Replace cap, twisting firmly, but not too tightly.



**4.** Pull trigger to create a powerful burst of water. Snap the trigger for pulsating action. For best performance, pump after each shot.

### TROUBLESHOOTING CHART

## XP-110

	Bottle out of water	Super Soaker™ not pressurized	Cap not screwed all the way in	This is normal	Intake screen on pickup tube is clogged	O-ring in cap is missing
	Refill bottle	Pump 11 to 13 times	Screw cap until snug	Sounds are valves operating	Clean screen	Do not lose O-ring
1. Super Soaker™ does not shoot.	●	●	●			
2. Super Soaker™ does not shoot far.		●	●		●	
3. Super Soaker™ makes noise while pumping.				●		
4. Water leaks around cap neck.			●			●

### IMPORTANT!

For optimum performance, pump 3 to 4 times after each shot.

### DO'S AND DON'TS

- 1 Do not shoot at any-one's face or eyes.
- 2 Do not leave Super Soaker™ pressurized when not in use. Pull trigger until all pressure is released. Remove water from reservoir.
- 3 Fill your Super Soaker™ with clean, clear tap water only. Use of other water or liquids may be harmful or damage the Super Soaker™.