 


EXTRA POWER

XP 55
HIGH PRESSURE SUPER
SOAKER

Water Reservoir Bottle

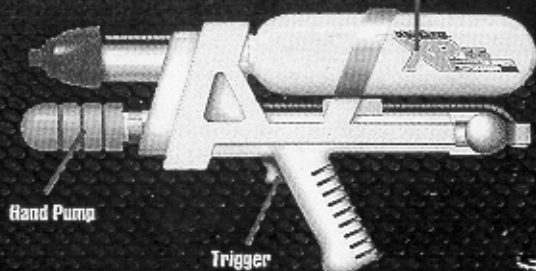

Hand Pump

Trigger

GUN SPECIFICATIONS

SIZE:

17"

WEIGHT EMPTY:

1 lb. 2 oz

WEIGHT FILLED:

2 lb. 11 oz

WATER CAPACITY:

24 fl. oz

PUMP STROKE: 6 $\frac{3}{4}$ "

PRESSURE:


45 p.s.i.

SHOOTING DISTANCE:

50 ft.

EXTRA POWER

XP 55
HIGH PRESSURE SUPER
SOAKER

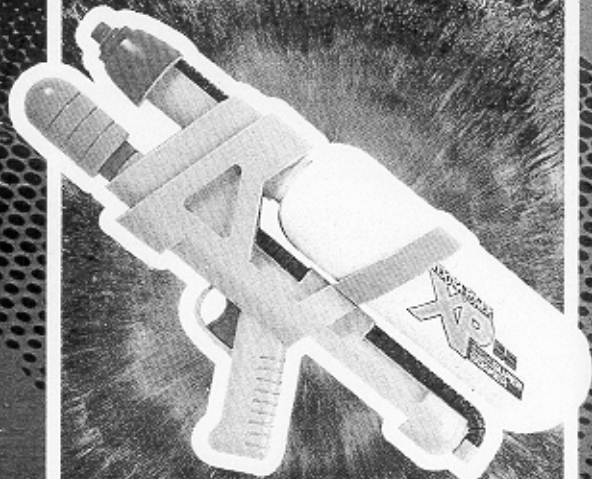

For comments or questions
call 1-800-669-TOYS

© LARAMI CORPORATION
Mt. Laurel NJ 08054

LARAMI
MADE IN CHINA

LARAMI




1. Unscrew bottle while holding gun with barrel up.
2. Fill bottle approximately 2/3 full with clean, clear tap water.
3. Screw bottle into position, threading pick-up tube into bottle. It is not necessary to screw bottle too tight.
4. Use pump handle to pressurize gun; approximately 10-12 pumps.
5. Pull trigger for powerful water burst.
6. For best performance, pump after each shot.

TROUBLE-SHOOTING CHART

	Bottle out of water.	Gun not pressurized.	Bottle not screwed all the way in.	This is normal.	Hold trigger back until all pressure is released prior to removing bottle.	O-ring around bottle is dirty or missing.
1. Gun does not shoot.	X	X	X			
2. Gun does not shoot far.		X	X			
3. Gun makes noise when pumping.				X		
4. Water spurts out around bottle neck when removing bottle.					X	
5. Water leaks around bottle neck.			X			X

WARNING:
Release pressure in gun by holding trigger back prior to removing tank.

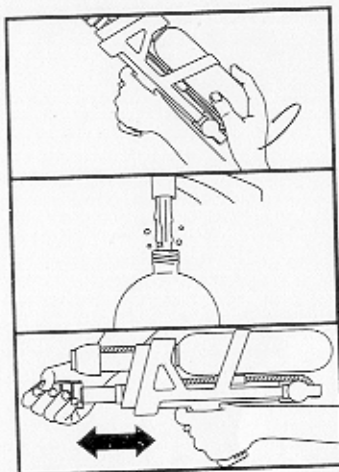

1. Unscrew bottle, holding gun barrel up. Fill 2/3 full with clean tap water.
2. Screw bottle in position, threading pick-up tube into bottle.
3. Pump handle to pressurize. (10-12 pumps)

1. Do not shoot at anyone's face or eyes.
2. Do not leave gun pressurized when not in use. Hold trigger back until all pressure is released, prior to removing bottle. Remove water from reservoir if gun is not going to be used.
3. Do not use anything but clean, clear tap water. Use of dirty water or other liquids may be harmful or damage the gun.