


XTRA POWER
XP 65
AIR PRESSURE SUPER SOAKER

NOZZLE


WATER RESERVOIR

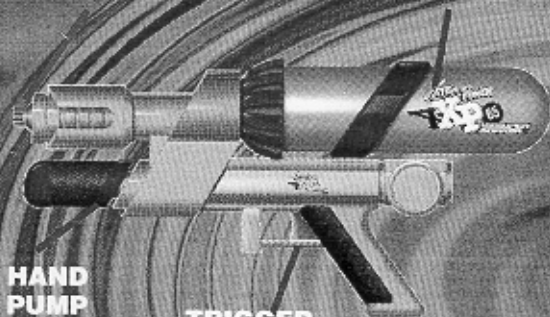

HAND PUMP

TRIGGER

XTRA POWER
XP 65
AIR PRESSURE SUPER SOAKER

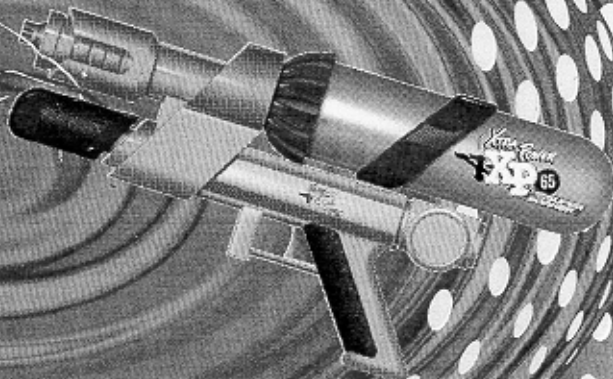

SUPER SOAKER™ SPECIFICATIONS

SIZE: 16 7/8"

WATER CAPACITY: 20 fl. oz

WEIGHT EMPTY: 1 lb

PUMP STROKE: 6 5/8"

WEIGHT FILLED: 2 lb 5 oz

PRESSURE: 45 p.s.i.

© 1995 LARAMI LIMITED.

A Subsidiary of Hasbro Inc. Mount Laurel N.J. 08054. Made in China.

All Rights Reserved. FOR COMMENTS OR QUESTIONS CALL 1-800-669-TOYS

LARAMI®

1. Unscrew bottle while holding Super Soaker™ with barrel up.

2. Fill reservoir bottle about 2/3 full with clean, clear tap water only.

With Super Soaker™ pointed up, guide reservoir bottle through retaining bracket and screw into Super Soaker™.

3. Use pump handle to pressurize Super Soaker™ approximately 10-12 pumps. The

more times you pump, the more pressure you create and the further your Super Soaker™ will shoot.

Built-in safety valve prevents over pressurizing.

4. Pull trigger to create a powerful soaking stream.

Super Soaker™ XP 85's new snap action trigger valve allows for precision bursts. Snap the trigger for pulsating action.

5. Pull trigger for powerful water burst.

6. For best performance pump after each shot.

DO'S AND DON'TS

- 1 Do not cheer at anyone's face or eyes.
- 2 Do not leave Super Soaker™ pressurized when it is not in use. Hold trigger back until all pressure is released, prior to nozzles. Remove water from reservoir if Super Soaker™ is not going to be used.
- 3 Do not use anything but clean, clear tap water. Use of other water or liquids may be harmful or damage the Super Soaker™.



1. Unscrew bottle.



2. Fill bottle approximately 2/3 full with clean, clear tap water.



3. Screw bottle in position threading pick up tube into bottle.



4. Pull trigger for powerful water burst.

TROUBLESHOOTING CHART

XP 65	Bottle out of water	Super Soaker™ not pressurized	This is normal	Bottle not screwed all the way in	Intake screen on pick-up tube is clogged	Depressurize bottle by holding trigger back until all pressure is released, prior to removing bottle.	O-ring around bottle is dirty or missing
	Refill bottle 2/3 full	Pump 10 to 12 pumps	Sounds are valves operating	Screw bottle until snug, don't overtighten	Clean screen		Do not lose O-ring
1. Super Soaker™ does not shoot.	X	X		X			
2. Super Soaker™ does not shoot far.		X		X	X		
3. Super Soaker™ makes noise when pumping.			X				
4. Water spurts out around bottle neck when removing bottle.						X	
5. Water leaks around bottle neck.				X			X