

XP-70 SPECIFICATION CHART

Size: 17 3/4" x 9 1/4"

Water Capacity: 29 oz.

Weight Empty: 26 oz.

Weight Filled: 55 oz.

Pressure: 40 p.s.i.

Pump Stroke: 6 1/8"

AIR PRESSURE **SUPER
SOAKER**

**See-Through
Water Tank**

**Nozzle
Hand Pump**

**Twist-Off
Cap
Trigger**


**XTRA
POWER
XP 70**

© 1997 Larami Limited, A Subsidiary of Hasbro, Inc. Mt.
Laurel, NJ 08054. Made in China. Conforms with 75 CFRS
1150-3. For questions or comments call 1-800-669-TOYS.


LARAMI




1. Twist off easy-fill, tethered cap.

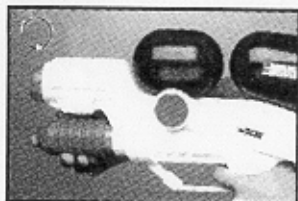

3. Use hand pump to pressurize Super Soaker™ 5 to 7 pumps. The more times you pump, the more pressure you create and the further you can shoot.

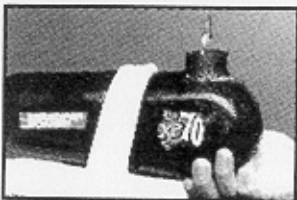

2. Fill reservoir bottle approximately 2/3 full with clean, clear tap water. Replace cap, twisting firmly, but not too tightly.

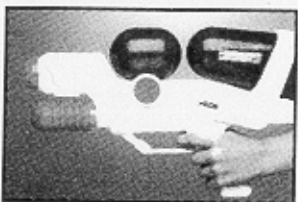

4. Pull trigger to create a powerful burst of water. Snap the trigger for pulsating action. For best performance, pump after each shot.

TROUBLESHOOTING CHART

XP-70	Bottle out of water	Super Soaker™ not pressurized	Cap not screwed all the way in	This is normal	Intake screen on pickup tube is clogged	O-ring in cap is missing
	Refill bottle	Pump 5 to 7 times	Screw cap until snug	Sounds are valves operating	Clean screen	Do not lose O-ring
1. Super Soaker™ does not shoot.	●	●	●			
2. Super Soaker™ does not shoot far.		●	●		●	
3. Super Soaker™ makes noise while pumping.				●		
4. Water leaks around cap neck.			●			●

IMPORTANT!

For optimum performance, pump 3 to 4 times after each shot.

DO'S AND DON'TS

- 1 Do not shoot at any-one's face or eyes.
- 2 Do not leave Super Soaker™ pressurized when not in use. Pull trigger until all pressure is released. Remove water from reservoir.
- 3 Fill your Super Soaker™ with clean, clear tap water only. Use of other water or liquids may be harmful or damage the Super Soaker™.