

XP-85 SPECIFICATION CHART

Size: 19" x 9 3/4"	Water Capacity: 37 oz.
Weight Empty: 20 oz.	Weight Filled: 57 oz.
Pressure: 40 p.s.i.	Pump Stroke: 6 3/8"

AIR PRESSURE **SUPER
SOAKER**

See-Through
Water Tank

Triple
Nozzle

Hand Pump


Twist-Off
Cap

Trigger


XTRA
POWER
XP 85
TRIPLE
SHOT

LARAMI

© 1997 Larami Limited, A Subsidiary of Hasbro, Inc. Mt.
Laurel, NJ 08054. Made in China. Conforms with 15 CFRS
1150-3. For questions or comments call 1-800-669-TOYS.

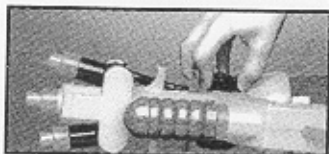

1. Twist off easy-fill, tethered cap.

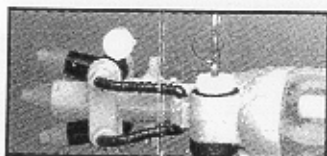

2. Fill reservoir bottle approximately 2/3 full with clean, clear water. Replace cap, twisting firmly, but not too tightly.



3. Use hand pump to pressurize Super Soaker™ 15 to 25 pumps. The more you pump, the more pressure you create and the further you can shoot.

4. Pull trigger to create a powerful burst of water. Snap the trigger for pulsating action. For best performance, pump after each shot.



5. Squeeze levers together to direct water streams right, left and center all at once - for 180° of water coverage.

TROUBLESHOOTING CHART

XP-85	Bottle out of water	Super Soaker™ not pressurized	Cap not screwed all the way in	This is normal	Intake screen on pickup tube is clogged	O-ring in cap is missing
	Refill bottle	Pump 15 to 25 times	Screw cap until snug	Sounds are valves operating	Clean screen	Do not lose O-ring
1. Super Soaker™ does not shoot.	●	●	●			
2. Super Soaker™ does not shoot far.		●	●		●	
3. Super Soaker™ makes noise while pumping.				●		
4. Water leaks around cap neck.			●			●

IMPORTANT!

For optimum performance, pump 3 to 4 times after each shot.

DO'S AND DON'TS

- Do not shoot at any-one's face or eyes.
- Do not leave Super Soaker™ pressurized when not in use. Pull trigger until all pressure is released. Remove water from reservoir.
- Fill your Super Soaker™ with clean, clear tap water only. Use of other water or liquids may be harmful or damage the Super Soaker™.