

XP-90 PULSE-FIRE™ SPECIFICATION CHART

Size: 20 1/4" x 8 1/2"

Water Capacity: 32 oz.

Weight Empty: 26 oz.

Weight Filled: 58.3 oz.

Pressure: 35 to 40 p.s.i.

Pump Stroke: 6 1/2"

Water
Reservoir

Trigger

AIR PRESSURE **SUPER
SOAKER.**

Hand Pump

Pulsating
Nozzle


© 1998 Larami Limited, A Subsidiary of Hasbro, Inc.
Mt. Laurel, NJ 08054. Made in China. Product color and decoration
may vary. For questions or comments call 1-800-669-TOYS.

XTRA
POWER


XP90

PULSE FIRE™

 
LARAMI

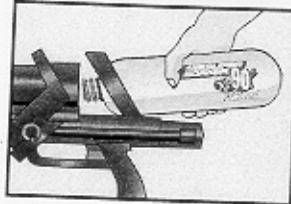

 
1. Unscrew bottle from blaster. Fill water tank 2/3 full with clean tap water. Replace bottle by screwing all the way in.

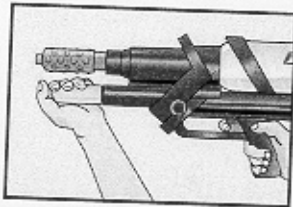

 2. Pump hand pump 15 to 25 times to build up pressure. When your Super Soaker® becomes difficult to pump, discontinue pumping and start blasting away.

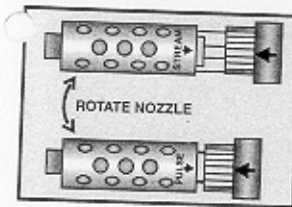

3. Rotate pulsating nozzle in either direction to select between pulsating action and a constant stream of Super Soaker® power.

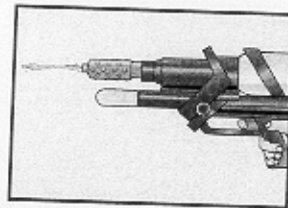

4. Pull trigger to blast away.

TROUBLESHOOTING CHART

XP-90 PULSE FIRE™

	Bottle out of water	Super Soaker® not pressurized	Bottle not screwed all the way in	This is normal	Intake screen on pickup tube is clogged	O-ring in bottle is missing
	Refill bottle	Pump 15 to 25 times	Screw bottle until snug	Sounds are valves operating	Clean screen	Do not lose O-ring
1. Super Soaker® does not shoot.	●	●	●			
2. Super Soaker® does not shoot far.		●	●		●	
3. Super Soaker® makes noise while pumping.				●		
4. Water leaks around bottle neck.			●			●

DO'S AND DON'TS

- 1 Do not shoot at any-one's face or eyes.
- 2 Do not leave Super Soaker® pressurized when not in use. Pull trigger until all pressure is released. Remove water from reservoir.
- 3 Fill your Super Soaker® with clean, clear tap water only. Use of other water or liquids may be harmful or damage the Super Soaker®.