

**XTRA POWER**  
**XXP 175**  
**SUPER SOAKER**

**WATER RESERVOIRS**

**NOZZLES**


**PRESSURE GAUGE**



**HAND PUMP**

**TRIGGER**

**XTRA POWER**  
**XXP 175**  
**AN AIR PRESSURE SUPER SOAKER**

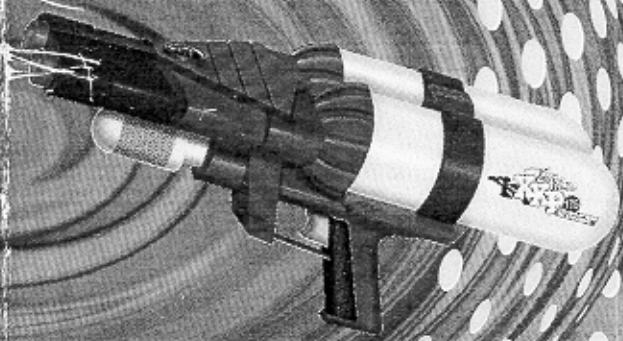

### **SUPER SOAKER™ SPECIFACATIONS**

<b>SIZE:</b> 20 5/8"	<b>WATER CAPACITY:</b> 50 fl. oz
<b>WEIGHT EMPTY:</b> 2 lb 4 oz	<b>PUMP STROKE:</b> 7 1/2"
<b>WEIGHT FILLED:</b> 5 lb 8 oz	<b>PRESSURE:</b> 45 p.s.i.

© 1995 LARAMI LIMITED.  
A Subsidiary of Hasbro Inc. Mount Laurel N.J. 08054. Made in China.  
All Rights Reserved. FOR COMMENTS OR QUESTIONS CALL 1800-669-TOYS

**LARAMI**

1. Unscrew bottles while holding Super Soaker™ with barrel up.

2. Fill reservoir bottles about 2/3 full with clean, clear tap water only.

3. With Super Soaker™ pointed up, guide reservoir bottles through retaining bracket and screw into Super Soaker™.

4. Use pump handle to pressurize Super Soaker (approximately 10 - 12 pumps). Air pressure gauge will indicate when Super Soaker™ is fully charged.

5. After shooting water streams through the double barrels, repeat pumping action to recharge Super Soaker.™ Check pressure gauge indicator to determine maximum charge.

6. Pump a few times after each shot for high performance.

## DO'S AND DON'TS

- 1 Do not shoot at anyone's face or eyes.
- 2 Do not leave Super Soaker™ pressurized when it is not in use. Hold trigger back until all pressure is released, prior to reuse. Remove water from reservoir if Super Soaker™ is not going to be used.
- 3 Do not use anything but clean, clear tap water. Use of other water or liquids may be harmful or damage the Super Soaker.™




1. Unscrew bottles.



2. Fill bottles approximately 2/3 full with clean, clear tap water only.



3. Screw both bottles in position threading pick up tube into each bottle.

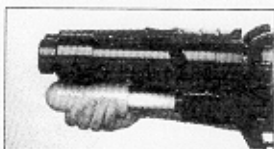

4. Pump a few times after each shot for high performance.

## TROUBLESHOOTING CHART

XP 175	Bottle out of water Refill bottle 2/3 full	Super Soaker™ not pressurized Pump 10 to 12 pumps	This is normal Sounds are valves operating	Bottle not screwed all the way in Screw bottle until snug, don't over-tighten	Intake screen on pick-up tube is clogged Clean screen	Depressurize bottle by holding trigger back until all pressure is released, prior to removing bottle.	O-ring around bottle is dirty or missing. Do not lose O-ring
1. Super Soaker™ does not shoot.	X	X		X			
2. Super Soaker™ does not shoot far.		X		X	X		
3. Super Soaker™ makes noise when pumping.			X				
4. Water spurts out around bottle neck when removing bottle.						X	
5. Water leaks around bottle neck.				X			X