 


Ages 3 & Up
66842/66843

Swimmin' Chrissy™

DOLL

She
really
kicks!

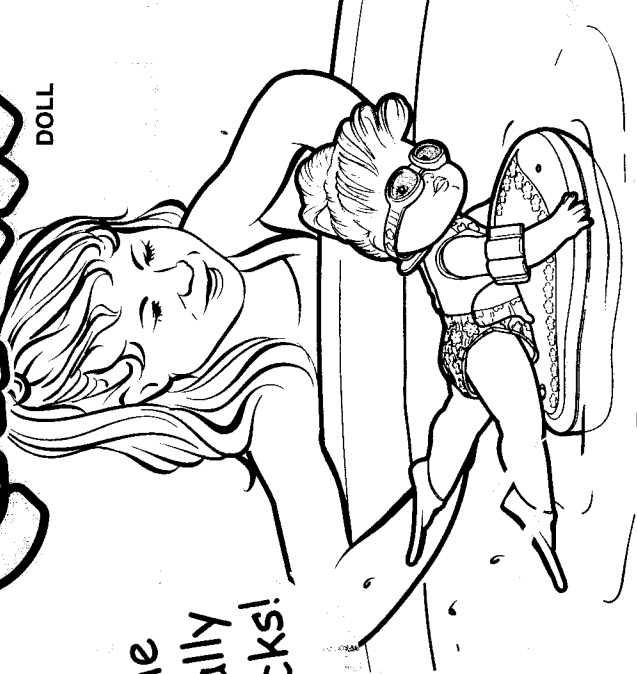

This toy is not recommended for play at the beach.

Kickboard requires 2 "AA" alkaline batteries (not included).

Phillips screwdriver (not included) needed to insert batteries.

**Includes doll, motorized kickboard, swim goggles, 2 arm floaties,
towel, and instructions.**

Please retain these instructions for future reference.

Using Phillips screwdriver, loosen screw in battery compartment cover (screw stays attached to cover). Remove cover. Insert 2 fresh "AA" alkaline batteries. Replace cover and tighten screw.


NOTE: Make sure cover is correctly in place and screw is securely tightened to prevent any water from entering compartment.

Before replacing batteries, make sure kickboard is dry before opening compartment.


TO AVOID BATTERY LEAKAGE

Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions. Do not mix old batteries and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.


Always remove worn or dead batteries from the product.

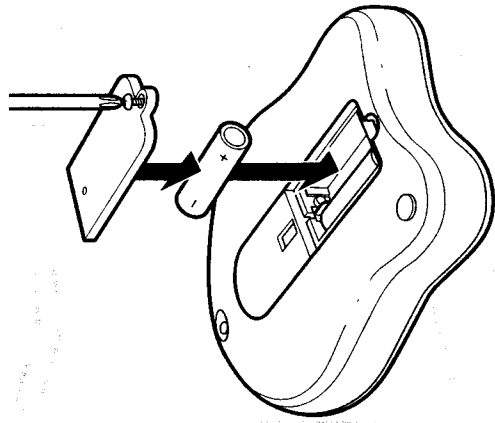

Place Swimmin' Chrissy into clip on top of kickboard as shown.

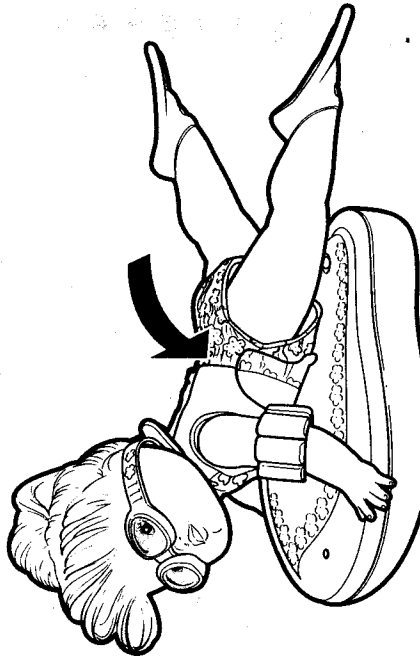


To activate kicking, press button on bottom of kickboard.

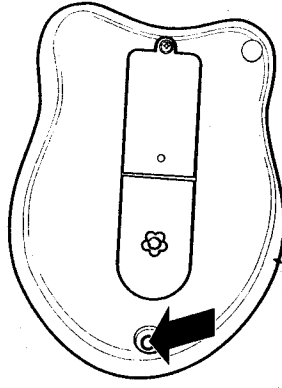


Place kickboard (with Swimmin' Chrissy attached) in water.



If necessary, adjust doll's swimsuit to make sure it is not caught in gap between body and legs, which could prevent free movement of her legs.

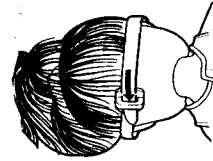

Put goggles on Swimmin' Chrissy: Place goggles around doll's neck, insert one end of strap through slot in other end of strap, slide goggles up onto face, and pull strap to tighten.

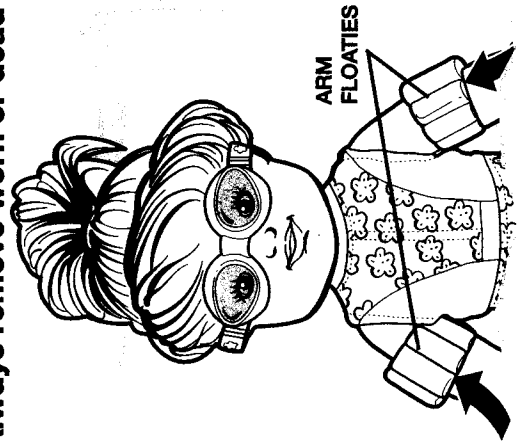

If Swimmin' Chrissy becomes filled with water, hold her upright to let the water drain from her body.

Do not bring Swimmin' Chrissy to the beach because sand may damage the motorized kickboard.

If water stops squirting from her kickboard, the holes may be clogged. Have an adult clear them by unbending a paper clip and carefully inserting it into the holes.

If you have any questions, please call 1-800-327-8264
Or write (include name, address and phone number):

Hasbro, Inc.
Consumer Affairs
P.O. Box 200
Pawtucket, RI 02862-0200

Product and colors may vary.
© 1999 Hasbro, Inc. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.

P/N 4880450000