



# Talk 'n Dress Baby Bop™ Instructions

71246  
Ages 2 & Up

Questions? Call: 1-800-PLAYSKL™

For future reference, our toll-free consumer service number is also located on this product.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE USE.

Replacement batteries: 3 "AAA" batteries (alkaline recommended). Tool needed for battery replacement: Phillips® screwdriver.

Jr Friend,

 
 
Hi! Thank you very much for taking me home with you! Together, we can enjoy hours of dress-up play when you **button** my vest, **zip** my pocket, **snap** my bracelet and **buckle** my shoes. To add to the fun, you can squeeze my tummy to hear one of seven special phrases. I just know we're going to have a wonderful time discovering the fun of dressing up . . . after all, it's always better when you learn with a friend!

Love,  
Baby Bop™





## HOW TO OPERATE

Talk 'n Dress Baby Bop is a soft, cuddly friend who says seven special phrases. To hear a phrase, simply squeeze or hug Baby Bop's tummy!

Talk 'n Dress Baby Bop says:

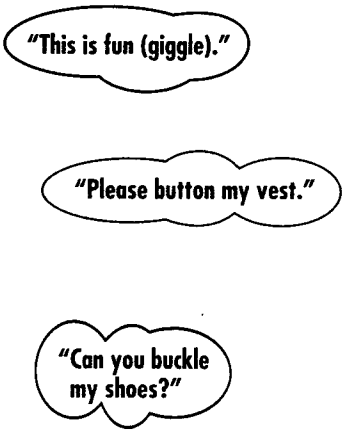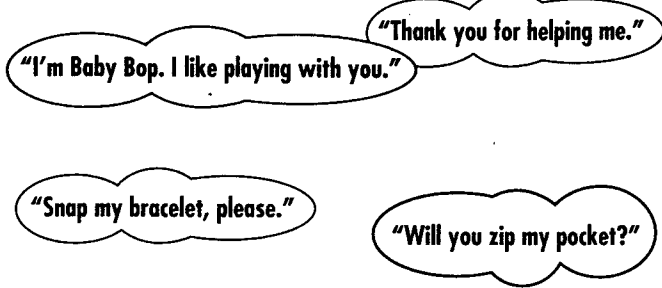

    **TO REPLACE BATTERIES:** 3 button cell batteries included. Replace with 3 "AAA" batteries (alkaline recommended). Parents: Use a Phillips® screwdriver to replace batteries.

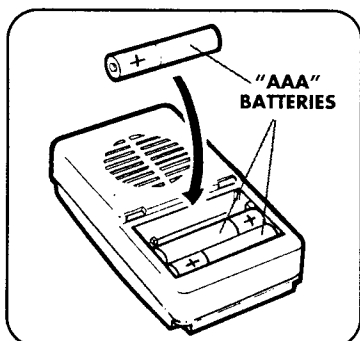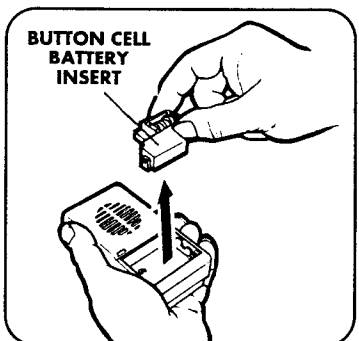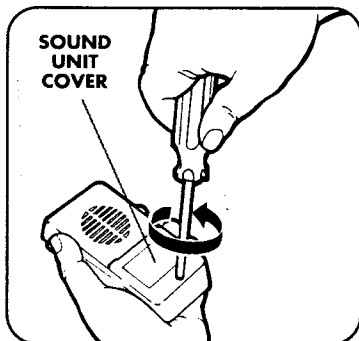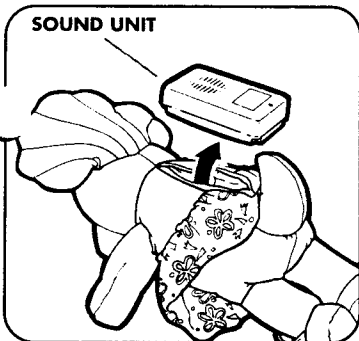

- Hold zipper between thumb and index finger, open back of toy and remove sound unit. If difficult, use pliers to hold and pull zipper end. (To help prevent child from tampering with sound unit, the zipper is not equipped with a pull tab.)
- With Phillips® screwdriver, remove screw from sound unit cover.
- Swing cover open and discard plastic insert and button cell batteries.
- Insert 3 "AAA" batteries (alkaline recommended) into compartment as indicated. Swing cover closed and retighten screw.
- Reinsert sound unit into toy (in an upright position), with button side facing front of Baby Bop.

## HOW TO CARE FOR TALK 'N DRESS BABY BOP

- Talk 'n Dress Baby Bop is machine washable and dryer safe.
- To wash, unzip closure on back of toy and remove sound unit.
- Place toy in pillow case and tie end closed. Machine wash on gentle cycle with cold water and mild detergent. Do not bleach. Tumble dry in pillow case on low heat setting. Reinsert sound unit into toy with button side facing the front of Baby Bop.
- Avoid exposing Talk 'n Dress Baby Bop to excessive heat or submersion in water, which could cause damage.

**CAUTION:**

1. As with all small batteries, the batteries included with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
2. When installing replacement batteries make sure the batteries are inserted correctly and follow the toy and battery manufacturers' instructions.
3. Never mix old batteries with new batteries, or standard (carbon-zinc) with alkaline batteries.
4. Batteries may explode or leak if recharged, disassembled or heated.
5. Remove batteries if product is stored for a long period of time.
6. Always remove exhausted or dead batteries from the product.

## IF THERE'S A PROBLEM . . .

- Change the batteries if Baby Bop's voice slows down or becomes scratchy.
  - If Talk 'n Dress Baby Bop doesn't work after batteries are replaced, check to be sure batteries are inserted correctly.
- If you have any questions, comments, or problems concerning the operation, care or repair of this product, please call this toll-free number: **1-800-PLAYSKL.**