 


Talkboy™ The Talker

DIGITAL ALARM WATCH INSTRUCTIONS

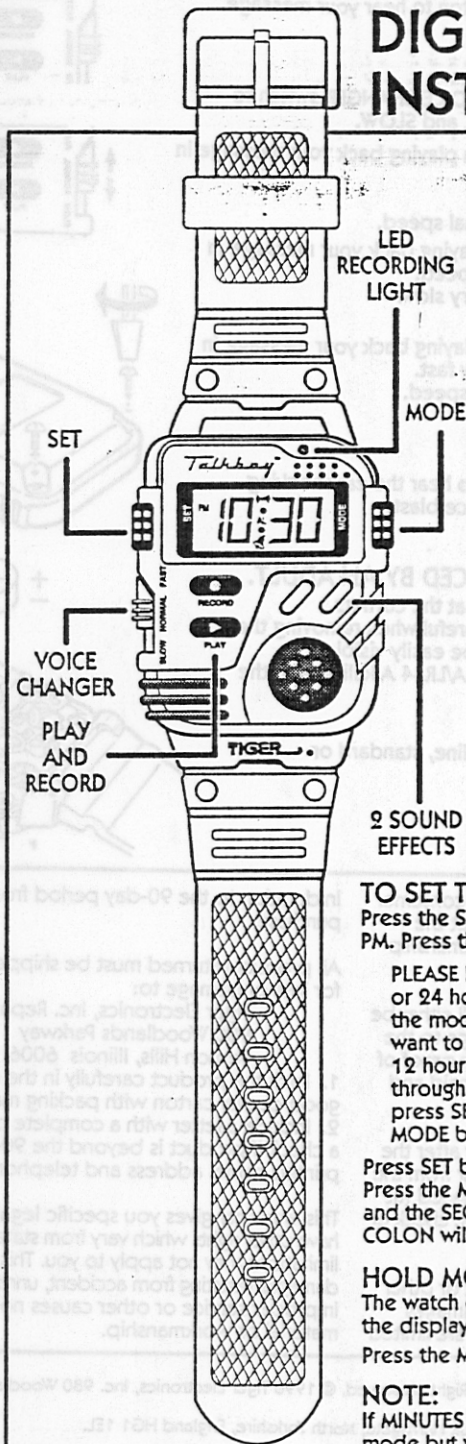

TO SET THE ALARM:

Press SET button in normal display mode to display the ALARM DISPLAY. To set the ALARM ON press the MODE button once and the bell symbol will appear on the screen. To have an hourly cuckoo chime, press SET again and the sound symbol will appear on screen.



TO SET THE ALARM TIME:

Press the SET button again to read the HOUR display and it also shows the AM and PM. Press the MODE button to change the HOUR and AM/PM display.




Press the SET button again to set the MINUTE display. Press the MODE button to change the MINUTES.



To skip the alarm setting mode, press the SET button 4 times to go directly to the MONTH/DATE/TIME SETTING MODE.


TO SET THE MONTH:

Press SET button in normal display mode to display the MONTH. Set the MONTH by pressing the MODE button.

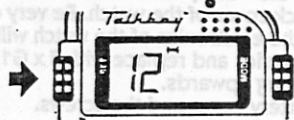

TO SET THE DATE:

Press the SET button again to reach the DATE display. Advance the date by pressing the MODE button.

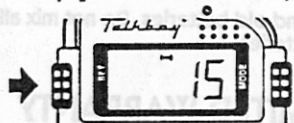


TO SET THE TIME:

Press the SET button again to read the HOUR display and it also shows the AM and PM. Press the MODE button to change the HOUR and AM/PM.

PLEASE NOTE: You can set the time either in 12 or 24 hour mode (military time). Keep pressing the mode button until you reach the hour you want to set. The time will cycle through all the 12 hour choices and then automatically cycle through the 24 hour choices. Do not need to press SET again, just need to keep pressing the MODE button until you reach the time to be set.



Press SET button again to set the MINUTE display. Press the MODE button to change the MINUTES and the SECOND counter will be reset to zero. The COLON will stop flashing when the watch is set.

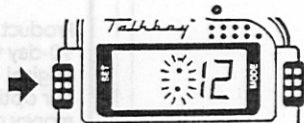

HOLD MODE:

The watch enters HOLD mode with the next press of the SET button. In this mode the display shows HOUR and MINUTES and a non-flashing COLON.

Press the MODE button once to reset to normal display mode.

NOTE:

If MINUTES were not changed in MINUTE mode, the watch will not enter the HOLD mode but will automatically revert to normal display mode.

STANDARD DISPLAY:

Press **MODE** button once and the **ALARM DISPLAY** will be displayed. This will continue to be displayed two seconds after the **MODE** button is pressed and then will return to the **HOUR** and **MINUTE** display.

Press **MODE** button twice and the **MONTH** and **DATE** will be displayed. This will continue to be displayed two seconds after the **MODE** button is pressed and then will return to the **HOUR** and **MINUTE** display.

Press the **MODE** button 3 TIMES and the seconds will be displayed. Pressing the **SET** button will cause the **SECONDS** to reset and hold the **SECOND** counter until the **SET** button is released. By pressing the **MODE** button again will return to the **HOUR** and **MINUTE** display.

RECORD AND PLAY:

Press the button marked with the **RED RECORDING** markings for recording. Press the button again to stop recording or until memory full. The **RED LED** will light up when you are recording.

When finished recording press the **GREEN** play button to hear your message. There is 6 seconds of record and playback time.

VOICE CHANGER:

To manipulate what you have recorded, slide the **VOICE CHANGER** switch to one of the three different modes of **FAST**, **NORMAL** and **SLOW**.

If message is recorded in **NORMAL** position - When playing back your message in **FAST** position, the message will be faster.
SLOW position, the message will be slower.
NORMAL position, the message will be normal speed.

If message is recorded in **FAST** position - When playing back your message in **FAST** position, the message will be normal speed.
SLOW position, the message will be very, very slow.
NORMAL position, the message will slow.

If message is recorded in **SLOW** position - When playing back your message in **FAST** position, the message will be very, very fast.
SLOW position, the message will be normal speed.
NORMAL position, the message will be fast.

SOUND EFFECTS:




Press one of the two **BLUE** sound effects buttons to hear the ear shocking sound effects of the the cuckoo clock and the space blast.

BATTERY REPLACEMENT:

CAUTION: BATTERIES SHOULD BE REPLACED BY AN ADULT.

1. On the back of the watch, remove the 4 screws at the corners.
2. Remove the back cover of the watch. Be very careful when removing the back because the electronics of the watch will be easily visible.
3. Remove the batteries and replace with 3 x G13-A/LR44 Alkaline with the (+) symbols facing upwards.
4. Replace the battery cover and the screws.

Do not mix new and old batteries. Do not mix alkaline, standard or rechargeable batteries.

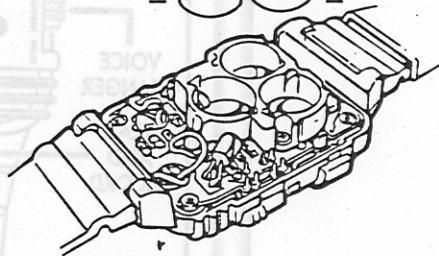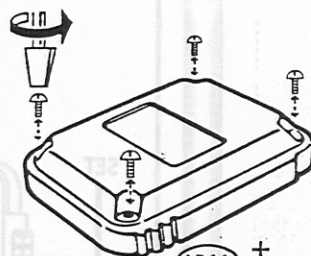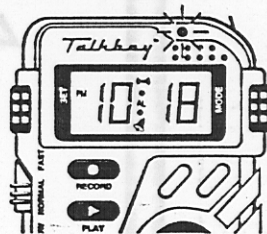

90-DAY LIMITED WARRANTY

Tiger Electronics, Inc. (TEI) warrants to the original consumer purchaser of any of its electronic games or toys that the product will be free of defects in material or workmanship for 90 days from the date of original purchase.

During this 90-day warranty period, the product will either be repaired or replaced (at our option) without charge to the purchaser, when returned either to the dealer with proof of the date of purchase or to TEI when returned prepaid and insured with proof of date of purchase.

Product returned to TEI without original receipt or after the 90-day warranty has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at our option) for a service charge of US\$11.00. Make check or money order payable to Tiger Electronics, Inc.

TEI will not be liable for loss of use of the product or other incidental or consequential costs, expenses, or damages incurred by the purchaser. Any implied warranties are limited

in duration to the 90-day period from the original date of purchase.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Inc. Repair Dept.
980 Woodlands Parkway
Vernon Hills, Illinois 60061 U.S.A.

1. Pack the product carefully in the original box or use a good-quality carton with packing materials.
2. Include a letter with a complete description of the defect, a check if product is beyond the 90-day warranty, and your printed name, address and telephone number.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state so the foregoing limitations may not apply to you. This warranty does not cover damages resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.