

FCC STATE: JT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product and colors may vary.

© 1996 Marc Brown.

© 1996 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.

© denotes Reg. U.S. Pat. & TM Office.

MADE IN CHINA.

P/N 47042700

 


Questions? Call:  
1-800-PLAYSKL

**PLAYSKOOL**


Ages 2 & Up  
5834

**TALKING  
ARTHUR™**

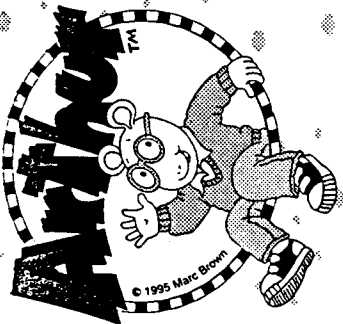

*Thank you for purchasing this Playskool® product.*

 Please keep these  
instructions for  
future use.

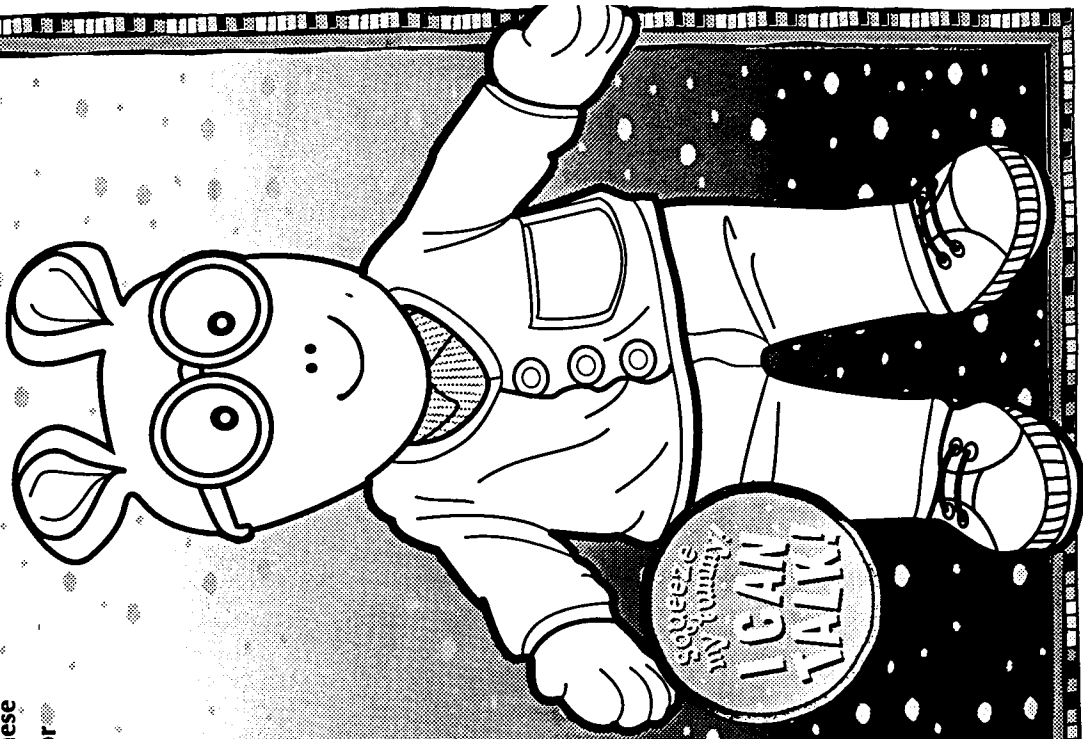

## TO ACTIVATI

Talking Arthur is a soft, cuddly friend who says

## 7 fun phrases

To hear a phrase, simply squeeze him or hug his tummy! Talking Arthur says:

"Let's ride our bikes."

"Hi, I'm Arthur."

 
"I love to read."

"You're my best friend."


"Things looked fuzzy before I got glasses."

"I love my dog Pal."

"That tickles! Tee-hee-hee!"

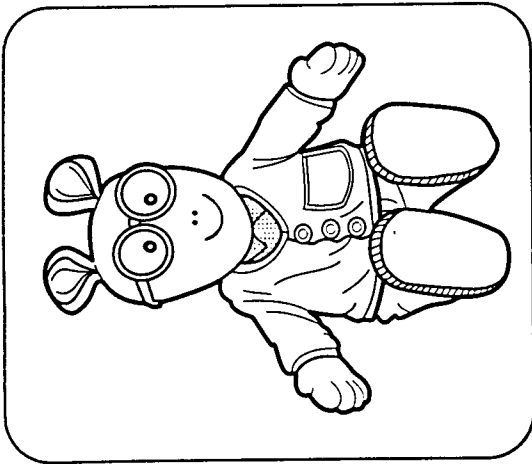

## TO REPLACE BATTERIES

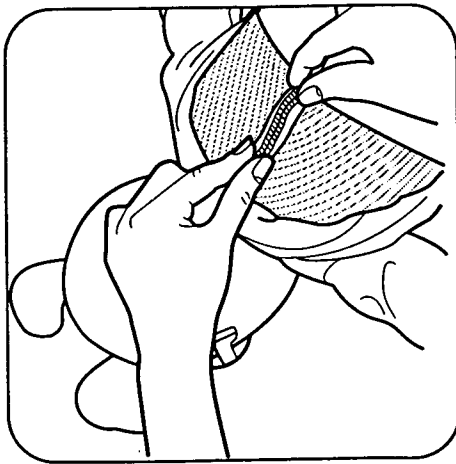 

- Holding zipper between thumb and index finger, open back of toy and remove sound unit. If difficult, use pliers to hold and pull zipper end. (To help prevent child from tampering with sound unit, the zipper is not equipped with pull tab.)
- With Phillips screwdriver (not included), loosen screw in sound unit cover and remove cover (screw will remain attached to cover).
- Discard exhausted batteries.
- Insert 3 "AAA" batteries (alkaline recommended) into compartment as indicated.
- Replace cover on sound unit and tighten screw.
- Make sure laces are tied to sound unit. **Reinsert sound unit into toy (in an upright position), with button side facing front of toy.**
- After reinserting the sound unit, avoid exposing toy to excessive heat or submersion in water, which could cause damage.

## CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old batteries and new batteries.
3. Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
4. Always remove exhausted or dead batteries from the product.

## TO CLEAN

- Machine washable and dryer safe when sound unit is removed.
- To wash, unzip closure on back of toy, untie laces from sound unit, and remove sound unit.
- Place toy in pillow case and tie end closed. Machine wash separately -- gentle cycle, cold water, mild detergent. Do not bleach. Tumble dry promptly in pillow case -- low heat setting.
- Retie laces to sound unit, by making a shoe knot (double-knot the bow to further prevent child tampering).
- Reinsert sound unit into toy (in an upright position), with **button side facing front of toy.**

## IF THERE'S A PROBLEM...

- If voice slows down or becomes scratchy, change the batteries.
- If toy doesn't work after batteries are replaced, make sure batteries are inserted correctly.
- If you have any questions concerning the operation, care or repair of this product, please call this toll-free number: 1-800-PLAYSKL (1-800-752-9755).

