



**Talking Barney®**

**Instructions**

Recommended replacement batteries: 3"AA" Eveready® alkaline batteries.  
Tool needed for battery replacement: Phillips screwdriver.

Dear Friend,

Hi! I'm glad you decided to take me home!  
We're going to have lots of fun together,  
because I have so many things to say to you.  
Please have your parents read these  
instructions carefully so that they—and you—will  
know all about the way I work.  
I just know we're going to have a  
**ST-U-U-U-PENDOUS** time together!

Love,  
**Barney®**



**PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE USE.**

 
**HOW TO OPERATE**

- Talking Barney is a soft, friendly dinosaur who says hundreds of special phrases.
- To start the fun, squeeze Talking Barney's right hand or hug his tummy!
- When you squeeze Talking Barney's right hand, he'll suggest a fun thing to do: "Pretend to tiptoe like an horse" (or a monkey, or a duck...). Or he might say, "Please find something red" (or round, or purple...).
- When you hug or squeeze Talking Barney's tummy, he'll say some encouraging words: "Please hug me again" or "Remember, I love you."
- With each squeeze, you never know what Talking Barney will say next. But if you squeeze his hand or tummy for more than two seconds, he will repeat the previous phrase up to two times.
- If not in use, Talking Barney will automatically shut off after 90 seconds.  
(During the 90-second period, Talking Barney will say a phrase approximately every 30 seconds, then sign off with a musical sound.)


## HOW TO REPLACE BATTERIES

Talking Barney comes with 3 EVEREADY® Super Heavy Duty brand batteries.

CLOSURE

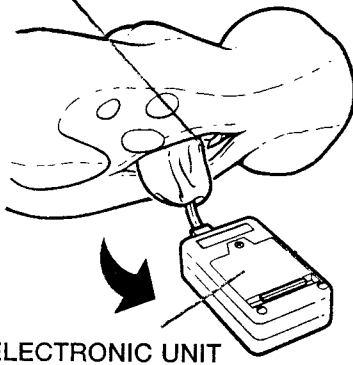


ELECTRONIC UNIT

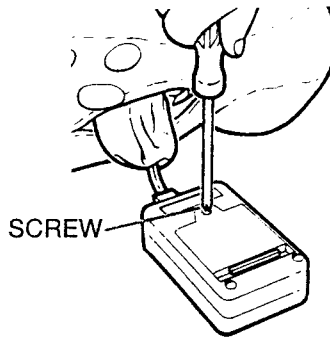 

SCREW

 3 "AA" BATTERIES

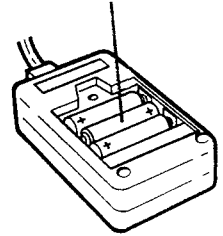

1. To install new batteries, open the closure on the back of the toy and pull out the electronic unit inside. NOTE: The electronic unit is permanently attached to the toy by the electrical cord. Do not attempt to remove cord from unit or toy.
2. With Phillips screwdriver, loosen screw on battery compartment door and remove door. Discard used batteries and insert 3 "AA" Eveready® batteries (alkaline recommended) as shown.
3. Refit door on battery compartment and retighten screw.  
Reinsert electronic unit into toy (as far inside as possible) and reseal closure.

### CAUTION: TO AVOID BATTERY LEAKAGE

1. When installing replacement batteries, be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old batteries and new batteries.
3. Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
4. Always remove exhausted or dead batteries from the product.

### HOW TO CARE FOR TALKING BARNEY (SURFACE WASHABLE ONLY)

- To keep Talking Barney clean, use a soft cloth dampened with a mild soap; rinse and dry with a soft cloth.
- Avoid exposing Talking Barney to excessive heat or submersion in water, which could cause damage.

### IF THERE'S A PROBLEM...

- Change the batteries if Barney will not talk, his voice sounds scratchy or he talks intermittently without being activated.
- If Talking Barney doesn't work after batteries are replaced, check to be sure batteries are inserted correctly.
- If you have any questions, comments, or problems concerning the operation, care or repair of Talking Barney, please call this toll-free number: 1-800-PLAYSKL.

### FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Product and colors may vary.

EVEREADY® is a registered trademark of Eveready Battery Company, Inc., St. Louis, MO.  
© 1992, 1997 The Lyons Group. The names and characters Barney, BJ and Baby Bob and the "overlapping dino spots" logo are trademarks of The Lyons Group. Barney and BJ are Reg. U.S. Pat. & TM office.

Playskool® is a trademark of Hasbro, Inc.

© 1992, 1997 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Off. ca

MADE IN CHINA.

C-678A

T-1045

P/N 43225805



Questions? Call:  
**1-800-PLAYSKL™**