

PLAYSKOOL

Ages 2 & Up
248

Talking Cell Phone

Thank you for buying this Playskool® product!

Includes 2 "AA" Eveready® batteries. Phillips screwdriver needed to replace batteries

PLAY INSTRUCTIONS

To "make a call," just press the keys on the keypad (the "phone number" can be any number or combination of keys).


The phone will wait until you finish entering the number, then you'll hear a ring - and a friend will answer on the other end with a message just for you!

The phone also has a special "Ring Back" feature! After making a call, wait about five seconds, and the friend will "call you back" with another message!



EVEREADY
Super Heavy Duty
brand batteries included.

WHEN BATTERIES NEED REPLACEMENT:

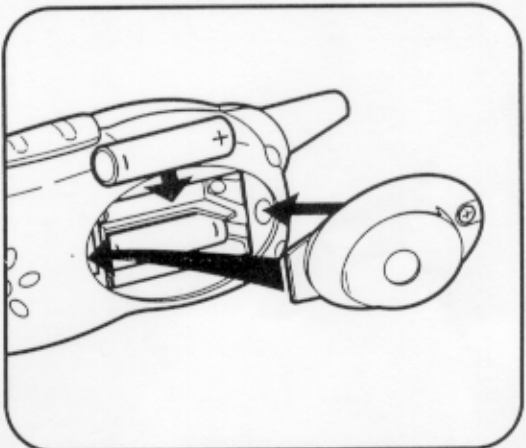

1. The Playskool Talking Cell Phone comes equipped with 2 "AA" batteries. The battery compartment is located on the back of the phone. When the original batteries are exhausted, use a Phillips screwdriver to loosen the screw that secures the battery compartment door. Loosen (but do not remove) the screw, and remove the door.

2. Insert 2 new "AA" batteries into the compartment, following direction indicators inside compartment. Replace door and re-fasten with the screwdriver.

CAUTION: TO AVOID BATTERY LEAKAGE:

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Always remove weak or dead batteries from the product.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this toy does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

© 1998 Hasbro, Inc., Pawtucket, RI 02862. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office. MADE IN CHINA.
EVEREADY, ENERGIZER and the EVEREADY logo are registered trademarks of EVEREADY BATTERY COMPANY, INC., St. Louis, MO 63164. 248 P/N 4824140000