

 


Ages 2 & Up


# Talking Cell Phone

## INSTRUCTIONS

*Thank you for buying this Playskool product!  
Phillips screwdriver needed to replace batteries (not included).*

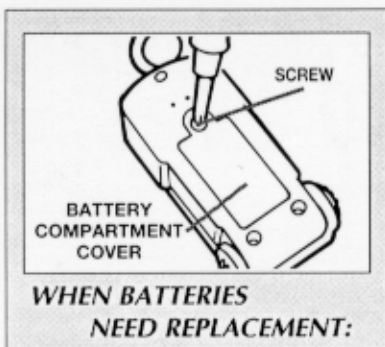

1. The Playskool Talking Cell Phone comes equipped with 2 "AA" batteries. The battery compartment is located on the back of the phone. When the original batteries are exhausted, use a Phillips screwdriver to loosen the screw that secures the battery compartment door. Loosen (but do not remove) the screw, and remove the door.

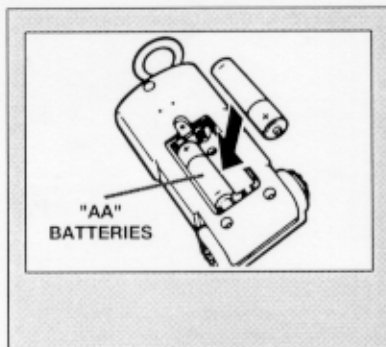


© 1996 Hasbro, Inc., Pawtucket, RI 02862 USA.  
All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office.

**MADE IN CHINA.**

 248 P/N 47228400



### **CAUTION: TO AVOID BATTERY LEAKAGE:**

1. Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instructions.
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable batteries.
3. Always remove exhausted or dead batteries from the product.

#### FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this toy does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.