

TO CLEAN

- Machine washable and dryer safe when sound unit is removed.
- To wash, open back of toy, untie laces from sound unit, and remove sound unit.
- Place toy in pillow case and tie end closed. Machine wash separately, gentle cycle, cold water, mild detergent. Do not bleach. Tumble dry promptly in pillow case, low heat setting.
- Retie laces to sound unit, by making a shoe knot (double-knot the bow to further prevent child tampering).
- Reinsert sound unit into toy (in an upright position), with button side facing front of toy.

IF THERE'S A PROBLEM...

- If voice slows down or becomes scratchy, change the batteries.
- If toy doesn't work after batteries are replaced, make sure batteries are inserted correctly.
- If you have any questions concerning the operation, care or repair of this product, please call this toll-free number: 1-800-PLAYSKL (1-800-752-9755).

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product and colors may vary.

© 1998 Marc Brown.
Playskool® is a trademark of Hasbro, Inc.
®, TM & © 1998 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.

P/N 48112100

 
 


Questions? Call
1-800-PLAYSKL

PLAYSKOOL

Ages 2 & Up
5849

Talking D.W.™

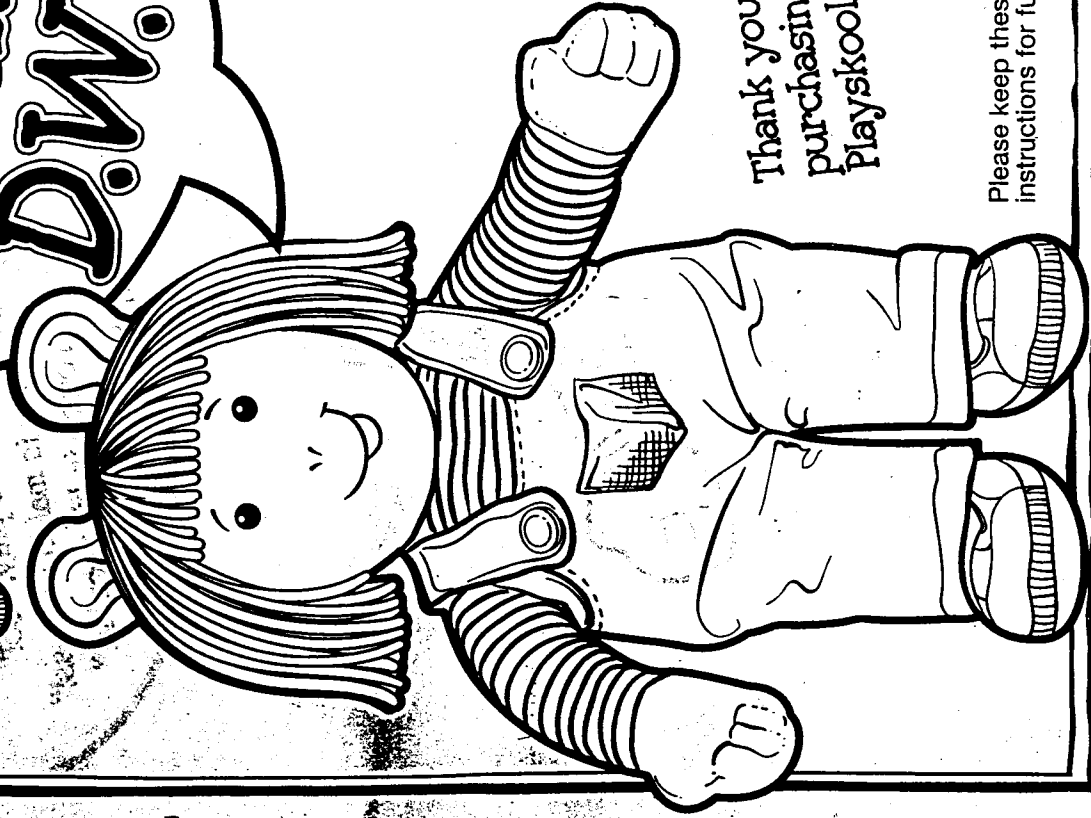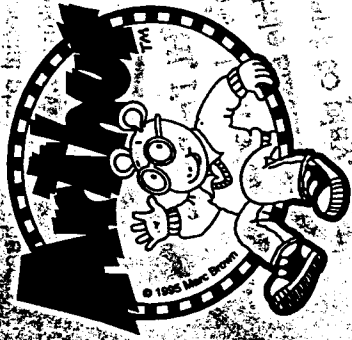


Thank you for
purchasing this
Playskool® toy!

Please keep these
instructions for future use.

TO ACTIVATE

Talking D.W. is a soft, cuddly friend who says 7 special phrases. To hear a phrase, simply squeeze her or hug her tummy! Talking D.W. says:

- "Hi, I'm D.W.!"
- "Don't I look adorable?"
- "Little sisters rule!"
- "I want to play, too!"
- "Arthur is making a mess!"
- "You're in big trouble!"
- "What's so funny?"

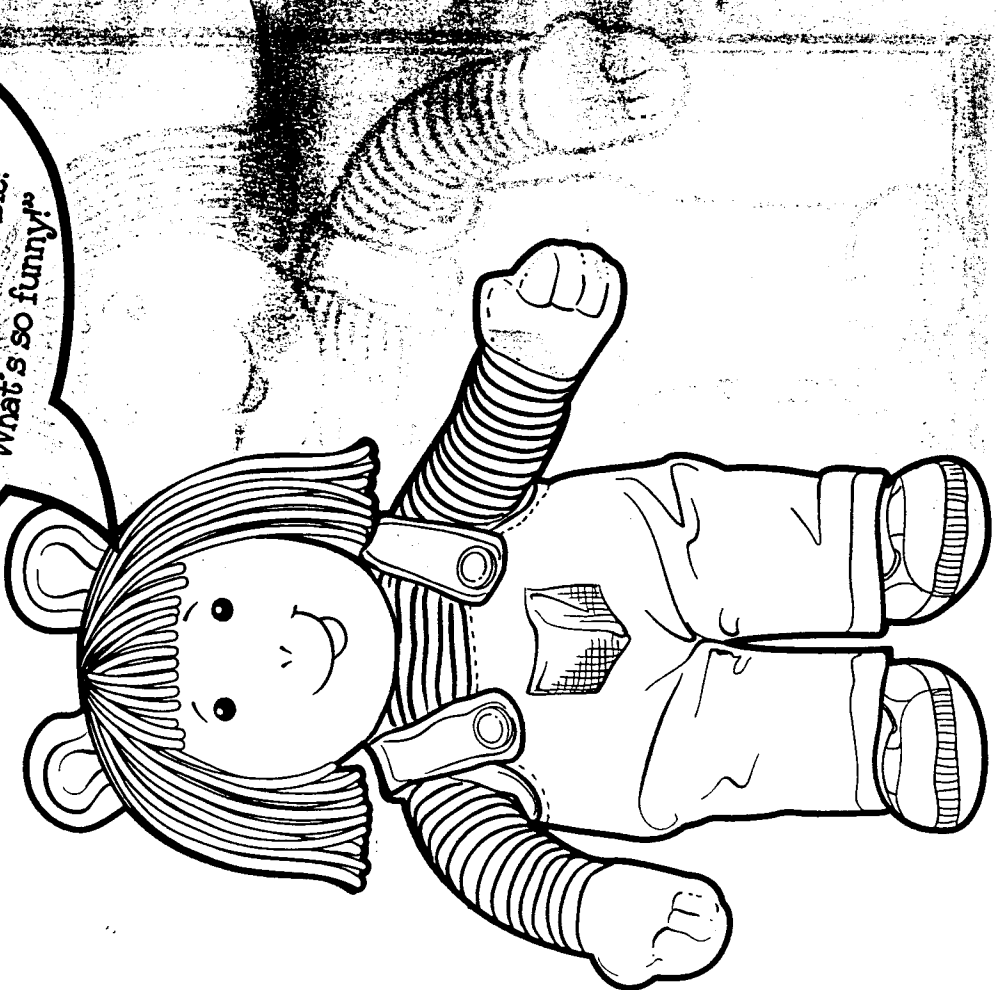

TO REPLACE BATTERIES



- Open back of toy and remove sound unit.
- With Phillips screwdriver (not included) loosen screw in sound unit cover and remove cover (screw will remain attached to cover).
- Discard exhausted batteries. Insert 3 "AAA" batteries (alkaline recommended) into compartment as indicated.
- Replace cover on sound unit and tighten screw.
- Make sure faces are tied to sound unit. Reinsert sound unit into toy (in an upright position) with button side facing front of toy.
- After reinserting the sound unit, avoid exposing toy to excessive heat or submersion in water, which could cause damage.



CAUTION:

1. As with all small batteries, the batteries included with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
2. Make sure the batteries are inserted correctly and follow the toy and battery manufacturers' instructions.
3. Do not mix old and new batteries.
4. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.