

27245



**Talking
 Elmo**

BATTERY DIRECTIONS

3 Button cell batteries included. Replace with 3 "AAA" batteries (alkaline recommended).
 Parents: Use a Phillips® screwdriver to replace batteries.
TO REPLACE BATTERIES
 With Phillips® screwdriver, remove screw from battery compartment cover. Swing cover open and discard plastic insert and button cell batteries. Insert 3 "AAA" batteries (alkaline recommended) into compartment as indicated. Swing cover closed and retighten screw.

TALKING ELMO
 UPC PROOF OF PURCHASE

7 54272 27245 9