

27245



# Talking Elmo

**BATTERY DIRECTIONS**

3 Button cell batteries included. Replace with 3 "AAA" batteries (alkaline recommended).  
 Parents: Use a Phillips® screwdriver to replace batteries.  
**TO REPLACE BATTERIES**  
 With Phillips® screwdriver, remove screw from battery compartment cover. Swing cover open and discard plastic insert and button cell batteries. Insert 3 "AAA" batteries (alkaline recommended) into compartment as indicated. Swing cover closed and retighten screw.

TALKING ELMO  
 UPC PROOF OF PURCHASE

7 54272 27245 9