

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this toy does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.



© 1999, 2002 Hasbro. All Rights Reserved.  
® denotes Reg. U.S. Pat. & TM Office.  
00248 P/N 6228910000

**PLAYSKOOL.COM**   
FOR NEW PRODUCTS AND OFFERS  
Questions? Call: 1-800-PLAYSKL

# PLAYSKOOL®

## Talking Cell Phone



**Thank you for buying  
this Playskool®  
product!**

**Includes 2 x 1.5V  
"AA"/R6 batteries.  
Alkaline batteries  
recommended**

**Phillips/cross head  
screwdriver needed for  
battery installation.**

**Ages 2+  
00248**


## Play Instructions

- To "make a call," just press the keys on the keypad (the "phone number" can be any number or combination of keys).
- The phone will wait until you finish entering the number, then you'll hear a ring - and a friend will answer on the other end with a message just for you!
- The phone also has a special "Ring Back" feature! After making a call, wait a few seconds, and the friend will "call you back" with another message!



## To Replace Batteries

Use a Phillips/cross head screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove and discard old batteries. Insert 2 fresh "AA"/LR6 (1.5V) alkaline batteries. Replace door and tighten screw.

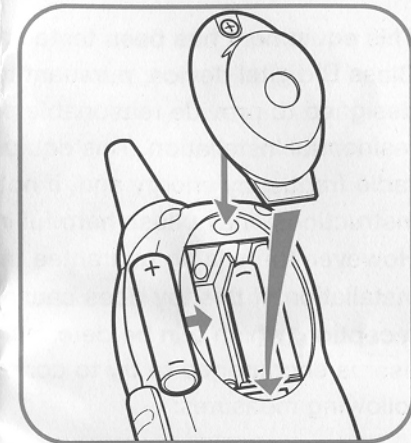

### ⚠ CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Always remove weak or dead batteries from the product.

### IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.  
Batteries should be replaced by an adult.

### ⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**