### 90 - Day Limited Warranty

Tiger Electronics, Inc. warrants to the original consumer purchaser of its Toby Terrier that the product will be free of defects in material or workmanship for 90 days from date of purchase.

During this 90-day warranty period the Toby Terrier will either be repaired or it will be replaced (at our option) without charge to the purchaser, when returned prepaid and insured with proof of date of purchase, to TIGER ELECTRONICS, INC. 980 WOODLANDS PARKWAY, VERNON HILLS, ILLINOIS 60061, USA.

Units returned without proof of the date of purchase, or units returned after the warranty period has expired, will be repaired or replaced (at our option) for a service charge of US\$20.00. Payment must be made by check or money order. This non-warranty service will only be available for one year from the date of purchase. All non-warranty units must be returned postage paid and insured to TIGER ELECTRONICS, INC. 980 WOODLANDS PARKWAY, VERNON HILLS, ILLINOIS 60061, USA.

Tiger Electronics, Inc. will not be liable for loss of use of the product or other incidental or consequential costs, expenses, or damages incurred by the purchaser. Any implied warranties are limited in duration to the 90-day period from the original date of purchase.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state so the foregoing limitations may not apply to you. This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

HOW TO GET SERVICE FROM THE TIGER ELECTRONICS, INC. REPAIR CENTER ON YOUR TOBY TERRIER DURING AND AFTER THE WARRANTY PERIOD. During the warranty period, you may have a defective Toby Terrier replaced at the dealer from which it was purchased. If however, during the warranty period, you choose to obtain repair or replacement from the Tiger Electronics, Inc. Repair Center, please make the arrangements below:

- 1) Pack Toby Terrier carefully in a sturdy box with plenty of packing material all around and tape securely closed.
- 2) Carefully print on the box or carton the following name and address:


TIGER ELECTRONICS, INC.
REPAIR CENTER
980 WOODLANDS PARKWAY,
VERNON HILLS, ILLINOIS 60061, USA.

S

Also, don't forget to show your return address.

3) Put parcel post stamps on the package; insure the package, then mail

After the warranty period, do all of the above PLUS enclose your check or money order for US\$20.00 payment for the repair service.

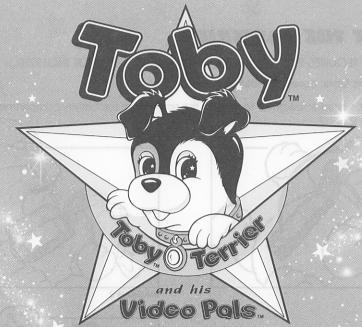

# INSTRUCTION BOOK

YOU AND YOUR TOBY TERRIER PUPPY WILL HAVE LOTS OF FUN TOGETHER!
PLEASE FOLLOW THESE INSTRUCTIONS
TO BE SURE YOU GET THE MOST FUN FROM TOBY TERRIER AND HIS SPECIAL VIDEOTAPE.



© 1993 TIGER ELECTRONICS, INC. 980 Woodlands Parkway, Vernon Hills, Illinois 60061, USA.

### INSERT THE BATTERIES

TOBY TERRIER REQUIRES 2 "C" SIZE AND 1 "9 VOLT" BATTERIES. (NOT INCLUDED.)

1. Pull back the fabric cover (SEE DIAGRAM 1).

2. Use a Phillips head screwdriver to remove the screw from the battery compartment door. (DIAGRAM 2).

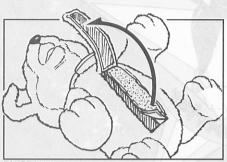


DIAGRAM 1

- 3. Insert batteries, as shown in DIAGRAM 3. Follow (+/-) markings inside compartment to be sure they are inserted correctly.
- 4. Close battery compartment door, replace screw and reseal fabric cover.

(Batteries should be replaced by adult.)





DIAGRAM 3

## HOW TO OPERATE TOBY TERRIER

#### Videotape

The videotape that comes with your Toby Terrier puppy is a standard VHS videotape and can be played in any VHS Videorecorder. The videotape and videorecorder should be operated by an adult.

#### Puppy

1. To activate the Toby Terrier Puppy press the button on the front of his collar (DIAGRAM 4). He will nod his head a few times and will say "Let's play together" to let you know he is ready to operate.

(NOTE: To prevent battery wear, the puppy will automatically turn off if he does not see a video signal in about 2 minutes. If this happens, just press the button on Toby's collar again to reactivate him.)



DIAGRAM 4

2. You and your puppy should sit so that you can both see the television screen clearly. For best performance, Toby should be between 3 and 19 feet in front of the television and facing the screen directly. (SEE **DIAGRAM 5** FOR RANGE IN WHICH TOBY CAN SIT IN RELATION TO THE TELEVISION.) Toby can sit or stand and you can hold him while you watch.

(NOTE: To ensure product's best performance, do not cover the tag on Toby's collar when his videotape is playing.) 921610 501/192 6101 (not/go tuo 16)

3. When Toby can see the screen clearly, the red light on the back of his collar will come on (DIAGRAM 6). Use this light to help you place Toby where he can see the screen best. As long as Toby can see the screen and is receiving a signal from the videotape, the red light will be on.


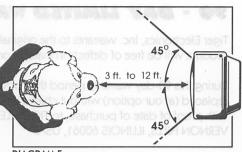


DIAGRAM 5





and his Video Pals. The Adventure "Plus" Videotapes include a special cartridge that lets Toby say even more funny and surprising things! If you have an Adventure "Plus" Videotape, please refer to DIAGRAM 7 to see how to insert the cartridge and follow the arrow marking on the cartridge itself.

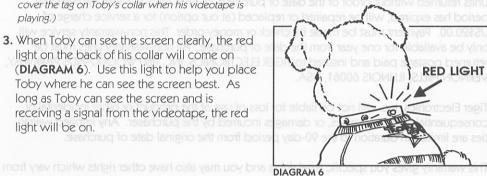