



SEMBLY ASSEMBLY ASSEMBLY ASSEMBLY


Parents: To get things rolling, spread out all the parts and have them ready for assembly. Carefully follow the steps below to prepare the fire truck for action!

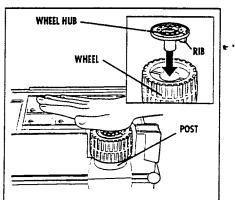

1. Align rib on wheel hub with slot on wheel. Press hub onto wheel. Close truck and turn it on its side. With your palen holding the hub on the wheel, push wheel/hub assembly onto post on truck until it snaps into place. Repeat for remaining 3 wheel hubs and wheels.

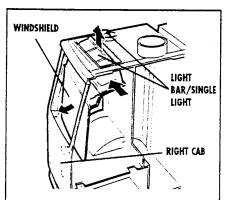


2. (Note: Be sure to do steps 2 and 3 in the order indicated.) Push round light and then light bar on right windshield up through holes in roof of right cab until they snap into place as shown. Align windshield with opening in front cab and fit windshield into place. Repeat for left windshield and cab.

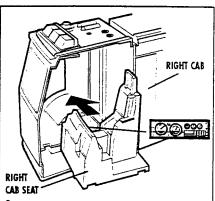


Peel and apply the dashboard label to the dashboard on the right cab seat. Slide right cab seat into right cab until it snaps into position. Repeat for other dashboard label, left cab seat and cab.


ASSEMBLY ASSEMBLY ASSEMBLY

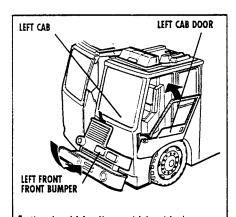


- Align tabs on left front bumper with holes in left cab.
 Snap humper and truck. Repeat for right front humper and cab.
- Snap humper and track, kepeal for right trail number and ta
 Snap hinges on left cab door onto post on left cab. Repeat for right cab door and cab.

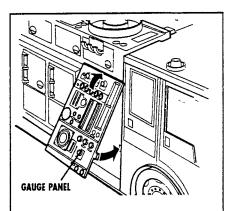


6. Fit top tab on gauge panel into slot on right side of truck. Snap bottom tabs into slots to secure gauge panel.

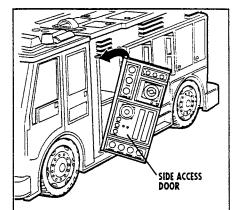


Fit bottom pin on side access door into bottom slot on left side of truck. Slightly bend door to fit top pin into top slot.

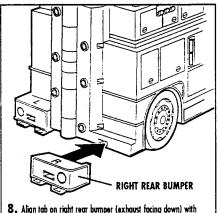


 Align tab on right rear bumper (exhaust facing down) with slot on right rear of truck. Snap bumper onto truck. Repeat for left rear bumper.

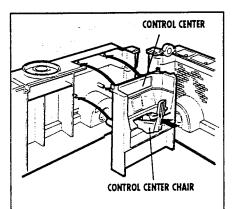


- Align 4 posts on control center with 4 posts on inside of truck (right side rear). Press control center in until it snaps into oloce.
- 10. Snap control center chair into control center as shown.

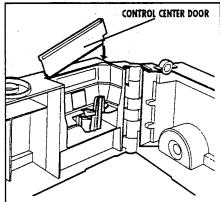


11. Fit recess on one side of control center door over nub on control center top. Slightly bend door to fit other recess over other nub.

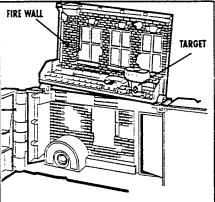

12. Swing the fire wall up so that it rests on top of the truck. Pit target anto fire wall base by squeezing bottom of target and inserting pins on target into slots on fire wall, one side at a time. Repeat for other target.

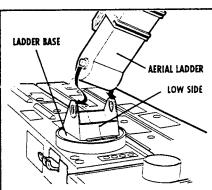



1.3. Position rounded end of cerial ladder over ladder base, so that ladder extends out from the low side of the ladder base as shown. Snop pins on cerial ladder into holes in ladder base. If installed correctly, the ladder, when lowered, will be in a horizontal position (not angled up). Remove ladder and reverse position if installed incorrectly.

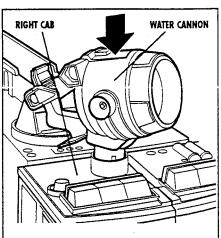



14. Press water cannon into cannon holder on top of right cab.

ASSEMBLY ASSEMBLY ASSEMBLY ASSEMBLY

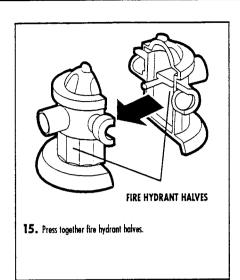

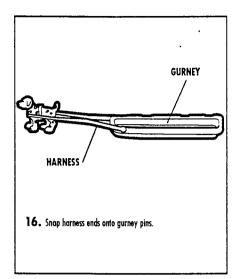


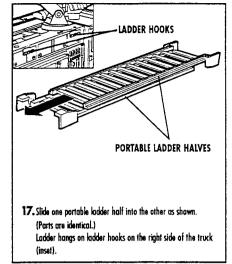

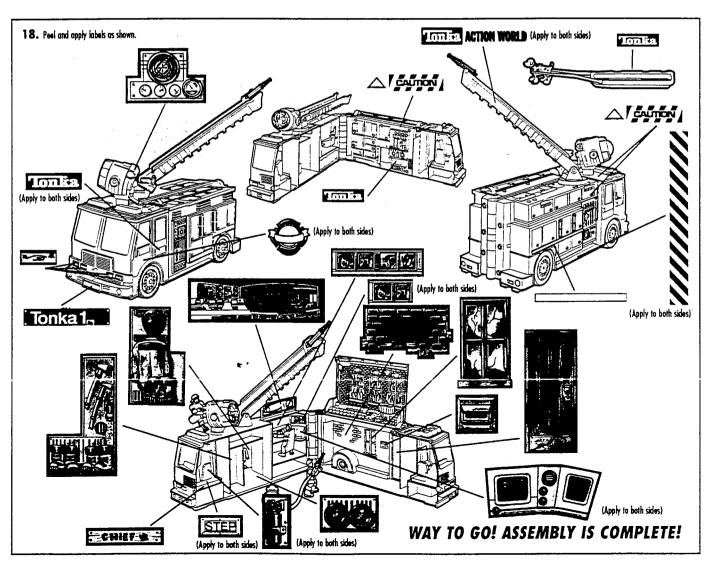


PLAY FEATURES PLAY FEATURES PLAY FEATURES

Kids and Parents: Now you're ready to discover all the fun things you can do with the Action World™ Fire Truck -- inside and out!

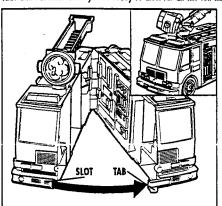


- To play with the truck in the closed position, simply bring both truck halves together. Right and left bumpers will snap together to lock truck closed (see inset).
- To open truck, pull tab out of slot on front bumpers. as shown above.

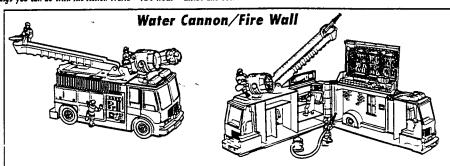


Shoot the "water" ball out of the cannon to put out a fire or hit a target! Here's how:

- 1. Open the truck halves. Swing the fire wall up so that it rests on top of truck. Slide the tab on the outside of the fire wall all the way up while lightby pressing on it until it clicks into position. Flames will now be visible on the card through the windows on the fire wall.
- 2. Insert ball into water cannon, then push the ball in until cannon clicks in loaded position.
- 3. Aim the plunger at the fire wall, and press the button on top of the common...when the ball hits the wall, the card drops down -- making the flames disappear and smoke appear!
- 4. You can also shoot the "water" ball at the collapsible targets on the base of the fire wall (see step 12 for target installation).

 Note about fire wall: For safety purposes, the fire wall is designed to detach if force is applied to it. To reinstall, angle fire wall so that one pin is positioned in front of one bracket, and the other pin in back of the other bracket. Snap front pin into bracket. Then, bring fire wall around so that the other pin is in front of the other bracket and snap that pin into bracket.

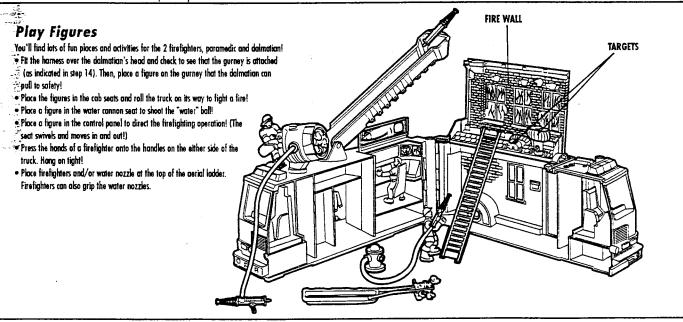



Water Hoses

Connect a water hase to the ports on the fire hydrant and water nozzle to put out fixes! You can also attach the hoses to ports on the water cannon, gauge panel and fire wall.

@1997 Hasbro, Inc., Pawtucket, Rhode Island 02862 USA. All Rights Reserved.

ASSEMBLED IN MEXICO FROM U.S. COMPONENTS. FIGURES AND DOG MADE IN CHINA. ® denotes Reg. U.S. Pat. & TM Office.

90182 P/N 47021300

STORAGE

After play, you can easily store all the accessories!

- · Store portable ladder on ladder hooks on right side of truck.
- · Store hoses on hose racks on left side of truck.
- Store all other accessories in the open areas inside the truck.
- Store gurney in bottom compartment section of control center (fit tab on compartment through slot in gurney.)

