# **AXLETM**

## **⚠** CAUTION:

Do not aim at eyes or face. To Avoid Injury: Use only balls designed for this product. Do not modify balls or ball launcher.


Batteries included. Requires 2 x 1.5v "AA" or R6 size batteries. Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to replace batteries.

AGES 44-90695

Before you play with these toys, remove wire tie attaching helicopter to truck.


### TO DEPLOY HELICOPTER

- 1. Move T-Shift to open vehicle and reveal helicopter.
- Remove helicopter from helicopter pad.

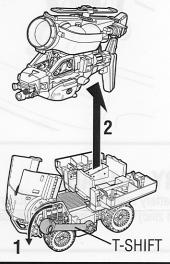


### **TO REPLACE HELICOPTER**


- 1. Place helicopter on helicopter pad.
- 2. Move T-Shift to close helicopter in vehicle.

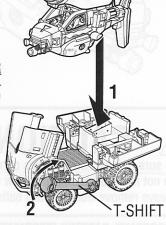

#### LAUNCHER

- 1. Load balls into hopper.
- 2. Pull back end of launcher till you hear a "click".
- 3. Press trigger to launch balls and hear sounds.

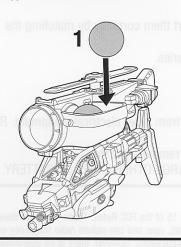

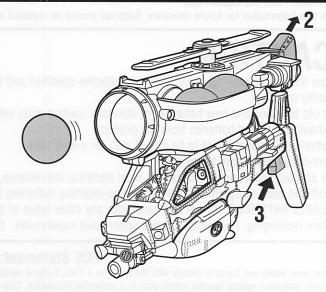

#### **ELECTRONIC PHRASES & CHOPPER SPINNING MOTION**

You activate sounds and phrases when you play with the vehicle. You hear sounds when you:


- · Press button on truck.
- Pull trigger to launch balls.
- · Pull lever on helicopter.
- Pull trigger to spin helicopter blade.

#### The phrases are:

- "Blastin' fireballs!"
- "Time to blast the fire!"
- "Let's go to the rescue!"
- "That fire is toast!"
- "Blast that fire!"
- "What a shot!"
- "That hits the target!"
- "Fire storm!"


### PROPELLER SPIN

Move lever to make propeller spin and hear electronic sounds.

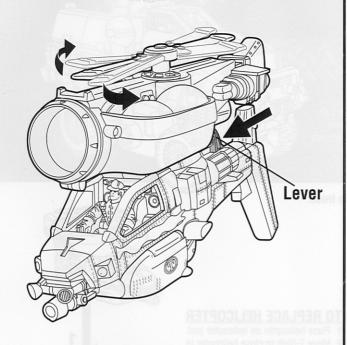

### TO REPLACE BATTERIES

Use a Phillips/crosshead screwdriver (not included) to loosen screw securing battery compartment door and remove door (screw remains attached to door). Remove and discard batteries. Insert 2 x 1.5v "AA" or R6 size batteries. Alkaline batteries recommended. Replace battery door and tighten screw with screwdriver. See diagrams.

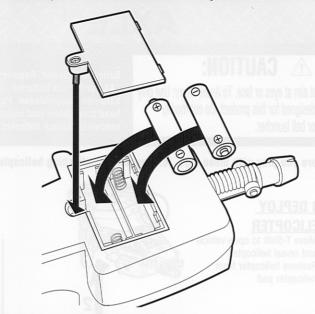

## /!\

# **CAUTION:** TO AVOID BATTERY LEAKAGE

- 1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
- 2. Do not mix old batteries and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
- 3. Always remove weak or dead batteries from the product.

#### IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.



# **CAUTION:**

- 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and polarity markings.
- 2. Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
- 3. Remove exhausted or dead batteries from the product.
- 4. Remove batteries if product is not to be played with for a long time.
- 5. Do not short-circuit the supply terminals.
- 6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERY.

#### **FCC Statement:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- · Consult the dealer or an experienced radio/TV technician for help.



Product and colors may vary.

© 2004 Hasbro. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office.

P/N: 6333040000