 


Tonka®

AGES 3+
90509

! CAUTION: Not recommended for children under age 3. Read all instructions before operating. Avoid hitting people, pets, or furniture. Do not pick up moving vehicle. Keep hair, hands, and clothing away from vehicle when power switch is turned ON. Remove batteries and transmitter batteries when vehicle is stored. AVOID TIRE CONTACT ON PAINTED OR VARNISHED SURFACES.

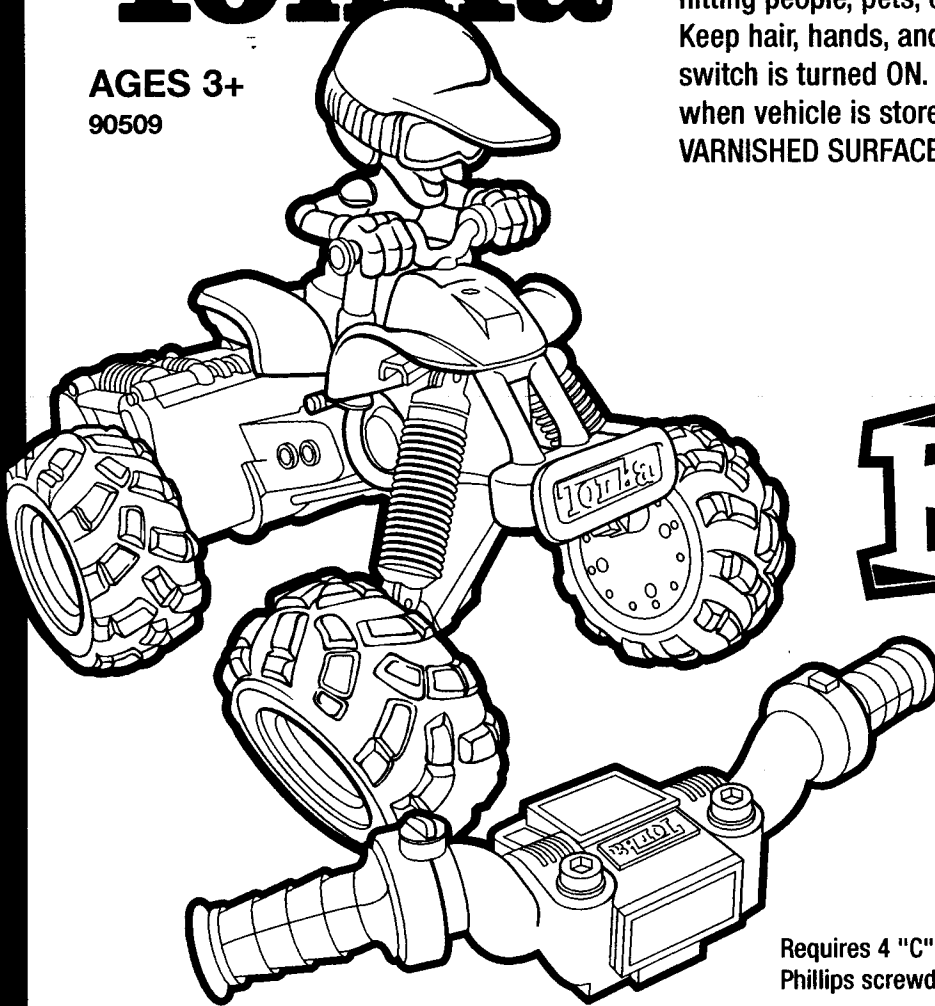 


RADIO CONTROL BOBBLE BOYS ATV

Requires 4 "C" batteries and 4 "AA" alkaline batteries (not included).
Phillips screwdriver (not included) required for battery replacement.


TO REPLACE VEHICLE BATTERIES

Use a Phillips screwdriver to loosen screw in battery compartment door at back of vehicle, and remove door. Insert 4 "C" alkaline batteries as shown. Remove old batteries. Replace door and tighten screw.

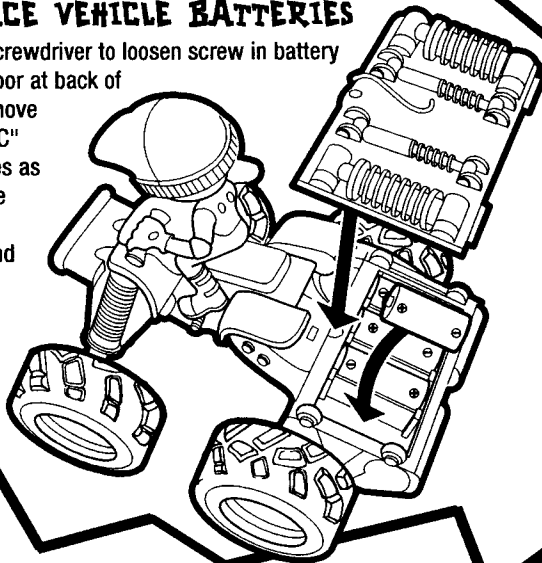

TO REPLACE CONTROLLER BATTERIES

 Use a Phillips screwdriver to loosen screw in battery compartment door, and remove door. Remove old batteries. Insert 4 "AA" alkaline batteries as shown. Replace door and tighten screw.

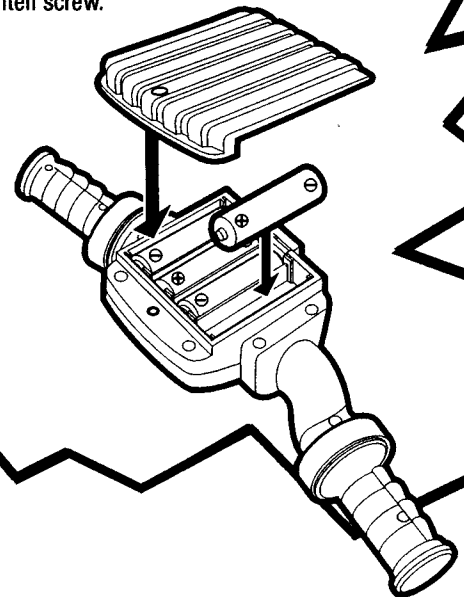

! CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

Move Vehicle switch to ON position.

- Vehicle "ON" indicator light turns on.

TO OPERATE CONTROLLER

 
- Press start button to turn controller ON.
- Switch sounds ON or OFF.
- Hold controller handlebars with one hand on each hand grip.

DIRECTIONAL CONTROLS

FORWARD: Twist right hand grip toward you.

REVERSE: Twist right hand grip away from you. This will turn the vehicle. Twist right hand grip toward you to go in a new forward direction.

WHEELIE-POP: While the vehicle is travelling in reverse, quickly twist the right hand grip toward you.

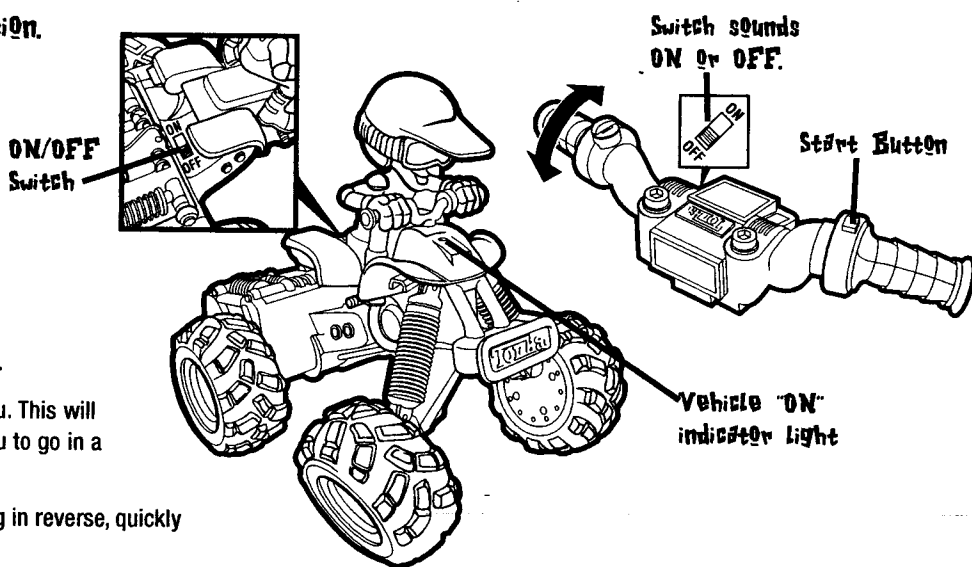

- (1) After approximately 20 seconds with no play, the controller will turn off automatically. Vehicle shuts off automatically after 3 minutes of no play. Shutoff is indicated by the vehicle light switching off.
- (2) The controller can be turned on again by pressing the start button.
- (3) Once the vehicle turns off, the vehicle's power switch must ALWAYS be turned OFF then back ON to make the vehicle run again.

Proper Operation of Your Vehicle

- 1) Best operation of the vehicle is on a flat textured surface.
- 2) Always operate your vehicle within a range of 25 feet from you.
- 3) Always operate your vehicle on dry surfaces, away from cars and other full-sized vehicles. Avoid hitting people, pets, furniture, or walls.
- 4) Avoid water or damp locations, which may damage the vehicle's electronics. If your vehicle ACCIDENTALLY gets wet and stops running, let it dry overnight before trying to run it again.
- 5) Avoid operating around CB radios, baby monitors, cordless phones, electrical appliances, electric base-board heaters, high voltage electrical wires, and large steel-reinforced concrete buildings – all of which may cause interference.
- 6) Avoid running your vehicle and another vehicle on the same frequency.

Proper Storage of Vehicle and Controller:

- 1) Always store your vehicle in a cool, dry place. Do not store on painted or varnished surfaces.
- 2) Always turn main switch OFF after play and remove batteries.
- 3) Avoid storing in water or damp locations, which may damage the vehicle's electronics.

Guide for troubleshooting – Check the points below if you are experiencing difficulty.

SYMPTOM	PROBABLE CAUSE	CORRECTION
Vehicle runs slowly or will not run.	<ul style="list-style-type: none"> • Main vehicle switch not ON • Weak vehicle batteries. • Weak controller batteries. 	<ul style="list-style-type: none"> • Check vehicle switch, must be ON or reset. • Replace with fresh batteries. • Replace with fresh batteries.
Erratic operation or only short range possible.	Radio interference likely.	Change location (See no. 5, "Proper Operation of Your Vehicle")
Short vehicle battery life.	Continuous use on rough terrain or steep hills.	Use on less severe terrain (See no. 1, "Proper Operation of Your Vehicle")

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including any interference that may cause undesired operation. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



© 2002 Hasbro. All Rights Reserved.
 ® denotes Reg. U.S. Pat. & TM Office.
 P/N 6161280000