

Tonka®

AGES 3 & UP

CHUCK

 
MY TALKIN' TRUCK™

VOICE-ACTIVATED MOTORIZED, TALKING TRUCK

Chuck My Talkin' Truck™ Vehicle comes with three "C" batteries installed and has four interactive play features. He also responds to the sound of your voice. Call him and he rolls forward 5 ft.



To replace batteries.

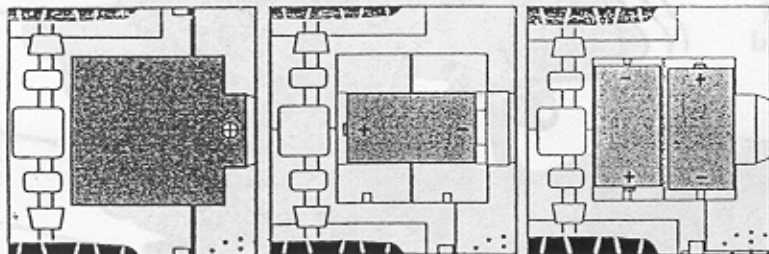


Loosen screw and remove battery compartment door from bottom of vehicle.

Install three "C" batteries into vehicle as shown. Replace battery compartment door and tighten screw.

CAUTION: To avoid battery leakage, (1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturer's instructions. (2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable batteries. (3) Always remove exhausted or dead batteries from the product.

 
Switch operation.

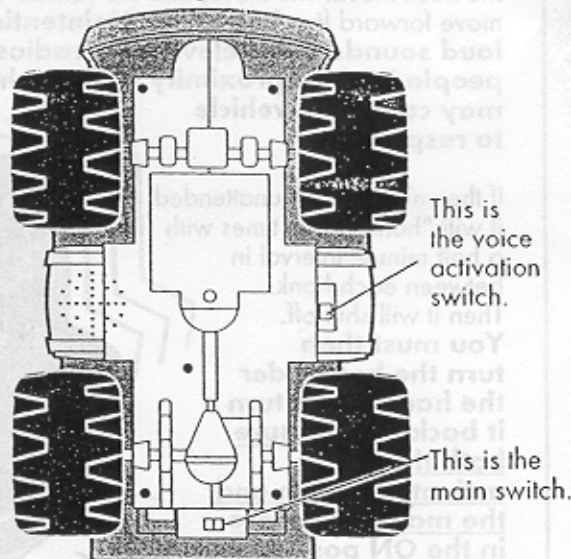


This device with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including any interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Consult the dealer or experienced radio/TV technician for help.

 Interactive play features

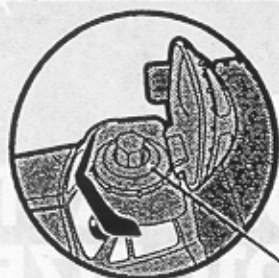

 Lift the hard hat and rotate the bolt to hear a phrase. Rotate the bolt again to hear another phrase. The truck bed will wiggle and the truck mouth will move.

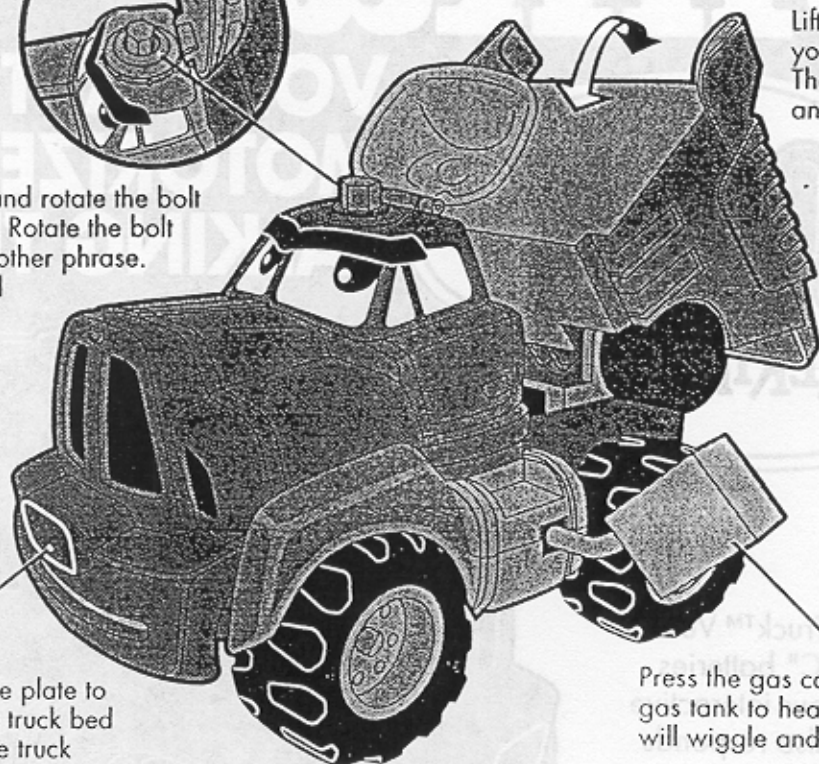

Press on the license plate to hear a phrase. The truck bed will wiggle and the truck mouth will move.

Press the gas can into the button on the gas tank to hear a phrase. The truck bed will wiggle and the truck mouth will move.

Lift the truck bed and you will hear a phrase. The truck bed will wiggle and the truck mouth will move.

Voice activation play

Be sure you have turned ON the voice activation switch. When you call to the vehicle, you will hear the engine roar, the truck bed will wiggle, the truck mouth will move, and the vehicle will move forward five feet. **NOTE: Unintentional loud sounds from televisions, radios and people in close proximity to the vehicle may cause the vehicle to respond.**

If the vehicle is left unattended it will "honk" three times with a half minute interval in between each honk. Then it will shut off.

You must then turn the bolt under the hard hat to turn it back on. Be sure both the voice activated switch and the main switch are in the ON position.

