


INSTRUCTIONS

AGES 5 & UP

THE TRANSFORMERS IN DISGUISE GENERATION 2

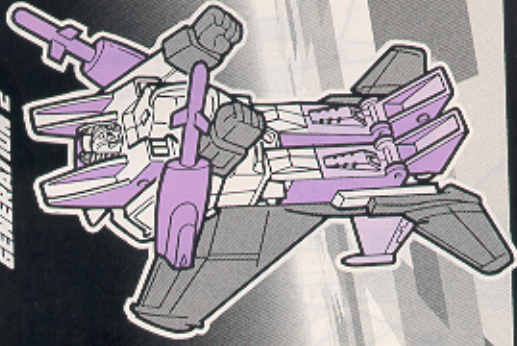


EVIL DECEPTICON® STARSCREAM™

SET INCLUDES:

Includes "Starscream" plane, 4 tail fins, landing gear, 2 fists, 2 spring fired missile launchers, 3 missiles, sound/light energy unit, label sheet and instructions.

Carefully remove pieces from plastic frames.

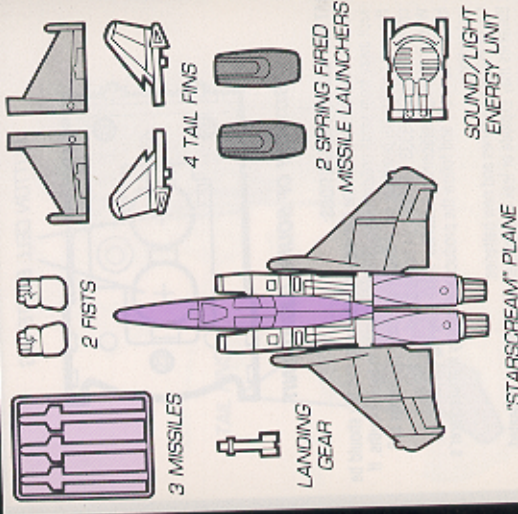

START


Enter the world of Transformers®, where the new generation of Heroic Autobots® and Evil Decepticons® battle head in a world where things are not as they seem!

Caution: Do not point missiles at eyes or face.

NOTE: Adult supervision may be necessary for younger children.

SOUND/LIGHT
ENERGY UNIT

TAIL FINS

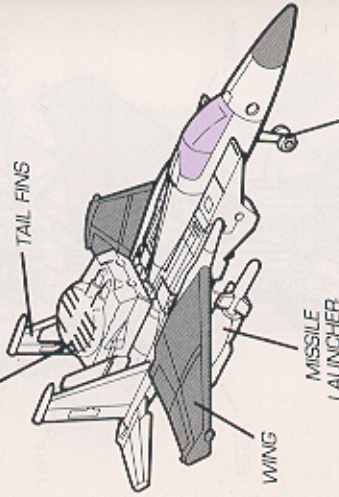

WING


MISSILE
LAUNCHER

LANDING
GEAR

STEP 1


To make the robot, remove all the pieces that attach to the plane body. From underneath, push up center section of body. Rotate the two pieces of the fuselage to the sides of the plane.

NOTE: Excessive force is not necessary.

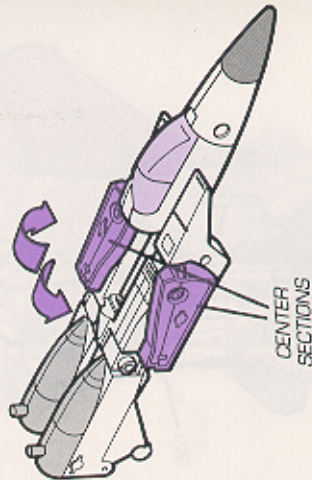


STEP 2

Fold nose down. Push it through the hole in the middle of the plane. Pull nose up. Fold nose back to reveal robot's head (SEE FIG. B). Pull robot's feet down.

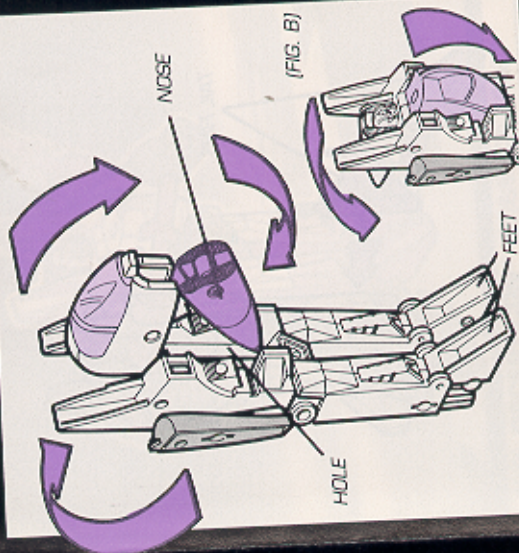


STEP 3

Attach the four tail fins onto robot's ankles as shown.

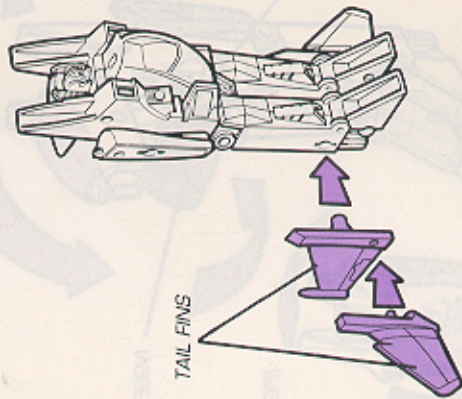


STEP 4

Turn black tabs on sides of robot's waist to the rear of the robot. Attach wings with narrow ends facing down.

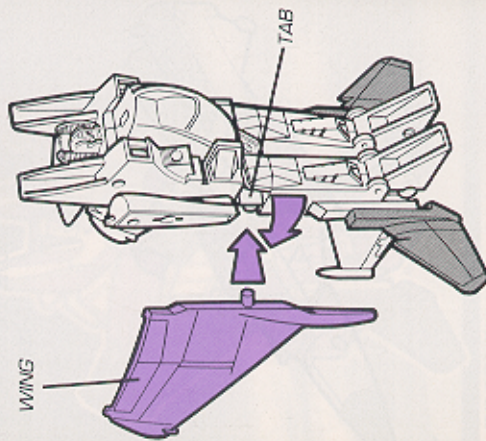

STEP 5


Swing arms up. Attach fists. Missile launchers can be removed from wings and attached into sides of arms. Fit missiles into launchers and lock in place. To fire, press trigger.

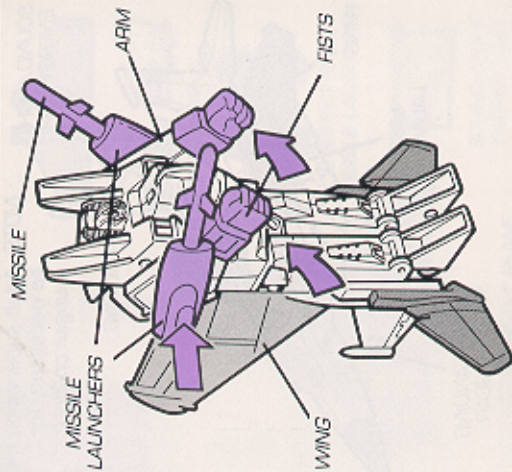

BATTERY REPLACEMENT

To replace batteries, use a Phillips® screwdriver (not included) to loosen screw in battery cover hatch on bottom of sound/light unit, remove battery cover hatch. Remove old batteries and replace with two A-76 or two L1154 button cell batteries. Replace battery cover hatch.

BUTTON CELL BATTERIES

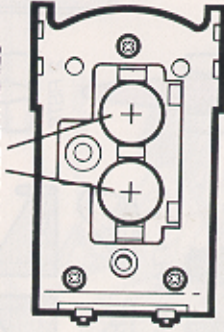

BOTTOM OF SOUND/LIGHT UNIT

BATTERY SAFETY PRECAUTIONS:

1. As with all small batteries, the batteries included with this toy should be kept away from small children who still put objects in their mouths. If they are swallowed, promptly see a doctor and have the doctor call collect (202) 625-3333, available 24 hours a day.
2. When installing replacement batteries, make sure the batteries are inserted correctly and follow the product and battery manufacturer's instructions.
3. Never mix old batteries and new batteries.
4. Batteries may explode or leak if recharged, disassembled or heated.

FINISH

When converting robot back to plane, reverse the order of the instructions.

Peel and apply labels as shown.

