


Includes 2 x 1.5V "A76"/LR44 button cell batteries. Phillips/cross-head screwdriver (not included) required to replace batteries.

NOTE: Some parts are made to detach if excessive force is applied and are designed to be re-attached if separation does occur. Adult supervision may be necessary for younger children.

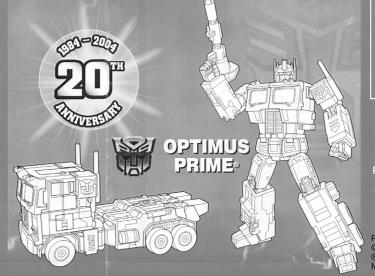

WARNING:

CHOKING HAZARD-Small parts. Not for children under 3 years.


AGE: 5+ 80500


P/N 6318450000





transformers.com


Product and colors may vary.
© 2003 Hasbro. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.
Manufactured under license from Takara Co., Ltd.

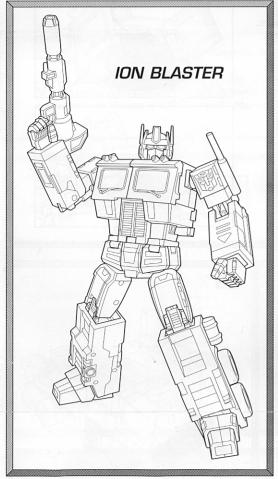

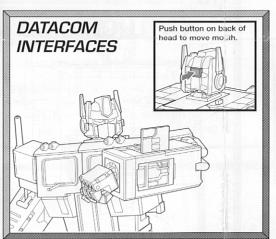


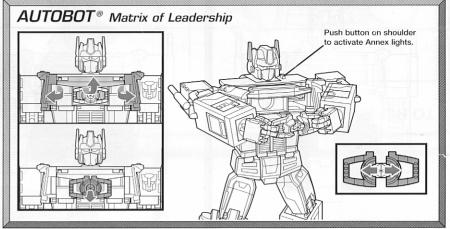


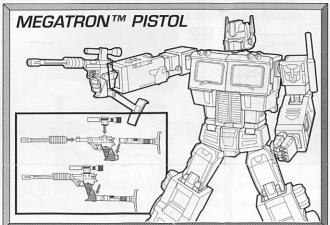


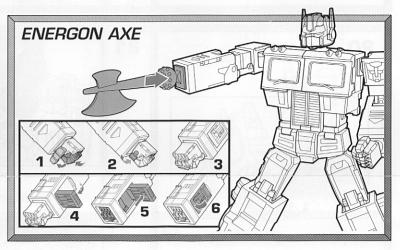



CHANGING TO VEHICLE

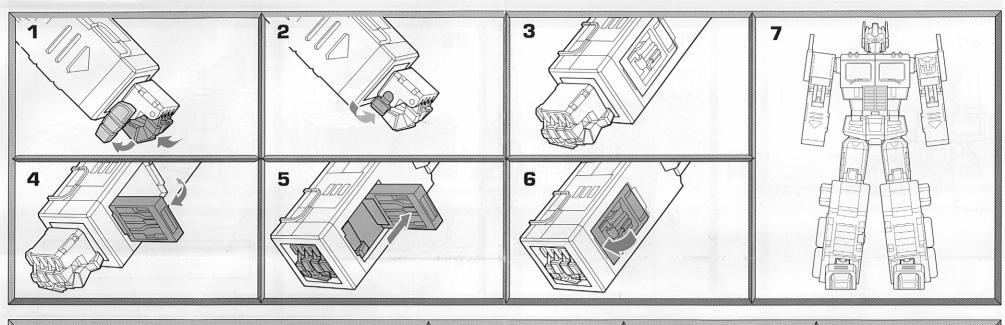


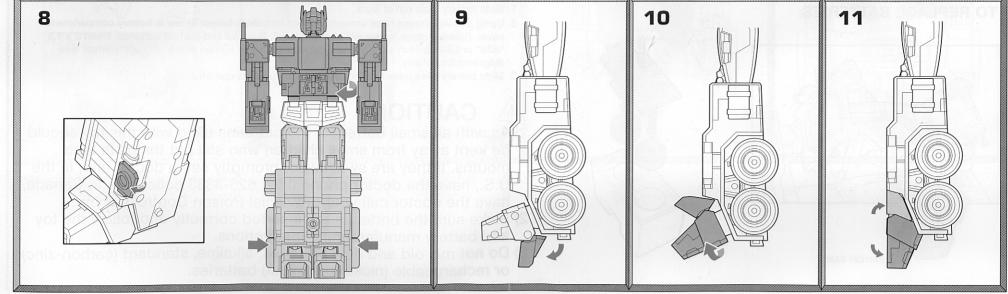

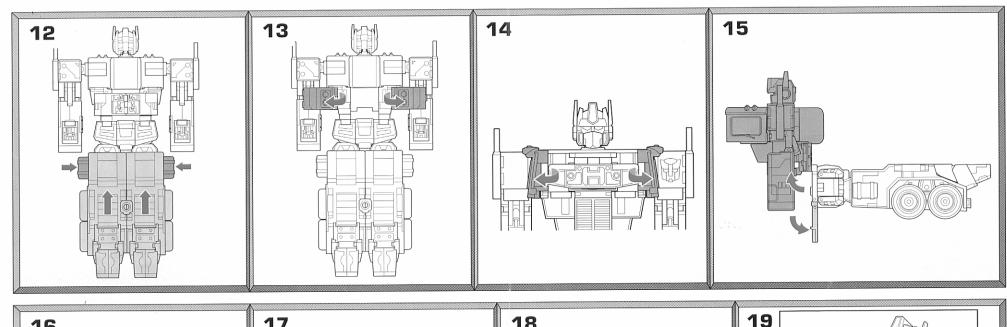


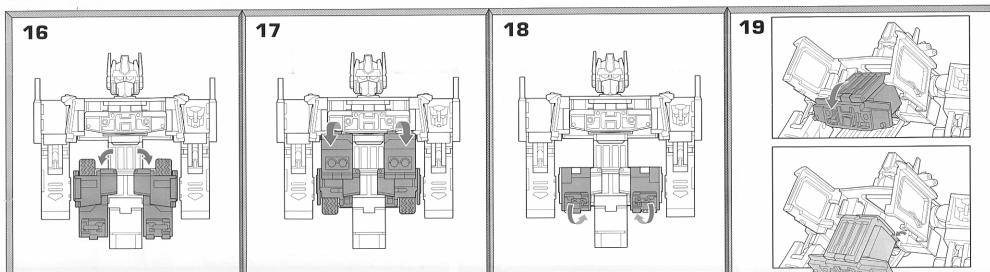

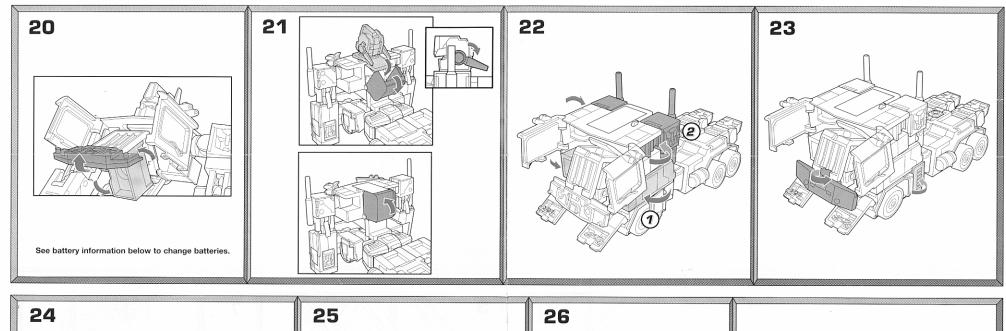

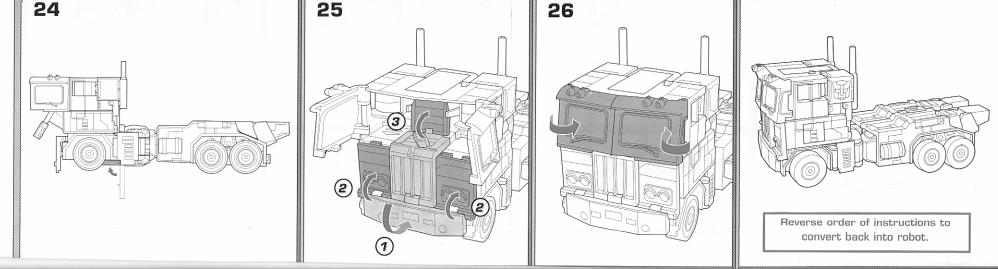

TO REPLACE BATTERIES:

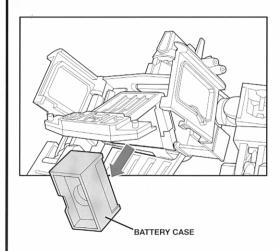



- 1. Slide battery case out of slots.
- 2. Using a Phillips/cross head screwdriver (not included), loosen screw in battery compartment cover. Remove cover (screw will stay attached). Remove and discard batteries. Insert 2 x 1.5 "A76" or LR44 button cell batteries. Replace door and tighten screw with screwdriver. See diagrams for polarity.
- 3. Slide battery case back into slots. Check Annex lights operation.

<u>!</u>

CAUTION:

- 1) As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and, in the U.S., have the doctor phone (202) 625-3333 collect, or, in Canada, have the doctor call your provincial Poison Control Center.
- 2) Make sure the batteries are inserted correctly and follow the toy and battery manufacturers' instructions.
- 3) Do not mix old and new batteries, alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.