

For Ages 3 & Up
Model 9-001-1



ALPHABET DISCOVERY DISCS™

INSTRUCTIONS



 
HOW YOUR DISCOVERY DISCS WORK:

Discovery Discs teach your child the basics of the alphabet or counting depending on the unit purchased. The unit works by reading the 5 different discs. It is **VERY IMPORTANT** to have the discs securely in the unit so that they may be read properly. **PLEASE NOTE:** Batteries are included with the unit.


TURNING UNIT ON / OFF:

There is not an on/off switch on the unit. To activate the unit, press the **PLAY** button. Then you can play in either of the modes, "**PLAY**" or "**FIND**". The unit automatically shuts off after 2 minutes when the buttons are not being pushed.

TO INSERT DISCS INTO UNIT:

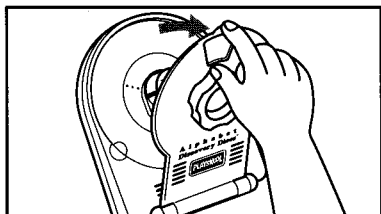


 1. Open the front lid of the unit by pulling on the small lip at the top.

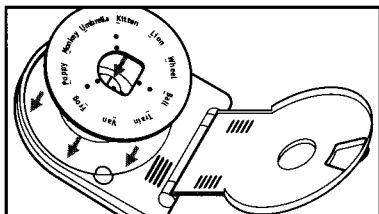


2. Insert the disc so that it fits securely in the unit. The shape of the disc corresponds to the unit to assure a secure fit.

 3. Close the lid and snap it closed. You will hear a click to assure you the unit is closed.

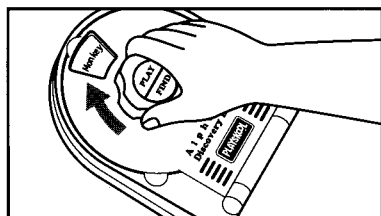

 4. Now turn the knob clockwise to find different images in the viewing area. Each disc has 10 images and there are 5 discs included with the unit.

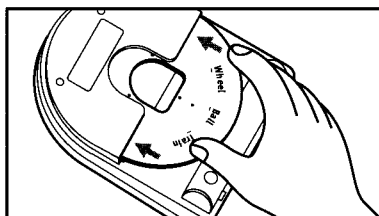

5. There is a storage place on the back of the unit for all of the discs.

 
HOW TO PLAY:

There are two different **MODES OF PLAY** for the Discovery Discs unit.

1. PLAY MODE:

When you press the "**PLAY**" button on the unit, it identifies the picture in the viewing area. To learn about the other pictures on the disc you turn the knob clockwise and scroll to the different pictures and press "**PLAY**".


For instance, if you scroll to the picture with an apple and the letters "**Aa**" in the viewing area and press "**PLAY**", the unit will say, "**A is for Apple**".

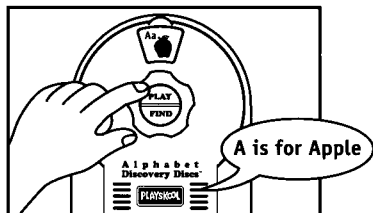

2. FIND MODE:

When you press the "FIND" button on the unit, it prompts the child to scroll to a specific image on the disc.

 
For instance, press "FIND" and the unit says "FIND the letter L". The child turns the knob clockwise until the picture with an "L" is in the viewing area. Then the child presses "PLAY" and it will identify the image, "L is for Lion".

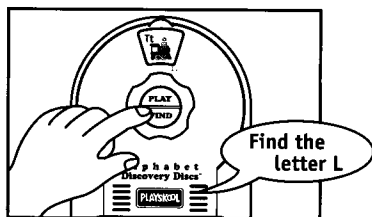


If the child identifies an incorrect picture in the viewing area. The unit will repeat the "FIND THE" question to prompt the child to find the correct image.

TO REPLACE BATTERIES:

 If Discovery Discs speeds up, acts erratically or stops working, check for proper battery connection. Batteries may need to be replaced.

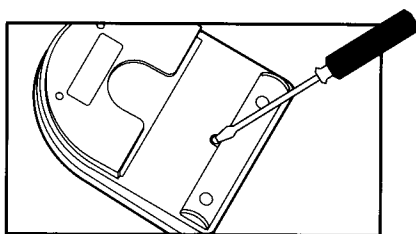

 1. Using a Phillips® screwdriver, loosen screw in battery compartment door, and remove door.

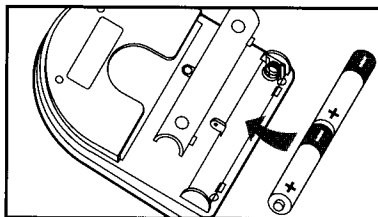

2. Insert 2 "AA" / LR6 alkaline batteries according to the markings in the battery compartment.

3. Replace the battery door and tighten screw.
4. Batteries installation should be done by an adult.

CAUTION

To avoid battery leakage:

- 1) Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable batteries.
- 3) Always remove exhausted or dead batteries from the product.

Requires 2 "AA" / LR6 batteries (included).

Alkaline batteries are recommended. Do not use rechargeable batteries. Not suitable for children under 36 months. May contain small parts.

© 1995 Hasbro, Inc. All rights reserved.

PLAYSKOOL and the PLAYSKOOL logo are trademarks of Hasbro, Inc.

This product is distributed by Tiger Electronics, Inc. under license from Hasbro, Inc.

© 1995 & TM Tiger Electronics, Inc.

980 Woodlands Parkway, Vernon Hills, Illinois 60061 USA.

Printed in Hong Kong

90-DAY LIMITED WARRANTY

Tiger Electronics, Inc. (TEI) warrants to the original consumer purchaser of any of its electronic games or toys that the product will be free of defects in material or workmanship for 90 days from the date of original purchase.

During this 90-day warranty period, the product will either be repaired or replaced (at our option) without charge to the purchaser, when returned either to the dealer with proof of the date of purchase or to TEI when returned prepaid and insured with proof of date of purchase.

Product returned to TEI without original receipt or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at our option) for a service charge of US\$12.00. Make check or money order payable to Tiger Electronics, Inc.

TEI will not be liable for loss of use of the product or other incidental or consequential costs, expenses, or damages incurred by the purchaser. Any implied warranties are limited in duration to the 90-day period from the original date of purchase.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Inc. Repair Dept.
980 Woodlands Parkway
Vernon Hills, Illinois 60061 U.S.A.

1. Pack the product carefully in the original box or use a good/quality carton with packing materials.
2. Include a letter with a complete description of the defect, a check if product is beyond the 90/day warranty, and your printed name, address and telephone number.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state so the foregoing limitations may not apply to you. This warranty does not cover damages resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

