

IMPORTANT! PLEASE READ INSTRUCTIONS BEFORE USING YOUR ALPHIE™ BOOSTER PACK.

AGES
3+



Alphie™ Booster Pack

 
Exploring the World

Includes:
25 double-sided
cards, a cartridge
and instructions.


Before you begin,
make sure your ALPHIE
toy is turned on.

1. Insert cartridge with
label facing up.
2. Insert card.
3. Press the button on
his head and follow
his suggestions.


1

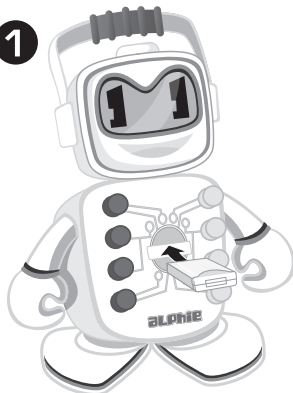

2

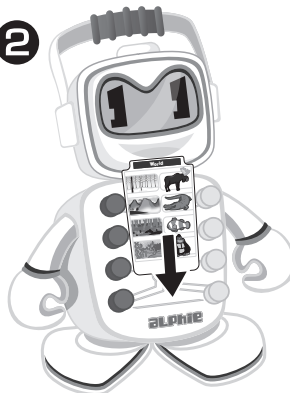 

3

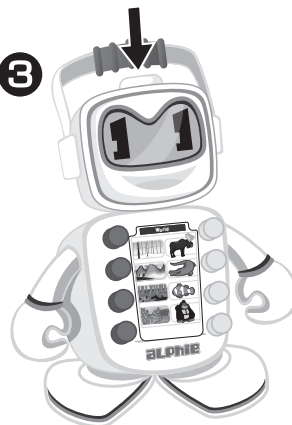 

NOTE: Remove card by pulling straight up. Do not pull toward you. Toy may not be able to read bent cards.

 
ALPHIE BOOSTER PACKS WILL ONLY WORK WITH AN ALPHIE TOY PURCHASED IN THE SAME COUNTRY.

Alphie™ Troubleshooting Guide

ALPHIE toy does not seem to be reading the card, or responds with, "Hmm...I don't know that card. I think I need a matching memory cartridge."

Pull straight up to remove the booster card and make sure you have the correct memory cartridge inserted. Then, reinsert the booster card straight down.

If you are sure that you have the correct memory card and corresponding cartridge inserted, and the toy still does not respond, turn the power switch to the "O" position to reset. Turn the toy back on and it should now be ready to play.

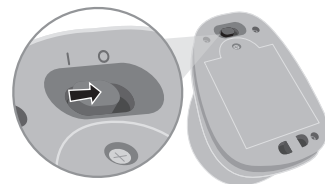

(Bottom of foot view)

Your ALPHIE toy is not recognizing the correct answer.

Hold the toy's hand while firmly pressing on the answer button. Sometimes, the buttons need to be pressed a little harder. Once you've played with your ALPHIE toy for a while, you should get the hang of it.



© 2010 Hasbro. All Rights Reserved.

™ & ® denote U.S. Trademarks.

29070/19524 Asst.

P/N 7150070000

