



CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

FCC STATEMENT

8. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

7. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

6. Do not short-circuit the supply terminals.

5. Remove batteries if product is not to be played with for a long time.

4. Remove exhausted or dead batteries from the product.

3. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.

+ and - polarity markings.


2. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the

outside the United States, have the doctor call your local poison control center.

1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside

CAUTION:

IMPORTANT: BATTERY INFORMATION


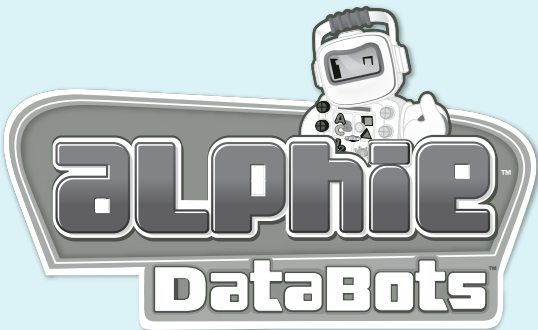


**AGES
3+**

Deci-Bot™

x3
1.5V AAA or R03 size
**BATTERIES
INCLUDED**

Replace with 3 x 1.5V "AAA" or R03 size batteries. Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to replace batteries.

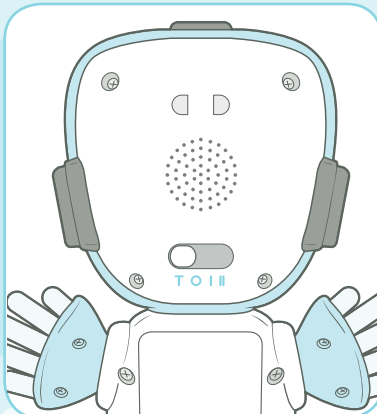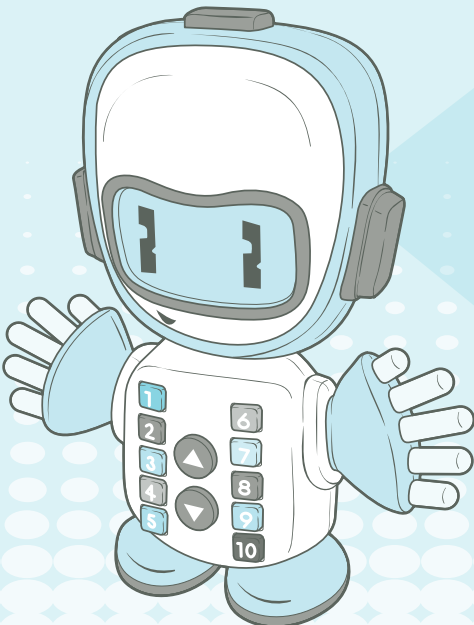


- T** - Try Me
- O** - Off
- I** - Explore
- ||** - Find It

BEFORE YOU BEGIN



I come in TRY ME mode. Turn me around and slide the switch on the back of my head to one of the PLAY modes. Now we're ready to start counting!

PLAY MODES

Explore Mode

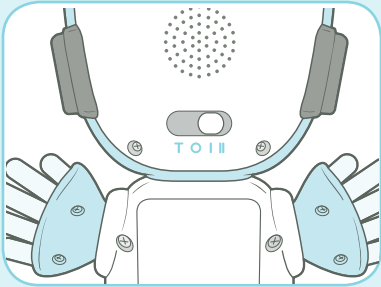

Slide the switch on my back to the Explore Mode position.

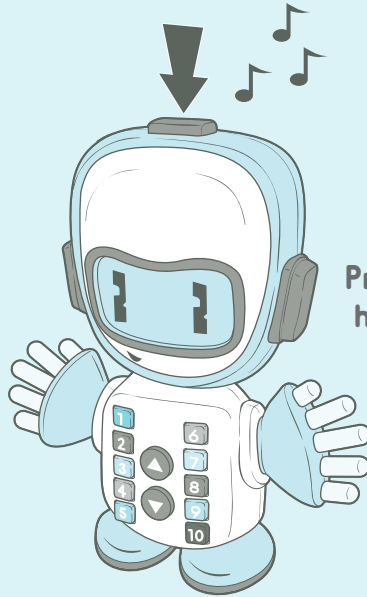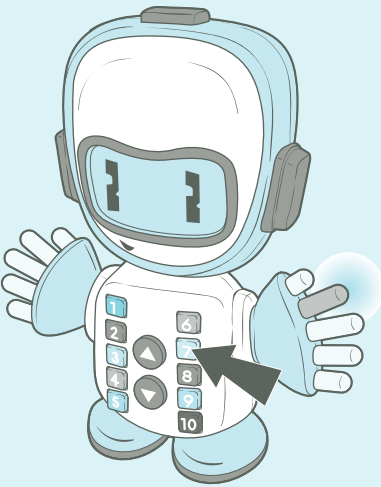


Press the button on my head to hear me sing my counting song.

Press any number key. I'll say that number as I light up the same number of fingers.

Press the ▲ button and I'll add one number to the previous number.

Press the ▼ button and I'll subtract one number from the previous number.

Find It Mode

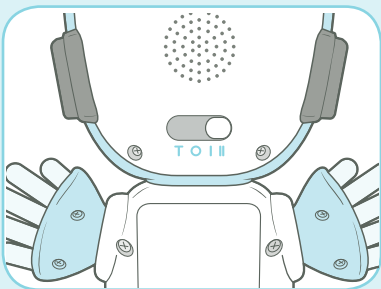

Slide the switch to the Find It mode position. I'll start asking you questions like, "How many fingers do I have lit up?" Complete that level and advance to the next one. The questions will become more challenging as you advance levels!

If you want me to repeat the question, just press the button on my head.

SLEEP MODE

If you don't play with me for about 90 seconds, I will fall asleep. Push any button to wake me up.

TO REPLACE BATTERIES

Loosen screw in battery compartment door with a Phillips/cross head screwdriver (not included). Remove door (screw stays attached to cover). Remove and discard batteries. Insert fresh batteries as shown. Replace door, and tighten screw.

